Rinnai®

Non-Condensing Tankless Water Heater Service Manual

This manual provides service information for the models below. This table cross references each model to the applicable page number for internal component replacement instructions.

MODELS	DIAGNOSTICS	WIRE DIAGRAM	GAS CONTROL	FAN	PC BOARD	WATER FLOW CONTROL	HEAT EXCHANGER
R/C42e, R/C53e	13	29	41	50	56	62	73
R70e, R/C85e(PLUS)	15	30	43	51	58	66	76
R/C53i(PLUS), R/C85i(PLUS)	15	31	43	52	58	68	80
R/C98e(ASME)	17	32	45	53	60	70	84
R/C98i(ASME)	17	32	45	53	60	70	86
V53e, R63LSe	19	33	41	50	57	64	73
R50LSi, R75LSi-VA	21	34	43	52	58	66	80
R63LSe2, R75LSe-VA	21	34	43	51	58	66	76
R94LSe-VA	21	34	43	51	58	66	76
R94LSi-VA	21	34	43	52	58	66	80
R75LSe-VB	23	35	47	51	58	66	76
R75LSi-VB	23	35	47	52	58	66	80
R94LSe-VB	23	35	47	51	58	66	76
R94LSi-VB	23	35	47	52	58	66	80
V53i	23	36	43	52	58	66	80
R98LSe(ASME)	25	37	45	53	60	70	84
R98LSi(ASME)	25	37	45	53	60	70	86
RL94i-VC	27	38	48	54	61	71	89
RL94e-VC	27	38	48	54	61	71	95
RL75i-VC	27	38	48	54	61	71	89
RL75e-VC	27	38	48	54	61	71	95
V75i	27	38	48	54	61	71	89
V75e	27	38	48	54	61	71	95
V65i	27	38	48	54	61	71	89
V65e	27	38	48	54	61	71	95

Key to Trade Names in this Manual:

R/C

Indicates both the residential and commercial versions. R/C42e includes R42e and C42e.

(PLUS)

Indicates that the Designer Plus models are included. R/C85ePLUS includes R85e, C85e, and R85ePLUS. On the side of the water heater, the trade name includes a "D", as in R85De.

(ASME)

Indicates that the ASME models are included. R98LSe(ASME) includes the R98LSe and R98LSeASME.

-VA,-VB, -VC

The trade names R75LSe, R75LSi, R94LSe, and R94LSi have been given to both the VA and VB series of water heaters. The trade name of RL75e, RL75i, RL94e, and RL94i have been given to both VB and VC series of water heaters Pay close attention to the particular model number when referencing electrical diagnostics, wire diagrams, gas pressures, replacement instructions, and for parts. When there is a difference –VA, –VB, –VC will be specified.

Some of the trade names for models were changed to indicate that their cartons included isolation valves and a pressure relief valve. For service and repair purposes the table below shows the equivalent models.

Model with valves in carton	Equivalent Model
RV53e	V53e
RV53i	V53i
RL75e	R75LSe-VB or RL75e-VC
RL75i	R75LSi-VB or RL75i-VC
RL94e	R94LSe-VB or RL94e-VC
RL94i	R94LSi-VB or RL94i-VC

Table of Contents

General Information 3

Safety Behaviors and Practices for Service Technicians 4

Specifications 5-8

Diagnostic Codes 9-11

Safety Warnings 12

Electrical Diagnostic Points

R/C42e, R/C53e, ... 13, 14

R70e, R/C85e(PLUS), R/C53i(PLUS), R/C85i(PLUS) 15, 16

R/C98e(ASME), R/C98i(ASME) 17, 18

V53e, R63LSe 19, 20

R50LSi, R63LSe2, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA 21, 22

V53i, R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB 23, 24

R98LSe(ASME), R98LSi(ASME) 25, 26

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e 27, 28

Wire Diagrams

R/C42e, R/C53e 29

R70e, R/C85e(PLUS) 30

R/C53i(PLUS), R/C85i(PLUS) 31

R/C98e(ASME), R/C98i(ASME) 32

V53e, R63LSe 33

R50LSi, R63LSe2, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA 34

R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB 35

V53i 36

R98LSe(ASME), R98LSi(ASME) 37

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e 38

Flushing the Heat Exchanger 39

Manual Draining of the Water Heater 40

Gas Control Assembly

R/C42e, R/C53e, V53e, R63LSe 41, 42

R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, V53i, R63LSe2, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA 43, 44

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME) 45, 46

R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB 47

RL94i-VC, RL75i-VC, RL94e-VC, RL75e-VC, V75i, V65i, V75e, V65e 48, 49

Fan

R/C42e, R/C53e, V53e, R63LSe 50

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe 51

R/C53i(PLUS), R/C85i(PLUS), R50LSi, V53i, R75LSi, R94LSi 52

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME) 53

RL94i-VC, RL75i-VC, RL94e-VC, RL75e-VC, V75i, V65i, V75e, V65e 54, 55

PC Board

R/C42e, R/C53e 56

V53e, R63LSe 57

R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, R63LSe2, V53i, R75LSe, R75LSi, R94LSe, R94LSi,i 58, 59

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME) 60

RL94i-VC, RL75i-VC, RL94e-VC, RL75e-VC, V75i, V65i, V75e, V65e 61

Water Flow Control Assembly

R/C42e, R/C53e 62, 63

V53e, R63LSe 64, 65

R/C53i, R70e, R50LSi, R63LSe2, V53i, R75LSe, R75LSi 66, 67

R/C85e(PLUS), R/C85i(PLUS), R94LSe, R94LSi 68, 69

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME) 70

RL94i-VC, RL75i-VC, RL94e-VC, RL75e-VC, V75i, V65i, V75e, V65e 71, 72

Heat Exchanger

R/C42e, R/C53e, V53e, R63LSe 73-75

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe 76-79

R/C53i(PLUS), R/C85i(PLUS), V53i, R50LSi, R75LSi, R94LSi 80-83

R/C98e(ASME), R98LSe(ASME) 84, 85

R/C98i(ASME), R98LSi(ASME) 86-88

RL94i-VC, RL75i-VC, V75i, V65i 89-94

RL94e-VC, RL75e-VC, V75e, V65e 95-99

Gas Pressure Setting Procedure 100-102

Manifold Pressure Settings 103-111

Dip Switches 112-115

General Information

Safety Definitions

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.

⚠ DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also be used to alert against unsafe practices.

Using this Manual

Repairs should be performed by a qualified service technician.

The following information can be referenced for additional information.

- Operation and Installation Manual
- Hot Water System Design Manual
- Technical Sheets
- Technical Bulletins

Technical Support

Technicians are available to assist in servicing issues. Contact Rinnai Technical Services at 1-800-621-9419.

Recommended Tools

- Volt/Ohm/Amp meter with test probes
- Digital manometer or U tube type manometer with 14 inch water column (W.C.) scale, a hose and two 1/8 inch taps
- assorted wrenches including a 3/16 Allen wrench
- assorted screw drivers
- leak solution or leak detector
- Teflon tape

⚠ WARNING

There are a number of live tests that are required when fault finding this product. Extreme care should be used at all times to avoid contact with energized components inside the water heater. Before checking for resistance readings disconnect the power source to the unit and isolate the item from the circuit (unplug it).

⚠ CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with type 18 AWG wire or its equivalent.

Safety Behaviors and Practices for Service Technicians

⚠ WARNING

- Before operating, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- Keep the area around the appliance clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Combustible construction refers to adjacent walls and ceiling and should not be confused with combustible or flammable products and materials. Combustible and/or flammable products and materials should never be stored in the vicinity of this or any gas appliance.
- To protect yourself from harm, before performing maintenance:
  - ◊ Turn off the electrical power supply by unplugging the power cord or by turning off the electricity at the circuit breaker. (The temperature controller does not control the electrical power.)
  - ◊ Turn off the gas at the manual gas valve, usually located immediately below the water heater.
  - ◊ Turn off the incoming water supply. This can be done at the isolation valve immediately below the water heater or by turning off the water supply to the building.
- Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, do not try to repair it; call a licensed professional. Force or attempted repair may result in a fire or explosion.
- Do not use substitute materials. Use only parts certified with the appliance.
- Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the appliance.
- Do not adjust the DIP switch unless specifically instructed to do so.
- Do not use an extension cord or an adapter plug with this appliance.
- Any alteration to the appliance or its controls can be dangerous and will void the warranty.
- Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets/packings may result in gas leak or explosion.
- Failure to correctly assemble the components according to the instruction found herein may result in a gas leak or explosion.
- **DO NOT** touch areas at or near the heat exchanger or combustion chamber. These areas become very hot and could cause burns.
- **DO NOT** touch any other areas on the PC Board besides the **"SW"** dip switches while power is supplied to the appliance. Parts of the PC Board are supplied with **120 Volts.**

⚠ CAUTION

- BURN HAZARD. Hot exhaust and vent may cause serious burns. Keep away from water heater unit. Keep small children and animals away from unit.
- Hot water outlet pipes leaving the unit can be hot to touch. In residential applications, insulation must be used for hot water pipes below 36" due to burn risk to children.

Specifications

V Series - Commercial - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
C42e	**REU-V1616WC**	120,000	17,100 (NG) 17,800 (LP)	4.2 (16)	120 - 185 ºF (49-85 ºC)
C53e	**REU-V2020WC**	150,000	19,000 (NG) 20,200 (LP)	5.3 (20)	120 - 185 ºF (49-85 ºC)
C85e	**REU-V2532WC**	199,000	15,000	8.5 (32)	98 - 185 ºF (37-85 ºC)
C85ePLUS	**REU-V2532WCD**	199,000	15,000	8.5 (32)	98 - 185 ºF (37-85 ºC)
C98e	**REU-V3237WC**	237,000	19,000	9.8 (37)	98 - 185 ºF (37-85 ºC)
C98eASME	**REU-V3237WC-ASME**	237,000	19,000	9.8 (37)	98 - 185 ºF (37-85 ºC)

V Series - Commercial - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
C53i	**REU-V2520FFUC**	180,000	15,000	5.3 (20)	120 - 185 ºF (49-85 ºC)
C53iPLUS	**REU-V2520FFUCD**	180,000	15,000	5.3 (20)	120 - 185 ºF (49-85 ºC)
C85i	**REU-V2532FFUC**	180,000	15,000	8.5 (32)	98 - 185 ºF (37-85 ºC)
C85iPLUS	**REU-V2532FFUCD**	180,000	15,000	8.5 (32)	98 - 185 ºF (37-85 ºC)
C98i	**REU-V3237FFUC**	237,000	19,000	9.8 (37)	98 - 185 ºF (37-85 ºC)
C98iASME	**REU-V3237FFUC-ASME**	237,000	19,000	9.8 (37)	98 - 185 ºF (37-85 ºC)

V Series - Residential - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R42e	**REU-V1616W**	120,000	17,100 (NG) 17,800 (LP)	4.2 (16)	98 - 140 ºF (37-60 ºC)
R53e	**REU-V2020W**	150,000	19,000 (NG) 20,200 (LP)	5.3 (20)	98 - 140 ºF (37-60 ºC)
R70e	**REU-V2526W**	199,000	15,000	7.0 (26)	98 - 140 ºF (37-60 ºC)
R85e	**REU-V2532W**	199,000	15,000	8.5 (32)	98 - 140 ºF (37-60 ºC)
R85ePLUS	**REU-V2532WD**	199,000	15,000	8.5 (32)	98 - 140 ºF (37-60 ºC)
R98e	**REU-V3237W**	237,000	19,000	9.8 (37)	98 - 140 ºF (37-60 ºC)
R98eASME	**REU-V3237W-ASME**	237,000	19,000	9.8 (37)	98 - 140 ºF (37-60 ºC)

V Series - Residential - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R53i	**REU-V2520FFU**	180,000	15,000	5.3 (20)	98 - 140 ºF (37-60 ºC)
R53iPLUS	**REU-V2520FFU**	180,000	15,000	5.3 (20)	98 - 140 ºF (37-60 ºC)
R85i	**REU-V2532FFU**	180,000	15,000	8.5 (32)	98 - 140 ºF (37-60 ºC)
R85iPLUS	**REU-V2532FFUD**	180,000	15,000	8.5 (32)	98 - 140 ºF (37-60 ºC)
R98i	**REU-V3237FFU**	237,000	19,000	9.8 (37)	98 - 140 ºF (37-60 ºC)
R98iASME	**REU-V3237FFU-ASME**	237,000	19,000	9.8 (37)	98 - 140 ºF (37-60 ºC)

[1] Minimum activation flow is approximately 0.6 gallons/minute (2.3 liters/min)

Specifications

VA Series (LS Series) - Residential or Commercial - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R63LSe	**REU-VA2024WD-US**	150,000	21,500 (NG) 20,600 (LP)	6.3 (24)	98 - 140 ºF (37-60 ºC) [2]
R63LSe2	**REU-VA2024WD(A)-US**	150,000	15,000	6.3 (24)	
R75LSe	**REU-VA2528WD-US**	199,000	15,000	7.5 (28)	
R75LSe	**REU-VA2528WD(A)-US** **REU-VA2528WD(A)-UC**	180,000	15,000	7.5 (28)	
R94LSe	**REU-VA2535WD-US** **REU-VA2535WD-UC**	199,000	15,000	9.4 (35)	98 - 140 ºF (37-60 ºC) [3]
R98LSe	**REU-VA3237W-US**	237,000	19,000	9.8 (37)	
R98LSeASME	**REU-VA3237W-ASME**	237,000	19,000	9.8 (37)	

VA Series (LS Series) - Residential or Commercial - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R50LSi	**REU-VA2019FFUD-US**	150,000	15,000	5.0 (19)	98 - 140 ºF (37-60 ºC) [2]
R75LSi	**REU-VA2528FFUD-US**	199,000	15,000	7.5 (28)	
R75LSi	**REU-VA2528FFUD(A)-US** **REU-VA2528FFUD(A)-UC**	180,000	15,000	7.5 (28)	
R94LSi	**REU-VA2535FFUD-US** **REU-VA2535FFUD-UC**	199,000 (NG) 190,000 (LPG)	15,000	9.4 (35)	98 - 140 ºF (37-60 ºC) [3]
R98LSi	**REU-VA3237FFU-US**	237,000	19,000	9.8 (37)	
R98LSiASME	**REU-VA3237FFU-ASME**	237,000	19,000	9.8 (37)	

VA Series - Residential - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
V53e	**REU-VAM1620W-US**	120,000	19,000 (NG) 20,200 (LP)	5.3 (20)	98 - 140 ºF (37-60 ºC)

[1] Minimum activation flow is approximately 0.6 gallons/minute (2.3 liters/min)

[2] Max temperature is 160 ºF (71 ºC) with the MCC-91 controller for commercial and hydronic applications only.

[3] Max temperature is 185 ºF (85 ºC) with the MCC-91 controller for commercial and hydronic applications only.

Specifications

VB Series (LS Series) - Residential or Commercial - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R75LSe, RL75e	**REU-VB2528WD-US**	180,000	9,900 (NG) 10,300 (LPG)	7.5 (28)	98 - 140 ºF (37-60 ºC) [2]
R94LSe, RL94e	**REU-VB2735WD-US**	199,000	9,900 (NG) 10,300 (LPG)	9.4 (35)	98 - 140 ºF (37-60 ºC) [3]

VB Series (LS Series) - Residential or Commercial - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
R75LSi, RL75i	**REU-VB2528FFUD-US**	180,000	9,900 (NG) 10,300 (LPG)	7.5 (28)	98 - 140 ºF (37-60 ºC) [2]
R94LSi, RL94i	**REU-VB2735FFUD-US**	199,000 (NG) 190,000 (LPG)	9,900 (NG) 10,300 (LPG)	9.4 (35)	98 - 140 ºF (37-60 ºC) [3]

VB Series - Residential - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [4] gal/min (liters/min)	Temperature Range
V53i, RV53i	**REU-VB2020FFU-US**	150,000	15,000	5.3 (20)	98 - 140 ºF (37-60 ºC)

VC Series (Luxury Series) - Residential or Commercial - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
RL75e	**REU-VC2528WD-US**	180,000	10,300	7.5 (28.4)	98 - 140 ºF (37-60 ºC) [2]
RL94e	**REU-VC2837WD-US**	199,000	10,300	9.8 (37)	98 - 140 ºF (37-60 ºC) [3]

VC Series (Luxury Series) - Residential or Commercial - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
RL75i	**REU-VC2528FFUD-US**	180,000	10,300	7.5 (28.4)	98 - 140 ºF (37-60 ºC) [2]
RL94i	**REU-VC2837FFUD-US**	199,000	10,300	9.8 (37)	98 - 140 ºF (37-60 ºC) [3]

Specifications

VC Series (Value Series) - Residential or Commercial - Outdoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
V65e	**REU-VC2025W-US**	150,000	10,300	6.6 (25)	98 - 140 ºF (37-60 ºC) [2]
V75e	**REU-VC2528W-US**	180,000	10,300	7.5 (28.4)	

VC Series (Value Series) - Residential or Commercial - Indoor

Trade Name	Model	Max. BTU	Min. BTU	Max Flow [1] gal/min (liters/min)	Temperature Range
V65i	**REU-VC2025FFU-US**	150,000	10,300	6.6 (25)	98 - 140 ºF (37-60 ºC) [2]
V75i	**REU-VC2528FFU-US**	180,000	10,300	7.5 (28.4)	

[1] Minimum activation flow is approximately 0.4 gallons/minute (1.5 liters/min); minimum flow is approximately 0.26 gallons/minute (1 liter/min).

[2] Max temperature is 160 ºF (71 ºC) with the MCC-91 controller for commercial and hydronic applications only.

[3] Max temperature is 185 ºF (85 ºC) with the MCC-91 controller for commercial and hydronic applications only.

[4] Minimum activation flow is approximately 0.6 gallons/minute (2.3 liters/min).

Diagnostic Codes

The Rinnai water heater has the ability to check its own operation continuously. If a fault occurs, an error code will flash on the display of the remote controller. This assists with diagnosing the fault and may enable you to overcome a problem without a service call.

⚠ WARNING Some of the checks below may need to be done by a qualified service technician. Call a service technician for any remedy that involves gas or electricity. Call a service technician if you have any doubt or reservation about performing the remedy yourself.

Accessing Operating Information

Models MC-91 and MCC-91

To display the most recent error codes press and hold the “On/Off” button for 2 seconds. While holding the “On/Off” button press the ▲ button. The last 9 error codes will flash one after the other. To exit this mode press the “On/Off” and ▲ button as before.

To display the water flow through the water heater press and hold the ▲ button for 2 seconds and without releasing the ▲ button press the “On/Off” button.

To display the outlet water temperature press and hold the ▼ button for 2 seconds and without releasing the ▼ button press the “On/Off” button.

Models MC-91-2 and MCC-91-2 (KB Series)

To display the most recent error codes press and hold the “On/Off” button for 2 seconds. While holding the “On/Off” button press the ▲ button. The last 9 error codes will flash one after the other. To exit this mode press the “On/Off” and ▲ button as before.

To enter or exit the maintenance monitor information mode, press and hold the ▼ button for 2 seconds and without releasing it press the ON/OFF button.

To obtain the water flow rate: press the ▲ or ▼ buttons until “01” displays. The water flow rate will then appear. For example “58” means 5.8 gal/min.

To obtain the outgoing water temperature press the ▲ or ▼ buttons until “02” displays. The temperature will appear in degrees Fahrenheit.

No.	Data	Unit
01	Water flow rate	0.1 gal/min
02	Outgoing water temperature	Degrees Fahrenheit

Operation

1. **Water Flow Begins.**
   - Water Flow Sensor sends pulses to the PC Board.
   - PC Board senses flow.
   - Firing Sequence begins when the flow exceeds the minimum activation flow rate.

2. **Firing Sequence.**
   - PC Board monitors inlet/outlet water temperature, temperature set point, and water flow rate.
   - Combustion fan energized. Purges combustion chamber.
   - Spark igniter begins sparking.
   - Gas control valve opens to minimum fire rate.
   - Flame rod(s) proves ignition.
   - Spark igniter stops sparking.

3. **Normal Operation.**
   - PC Board monitors flame rod, fan motor frequency, outlet water temperature, controller temperature set point and water flow rate.
   - Gas control valve modulates gas input to required firing rate.
   - Combustion fan speed is adjusted for the required firing rate.
   - Water flow control valve is adjusted as needed.

4. **Shut-down Sequence.**
   - Shut-down begins when the PC Board senses the minimum flow rate which is 0.26 - 0.5 gpm depending on model.
   - Gas control valve closes.
   - Water flow control valve resets to standby position.
   - Combustion fan runs for a short period of time at low speed.

5. **Standby Mode.**
   - PC Board monitors water temperature and remote controls.
   - Freeze protection is activated as needed.

Diagnostic Codes

Code	Definition	Remedy
02	No burner operation during freeze protection mode	Service Call
03	Power interruption during Bath Fill (Water will not flow when power returns).	Turn off all hot water taps. Press ON/OFF twice.
10	Air Supply or Exhaust Blockage	Ensure Rinnai approved venting materials are being used. Check that nothing is blocking the flue inlet or exhaust. Check all vent components for proper connections. Ensure vent length is within limits. For non-condensing models, ensure condensation collar was installed correctly. Verify dip switches are set properly. Check fan for blockage. Check the fins in the heat exchanger.
11	No Ignition	Check that the gas is turned on at the water heater, gas meter, or cylinder. Ensure gas type and pressure is correct. Ensure gas line, meter, and/or regulator is sized properly. Bleed all air from gas lines. Verify dip switches are set properly. Ensure appliance is properly grounded. Disconnect EZConnect or MSA controls to isolate the problem. Ensure igniter is operational. Check igniter wiring harness for damage. Check gas solenoid valves for open or short circuits. Remove burner cover and ensure all burners are properly seated. Remove burner plate and inspect burner surface for condensation or debris. If flame is visible, check the flame rod circuit.
12	Flame Failure	Check that the gas is turned on at the water heater and gas meter. Check for obstructions in the flue outlet. Ensure gas line, meter, and/or regulator is sized properly. Ensure gas type and pressure is correct. Bleed all air from gas lines. Ensure proper Rinnai venting material was installed. For non-condensing models, ensure condensation collar was installed properly. Ensure vent length is within limits. Verify dip switches are set properly. Ensure appliance is properly grounded. Disconnect keypad. Disconnect EZConnect or MSA controls to isolate the problem. Check power supply for loose connections. Check power supply for proper voltage and voltage drops. Ensure flame rod wire is connected. Ensure flame rod is in proper position (wire should connect at 6 o'clock position). Remove flame rod and check for carbon build-up; clean with sand paper or emery cloth. Disconnect and reconnect all wiring harnesses on unit and PC board. Check all components for electrical short. Check gas solenoid valves for open or short circuits. Remove burner plate and inspect burner surface for condensation or debris. Check the ground wire for the PC board.
14	Thermal Fuse	Check gas type of unit and ensure it matches gas type being used. Check for restrictions in air flow around unit and vent terminal. Check for low water flow in a circulating system causing short-cycling. Ensure dip switches are set to the proper position. Check for foreign materials in combustion chamber and/or exhaust piping. Check heat exchanger for cracks and/or separations. Check heat exchanger surface for hot spots which indicate blockage due to scale build-up. Refer to instructions in manual for flushing heat exchanger. Hard water must be treated to prevent scale build up or damage to the heat exchanger. Measure resistance of safety circuit. Ensure high fire and low fire manifold pressure is correct. Check for improper conversion of product.
16	Over Temperature Warning	Check for restrictions in the intake and exhaust system. Check for low water flow in a circulating system causing short-cycling. Check for foreign materials in combustion chamber and/or exhaust piping. Check for blockage in the heat exchanger.

Diagnostic Codes

Code	Definition	Remedy
19	Electrical Grounding	Check all components for electrical short.
31	Burner Sensor Error **ONLY FOR VB INDOOR MODELS**	Measure resistance of sensor. Replace sensor.
32	Outgoing Water Temperature Sensor	Check sensor wiring for damage. Measure resistance of sensor. Clean sensor of scale build-up. Replace sensor.
33	Heat Exchanger Outgoing Temperature Sensor	Check sensor wiring to be sure it has not been short circuited. Measure resistance of sensor. Clean sensor of scale build-up. Replace sensor.
34	Combustion Air Temperature Sensor **ONLY FOR INDOOR NON-CONDENSING MODELS (EXCEPT R98LSi)**	Check for restrictions in the intake and exhaust system. Check sensor wiring for damage. Measure resistance of sensor. Clean sensor of scale build-up. Check the fan blade to be sure it is tight on motor shaft and is in good condition. Replace sensor.
41	Outside temperature thermistor (outdoor models only)	Check sensor wiring for damage. Measure resistance of sensor. Clean sensor of scale build-up. Replace Sensor.
51	Inlet water temperature thermistor (RL94 only)	Check sensor wiring for damage. Measure resistance of sensor. Clean sensor of scale build-up. Replace Sensor.
52	Modulating Solenoid Valve Signal Abnormal	Check modulating gas solenoid valve wiring harness for loose or damaged terminals. Measure resistance of valve coil.
57	Burner	Inspect and clean burners.
61	Combustion Fan Failure	Ensure fan will turn freely. Check wiring harness to motor for damaged and/or loose connections. Measure resistance of motor winding. Check for proper voltage from PC board.
65	Water Flow Control	The water flow control valve has failed to close during the bath fill function. Immediately turn off the water and discontinue the bath fill function. Contact a state qualified or licensed contractor to service the appliance.
70	PC Board	Check PC board DIP switches for correct position. Check the connection harness at the connection on the PC board. Replace PC board.
71	Solenoid Valve Circuit	For non-condensing, check wiring harness to all solenoids for damage and/or loose connections. Measure resistance of each solenoid valve coil.
72	Flame Sensing Device	Verify flame rod is touching flame when unit fires. Check all wiring to flame rod. Remove flame rod and check for carbon build-up; clean with sand paper or emery cloth. Check inside burner chamber for any foreign material blocking flame at flame rod. Measure micro amp output of sensor circuit with flame present. Replace flame rod.
73	Burner Sensor Circuit **ONLY FOR VB INDOOR MODELS**	Check sensor wiring and PC board to be sure they have not been damaged. Replace sensor.
79	Water Leak Detected	Water has been detected at the bottom of the unit. Turn off water supply. Check plumbing.
LC or LC # (LCO, LC1, LC2,…)	Scale Build-up in Heat Exchanger (when checking maintenance code history, “00” is substituted for “LC”)	Flush heat exchanger. Refer to instructions in manual. Hard water must be treated to prevent scale build up or damage to the heat exchanger. Replace heat exchanger. NOTE: The LC code is the only code that will allow the unit to keep running. The display will alternate between the LC code and the temperature setting. The controller will continue to beep. The LC code will reset if power is turned off and then on.
FF	Maintenance performed	Indicates a licensed professional performed maintenance or corrected an issue.
No code	Nothing happens when water flow is activated.	**On controller, verify if unit is sensing flow. If not then check the items below. If unit is sensing flow then check the heat exchanger and outlet thermistors.** Clean inlet water supply filter. On new installations ensure hot and cold water lines are not reversed. Check for cold to hot cross over. Isolate circulating system if present. Turn off cold water to the unit, open pressure relief valve; if water continues to flow, there is bleed over in your plumbing. Verify you have at least the minimum flow rate required to fire unit. Verify turbine spins freely. Measure the resistance of the water flow control sensor. If the display is blank and clicking is coming from the unit, disconnect the water flow servo motor (RD, BL, BR, GY, YL). If the display come on then replace the water flow servo motor.

STOP

DO NOT proceed in performing any electrical diagnostics, service repairs, or component replacements without reading and following the warnings below.

Important Safety Notes

There are a number of (live) tests that are required when fault finding this product. Extreme care should be used at all times to avoid contact with energized components inside the water heater. Only trained and qualified service technicians should attempt to repair this product. Before checking for resistance readings, disconnect the power source to the unit and isolate the item from the circuit (unplug it)

WARNING

Follow the steps below prior to servicing or replacing any component within the tankless water heater in order to protect yourself from harm:

- Turn off the electrical power supply by unplugging the power cord or by turning off the electricity at the circuit breaker. (The temperature controller does not control the electrical power.)
- Turn off the gas at the manual gas valve, usually located immediately below the water heater.
- Turn off the incoming water supply. This can be done at the isolation valve immediately below the water heater or by turning off the water supply to the building.

WARNING

Failure to correctly assemble the components according to the instructions contained within this service manual may result in a gas leak or explosion.

WARNING

Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

Electrical Diagnostic Points

R/C42e, R/C53e

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(TR) Transformer				
Black - White	90 - 100 VAC	51-63 ohms	F2	1 ~ 2
Blue - Brown	108 - 132 VAC	51-63 ohms	F3	1 ~ 3
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	80 - 100 VDC	1.7 - 2 K ohms	E1	1 ~ 2
(SV1) Black - Blue			E2	1 ~ 2
(SV2) Black - Yellow			E3	1 ~ 2
(POV) Pink - Pink	2 - 15 VDC	67 - 81 ohms	C2	1 ~ 2
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	22 - 26 ohms	B1	1 ~ 2
Gray - Brown	4 - 6 VDC	N/A	B1	6 ~ 3
Gray - Yellow	N/A	N/A	B1	6 ~ 5
Gray - Orange	11 - 14 VDC	N/A	B1	6 ~ 4
NOTE: At the B connector on the PCB: gray wire turns to black, orange wire turns to red				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	5.5 - 6.2 K ohms	B3	3 ~ 1
Yellow - Black	4 - 7 VDC	1 - 1.4 mega ohms	B3	2 ~ 3
(IG) Ignition System				
Gray - Gray	90 - 100 VAC	N/A	F1	1 ~ 2
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	A1	1 ~ 2
White - Black	5 - 10 VDC	9.2 - 9.4 K ohms	A1	2 ~ 4
Yellow - Black	11 ~ 13 VDC	3.5 - 3.9 K ohms	A1	2 ~ 3
With the meter set on hertz scale, 60-350 hertz should be across the red and yellow wires at terminals 2 and 3.				

Electrical Diagnostic Points

R/C42e, R/C53e

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse / Overheat Switch				
Red - Red	12 VDC	below 1 ohm	B, C	6 (B) ~ 1 (C)
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. Flame rod to ground should read 1 mega ohm with unit not running. With the unit running, 5-150 VAC should be read. If voltage range is incorrect then replace PC board. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 micro-amp or greater. If micro-amp range is incorrect then clean flame rod; replace flame rod if cleaning fails.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		B4	1 ~ 2
Heat Exchanger Temperature Thermistor				
White - White	see above		B5	1 ~ 2
Surge Protector				
Blue - Brown	108 - 132 VAC	N/A	F4	1 ~ 2
Blue - Brown	108 - 132 VAC	N/A	F3	1 ~ 3
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #2. Check by placing one meter lead on the top pin #3 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Terminals D1	10 - 13 VDC digital	1.5 - 1.9 K ohms	D	1 ~ 3
Frost Protection				
There are electrical heating elements mounted at different points to protect the water heater from freezing.				
heaters located on the hot water outlet line		26 - 30 ohms		
heater located on heat exchanger piping		81 - 86 ohms		
heater located on water flow sensor		16 - 19 ohms		
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

R70e, R/C85e(PLUS),
R/C53i(PLUS), R/C85i(PLUS)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(TR) Transformer				
Black - White	90 - 100 VAC	51-63 ohms	F9	1 ~ 2
Blue - Brown	108 - 132 VAC	51-63 ohms	F7	1 ~ 3
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	80 - 100 VDC	1.7 - 2 K ohms	E1	1 ~ 2
(SV1) Black - Yellow			E2	1 ~ 2
(SV2) Black - Blue			E3	1 ~ 2
(SV3) Black - Brown			E4	1 ~ 2
(POV) Pink - Pink	2 - 15 VDC	67 - 81 ohms	C2	1 ~ 2
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	22 - 26 ohms	B1 outdoor models B2 indoor models	1 ~ 2
Gray - Brown	4 - 6 VDC	N/A		6 ~ 3
Gray - Yellow	N/A	N/A		6 ~ 5
Gray - Orange	11 - 14 VDC	N/A		6 ~ 4
NOTE: At the B connector on the PCB: gray wire turns to black, orange wire turns to red				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	5.5 - 6.2 K ohms	B1 outdoor models B2 indoor models	1 ~ 3
Yellow - Black	4 - 7 VDC	1 - 1.4 mega ohms		2 ~ 3
Bypass Flow Control (only on R/C85e, R/C85ePLUS, R/C85i, R/C85iPLUS)				
Brown - White	2 - 6 VDC (unit in operating mode)	15 - 35 K ohms	G1 (plug between bypass and PCB)	1 ~ 5
Orange - White				2 ~ 5
Yellow - White				3 ~ 5
Red - White/Ground				4 ~ 5
(IG) Ignition System				
Gray - Gray	90 - 100 VAC	N/A	F8	1 ~ 2
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	A1	1 ~ 2
White - Black	5 - 10 VDC	9.2 - 9.4 K ohms	A1	2 ~ 4
Yellow - Black	11 ~ 13 VDC	3.5 - 3.9 K ohms	A1	2 ~ 3
With the meter set on hertz scale, 60-350 hertz should be across the red and yellow wires at terminals 2 and 3.				

Electrical Diagnostic Points

R70e, R/C85e(PLUS),
R/C53i(PLUS), R/C85i(PLUS)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse / Overheat Switch				
Red - Red	12 VDC	below 1 ohm	C3-B2 outdoor models C3-B3 indoor models	1 ~ 1
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. Flame rod to ground should read 1 mega ohm with unit not running. With the unit running, 5-150 VAC should be read. If voltage range is incorrect then replace PC board. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 micro-amp or greater. If micro-amp range is incorrect then clean flame rod; replace flame rod if cleaning fails.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		B4 outdoor models B5 indoor models	1 ~ 2
Heat Exchanger Temperature Thermistor				
White - White	see above		B5 outdoor models B6 indoor models	1 ~ 2
Surge Protector				
Blue - Brown	108 - 132 VAC	N/A	F6	1 ~ 2
Blue - Brown	108 - 132 VAC	N/A	F7	1 ~ 3
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #2. Check by placing one meter lead on the top pin #3 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Terminals D1	10 - 13 VDC digital	1.5 - 1.9 K ohms	D	1 ~ 3
Frost Protection				
There are electrical heating elements mounted at different points to protect the water heater from freezing.				
heaters located on the hot water outlet line		26 - 30 ohms		
heater located on heat exchanger piping		81 - 86 ohms		
heater located on water flow sensor		16 - 19 ohms		
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

R/C98e(ASME),
R/C98i(ASME)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	11 - 13 VDC	24 - 28 ohms	F1 (pins 1, 2)	4 ~ 5(F)
(SV1) Black - Red		37 - 43 ohms	F2 (pins 1, 2)	3 ~ 4(F)
(SV2) Black - Orange			F3 (pins 1, 2)	2 ~ 4(F)
(SV3) Black - Yellow			F4 (pins 1, 2)	1 ~ 4(F)
(POV) Orange - Orange	3 - 15 VDC	67 - 81 ohms	E2 (pins 1, 2)	3 ~ 4(E)
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	N/A	G6 (pins 1, 2)	5 ~ 6(G)
Gray - Brown (closed position)	below 1 VDC	Limiter On	G6 (pins 5, 3)	8 ~ 11(G)
	4 - 6 VDC	Limiter Off		
Gray - Yellow (open position)	below 1 VDC	Limiter On	G6 (pins 5, 4)	7 ~ 11(G)
	4 - 6 VDC	Limiter Off		
NOTE: At the G connector on the PCB: gray wire turns to black				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	N/A	G3 (pins 3, 1)	9 ~ 15(G)
Yellow - Black	4 - 7 VDC	N/A	G3 (pins 2, 3)	11 ~ 15(G)
Bypass Flow Control				
Brown - White	2 - 6 VDC (unit in operating mode)	15 - 35 K ohms	H1 (pins 1, 5)	1(H) ~ 9(G)
Orange - White			H1 (pins 2, 5)	3(H) ~ 9(G)
Yellow - White			H1 (pins 3, 5)	4(H) ~ 9(G)
Red - White/Ground			H1 (pins 4, 5)	2(H) ~ 9(G)
NOTE: At the G connector on the PCB: white wire turns to red				
(IG) Ignition System				
Gray - Gray	90 - 100 VAC	N/A	C1	1 ~ 2(C)
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	B1	1 ~ 2(B)
White - Black	5 - 10 VDC	N/A	B1	2 ~ 4(B)
Yellow - Black	11 ~ 13 VDC	N/A	B1	2 ~ 3(B)
With the meter set on hertz scale, 17-460 hertz should be across the white and black wires at terminals 2 and 4.				

Electrical Diagnostic Points

R/C98e(ASME),
R/C98i(ASME)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse				
White - Red	12 VDC	below 1 ohm	G1 (red) pin 1 - E3 (white) pin 1	
Overheat Switch				
Red - Red	12 VDC	below 1 ohm	G2	1 ~ 2
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. With the unit running, 5-150 VAC should be read. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 µ amp or greater. If not, then remove the flame rod and check for carbon build-up. Clean with sand paper or emery cloth.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		G5	1 ~ 2
Heat Exchanger Temperature Thermistor				
White - White	see above		G4	1 ~ 2
Surge Protector				
Black - White	108 - 132 VAC	N/A	D1	1 ~ 3
Black - White	108 - 132 VAC	N/A	D2	
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #2. Check by placing one meter lead on the top pin #2 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Black - Black	10 - 13 VDC digital	N/A	A	1 ~ 3(A)
Frost Protection				
White - White	120 VAC *	150 ohms	D4	1 ~ 2
White - White	60 VAC *	360 ohms	D5	1 ~ 2
White - White	60 VAC*	360 ohms	D6	1 ~ 2
* only when Frost Sensing Switch (D3) is ON				
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

V53e, R63LSe

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	11 - 13 VDC	37 - 43 ohms	F5	1 ~ 2
(SV1) Black - Blue		35 - 41 ohms	F6	1 ~ 2
(SV2) Black - Yellow		37 - 43 ohms	F7	1 ~ 2
(POV) Pink - Pink	2 - 15 VDC	67 - 81 ohms	F3	1 ~ 2
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	22 - 28 ohms	E5 (1, 2)	9 ~ 8 (E)
Gray - Brown	4 - 6 VDC	N/A	E5 (5, 3)	4 ~ 6 (E)
Gray - Yellow	N/A	N/A	E5 (5, 4)	4 ~ 7 (E)
NOTE: At the E connector on the PCB: gray wire turns to black				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	5.5 - 6.2 K ohms	E2	3 ~ 1
Yellow - Black	4 - 7 VDC	1 - 1.4 mega ohms	E2	2 ~ 3
(IG) Ignition System				
Gray - Gray	90 - 110 VAC	N/A	B1	1 ~ 2
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	D1	1 ~ 2
White - Black	5 - 10 VDC	9.2 - 9.4 K ohms	D1	4 ~ 2
Yellow - Black	11 ~ 13 VDC	3.5 - 3.9 K ohms	D1	3 ~ 2
With the meter set on hertz scale, 60-420 hertz should be across the white and black wires at terminals 2 and 4.				

Electrical Diagnostic Points

V53e, R63LSe

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse / Overheat Switch				
Blue - White (thermal fuse side)		below 1 ohm	E6 F1	1 ~ 1
Red - Blue (PCB side)	12 VDC		E6 F1	1 ~ 1
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. With the unit running, 5-150 VAC should be read. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 µ amp or greater. If not, then remove the flame rod and check for carbon and damage.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		E4	1 ~ 2
Heat Exchanger Temperature Thermistor				
White - White	see above		E3	1 ~ 2
Surge Protector				
Black - White	108 - 132 VAC	N/A	C2	1 ~ 3
Blue - Brown	108 - 132 VAC	N/A	C1	
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #3. Check by placing one meter lead on the top pin #3 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Terminals A1	10 - 13 VDC	1.5 - 3.0 K ohms	A	1 ~ 3
Frost Protection				
heaters located on the hot water outlet line		180 - 207 ohms		
heater located on heat exchanger piping		156 - 180 ohms		
heater located on water flow sensor		24 - 28 ohms		
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

R50LSi, R63LSe2, R75LSe-VA,
R75LSi-VA, R94LSe-VA, R94LSi-VA

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	11 - 13 VDC	36.8 - 44.8 ohms	H5	1 ~ 2
(SV1) Black - Yellow			H6	1 ~ 2
(SV2) Black - Blue			H7	1 ~ 2
(SV3) Black - Brown			H8	1 ~ 2
(POV) Pink - Pink	2 - 15 VDC	67 - 81 ohms	H3	1 ~ 2
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	22 - 26 ohms	F7 (1, 2)	10 ~ 9 (F)
Gray - Brown	4 - 6 VDC	N/A	F7 (5, 3)	5 ~ 7 (F)
Gray - Yellow	N/A	N/A	F7 (5,4)	5 ~ 8 (F)
NOTE: At the F connector on the PCB: gray wire turns to black, orange wire turns to red				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	5.5 - 6.2 K ohms	F2	1 ~ 3
Yellow - Black	4 - 7 VDC	1 - 1.4 mega ohms	F2	2 ~ 3
Bypass Flow Control (only on R94LSe and R94LSi)				
Brown - White	2 - 6 VDC (unit in operating mode)	15 - 35 K ohms	G1	1 ~ 5
Orange - White				2 ~ 5
Yellow - White				3 ~ 5
Red - White/Ground				4 ~ 5
(IG) Ignition System				
Gray - Gray	90 - 110 VAC	N/A	C1	1 ~ 2
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	E1	1 ~ 2
White - Black	5 - 10 VDC	9.2 - 9.4 K ohms	E1	2 ~ 4
Yellow - Black	11 ~ 13 VDC	3.5 - 3.9 K ohms	E1	2 ~ 3
With the meter set on hertz scale, 60-420 hertz should be across the red and yellow wires at terminals 2 and 4.				

Electrical Diagnostic Points

R50LSi, R63LSe2, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse / Overheat Switch				
Red - Red (thermal fuse side)		below 1 ohm	F6 H1	1 ~ 1
Red - Red (PCB side)	11 - 13 VDC		F6 H1	1 ~ 1
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. With the unit running, 5-150 VAC should be read. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 µ amp or greater. If not, then remove the flame rod and check for carbon and damage.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		F5 (1, 1)	3 ~ 4 (F)
Heat Exchanger Temperature Thermistor				
Pink - White	see above		F4 (1, 1)	3 ~ 11 (F)
Intake Air Thermistor (only on R50LSi, R75LSi, R94LSi)				
Orange - White	see above		F3 (1, 1)	3 ~ 12 (F)
Surge Protector				
Black - White	108 - 132 VAC	N/A	D2	1 ~ 3
Blue - Brown	108 - 132 VAC	N/A	D1	1 ~ 3
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #3. Check by placing one meter lead on the top pin #3 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Terminals B1	10 - 13 VDC	1.5 - 3.0 K ohms	B	1 ~ 3
Frost Protection				
There are electrical heating elements mounted at different points to protect the water heater from freezing.				
heaters located on the hot water outlet line		180 - 207 ohms		
heater located on heat exchanger piping		156 - 180 ohms		
heater located on water flow sensor		24 - 28 ohms		
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

V53i, R75LSe-VB, R75LSi-VB,
R94LSe-VB, R94LSi-VB

Heat Exchanger and Outgoing Water Temperature Thermistors:

Check all thermistors by inserting meter leads into each end of the thermistor plug. Set your meter to the 20 K scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance.

Frost Protection:

This unit has frost protection heaters mounted at different points to protect the water heater from freezing.

Amp Fuses:

Indoor models have one inline (5) amp glass fuse. Outdoor models have one inline (3) amp glass fuse. Remove the fuse and check continuity through it. If you have continuity through the fuse then it is good. Otherwise the fuse is blown and must be replaced.

Flame Rod:

Place one lead of your meter to the flame rod and the other to ground. With the unit running you should read between 5-150 VAC. Set your meter to the micro amp scale. You should read 1 micro amp for proper flame circuit. In the event of low flame circuit remove the flame rod and check for carbon or damage.

COMPONENT	MEASUREMENT POINT		RANGE OF VALUE	REMARKS
	CN	WIRE COLOR		
TEMP CONTROLLER	A1	Bk-Bk	DC11-13V	
THERMAL FUSE	B1/E1	W-W	BELOW 1 Ω	
MOD. SOLENOID VALVE	B2	O-O	DC2-15V / 67-82 Ω	
MAIN SOLENOID VALVE	B3	P-Bk	DC11-13V / 37-43 Ω	
SOLENOID VALVE 1	B4	B-Bk (Y-Bk on V53i)		
SOLENOID VALVE 2	B5	Y-Bk (Bl-Bk on V53i)		
SOLENOID VALVE 3	B6	R-Bk		
SOLENOID VALVE 4	B7	O-Bk		NOT ON V53i, RV53i
FLAME ROD 1	B8	Y-FR	OVER 1 μ A (DURING OPERATION)	
FLAME ROD 2	M1	R-FR		NOT ON V53i, RV53i
SURGE PROTECTOR	C1	W-Bk	AC108-132V	
SURGE PROTECTOR	C2			
MAIN POWER CORD	C3			
ANTI FROST HEATER	C4	W-W	88-120 Ω	W (OUTDOOR) MODELS
			156-211 Ω	FFU (INDOOR) MODELS
IGNITOR	D1	Gy-Gy	AC108-132V (DURING IGNITION)	
HEAT EXCHANGER TH	E2	W-W	15ºC/59ºF: 11.4-14.0 kΩ 30ºC/86ºF: 6.4-7.8 kΩ 45ºC/113ºF: 3.6-4.5 kΩ 60ºC/140ºF: 2.2-2.7 kΩ	
OUTGOING WATER TH1	E3	W-W		
OUTGOING WATER TH2	E4	W-W		
AIR TEMPERATURE TH	E5	W-W		FFU (INDOOR) MODELS

Electrical Diagnostic Points

V53i, R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB

COMPONENT	MEASUREMENT POINT		RANGE OF VALUE	REMARKS
	CN	WIRE COLOR		
BURNER THERMISTOR	E6	Bk-Bk	15ºC/59ºF: 21.5-23.8 kΩ 30ºC/86ºF: 14.7-16.2 kΩ 200ºC/392ºF: 0.98-1.02 kΩ 400ºC/752ºF: 210.0-223.9 Ω 600ºC/1112ºF: 85.7-92.7 Ω	FFU (INDOOR) MODELS
WATER FLOW SENSOR	E7	R-Bk	DC11-13V	**R75LS, RL75, R94LS, RL94:** ON: 1.5L/MIN (20Hz) OFF: 1.0L/MIN (13Hz) **V53i, RV53i** ON: 2.4L/MIN OFF: 1.7L/MIN
		Y-Bk	DC4-7V (PULSE 20-300 Hz)	
BYPASS FLOW CONTROL	G1	Br-W	DC12V (DC2-6V DURING OPERATION) 15-35 Ω	R94LS, RL94 (2735) MODELS ONLY
		O-W		
		Y-W		
		R-W		
WATER FLOW CONTROL	G2	R-O	DC11-13V (DC5-7V DURING OPERATION)	
		P-O		
		B-O		
		W-O		
		R-P	30-50 Ω	
		B-W		
		Y-Gy	BELOW DC1V (LIMITER ON) DC4-6 (LIMITER OFF)	FULL OPEN POSITION
		Br-Gy		FULL CLOSE POSITION
COMBUSTION FAN	L1	R-Bk	DC15-46V	
		Y-Bk	DC11-13V	
		W-Bk	DC5-10V (PULSE 20-420 Hz)	

Electrical Diagnostic Points

R98LSe(ASME),
R98LSi(ASME)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
(SV1, SV2, SV3, POV) Gas Valve and Modulating Solenoids				
(Main) Pink - Black	11 - 13 VDC	24 - 28 ohms	H3	1 ~ 2
(SV1) Black - Red		37 - 43 ohms	H4	1 ~ 2
(SV2) Black - Orange		37 - 43 ohms	H5	1 ~ 2
(SV3) Black - Yellow		37 - 43 ohms	H6	1 ~ 2
(POV) Orange - Orange	2 - 15 VDC	67 - 81 ohms	H2	1 ~ 2
(M) Water Flow Servo				
Red - Blue	11 - 13 VDC	22 - 28 ohms	F5 (1, 2)	9 ~ 10 (F)
Gray - Brown	4 - 6 VDC	N/A	F5 (5, 3)	5 ~ 7 (F)
Gray - Yellow	N/A	N/A	F5 (5, 4)	5 ~ 8 (F)
NOTE: At the F connector on the PCB: gray wire turns to black				
(QS) Water Flow Sensor				
Black - Red	11 - 13 VDC	5.5 - 6.2 K ohms	F2	1 ~ 3
Yellow - Black	4 - 7 VDC	1 - 1.4 mega ohms	F2	2 ~ 3
Bypass Flow Control				
Brown - White	2 - 6 VDC (unit in operating mode)	15 - 35 K ohms	G1	1 ~ 5
Orange - White				2 ~ 5
Yellow - White				3 ~ 5
Red - White/Ground				4 ~ 5
(IG) Ignition System				
Gray - Gray	90 - 110 VAC	N/A	C1	1 ~ 2
(FM) Combustion Fan Motor				
Red - Black	6 - 45 VDC	N/A	E1	1 ~ 2
White - Black	5 - 10 VDC	9.2 - 9.4 K ohms	E1	2 ~ 4
Yellow - Black	11 ~ 13 VDC	3.5 - 3.9 K ohms	E1	2 ~ 3
With the meter set on hertz scale, 60-420 hertz should be across the red and yellow wires at terminals 2 and 4.				

Electrical Diagnostic Points

R98LSe(ASME),
R98LSi(ASME)

Wire Color	Voltage	Resistance	Connector No.	Pin No.'s
Thermal Fuse / Overheat Switch				
Red - White	11 - 13 VDC	below 1 ohm	F6 H1	1 ~ 1
			F (pin 6), H (pin 12)	
Flame Rod				
Place one lead of the meter to the flame rod and the other to ground. With the unit running, 5-150 VAC should be read. Set the meter to the µ amp scale and series the meter in line with the flame rod. Proper flame circuit should read 1 µ amp or greater. If not, then remove the flame rod and check for carbon and damage.				
Thermistors				
Check all thermistors by inserting meter leads into each end of the thermistor plug. Set the meter to the 20 K ohm scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. Typical resistance values are: 11.4-14 K ohm for 59°F; 6.4-7.8 K ohm for 86°F; 3.6-4.5 K ohm for 113°F; 2.2-2.7 K ohm for 140°F; 0.6-0.8 K ohm for 221°F				
Outgoing Water Thermistor				
White - White	see above		F4 (1, 2)	3 ~ 4 (F)
Heat Exchanger Temperature Thermistor				
White - White	see above		F3	1 ~ 2
Pink - White	see above		F	3 ~ 11
Surge Protector				
Black - White	108 - 132 VAC	N/A	D2	1 ~ 3
Blue - Brown	108 - 132 VAC	N/A	D1	1 ~ 3
With the power off, check the continuity through the surge protector. Check by placing one meter lead on the top pin #1 and bottom pin #3. Check by placing one meter lead on the top pin #3 and bottom pin #1. If there is continuity across both sets of points, then the surge protector is good.				
Controller				
Terminals B1	10 - 13 VDC	1.5 - 3.0 K ohms	B	1 ~ 3
Frost Protection				
There are electrical heating elements mounted at different points to protect the water heater from freezing. Voltage through this circuit should be 120 VAC.				
heater located on the hot water outlet line		335 - 385 ohms		
heater located on heat exchanger piping		156 - 180 ohms		
heater located on water flow sensor		335 - 385 ohms		
Amp fuses				
There are two inline 3 amp glass fuses. Remove the fuse and check continuity through it. If there is continuity then the fuse is good.				

Electrical Diagnostic Points

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

Important Safety Notes
There are a number of (live) tests that are required when fault finding this product. Extreme care should be used at all times to avoid contact with energized components inside the water heater. Only trained and qualified service technicians should attempt to repair this product. Before checking for resistance readings, disconnect the power source to the unit and isolate the item from the circuit (unplug it).

Heat Exchanger and Outgoing Water Temperature Thermistors:

Check all thermistors by inserting meter leads into each end of the thermistor plug. Set your meter to the 20 K scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance. See below for examples of typical temperatures andresistance readings.
Example:
59°F = 11.4 ~ 14K
86°F = 6.4 ~ 7.8K
113°F = 3.6 ~ 4.5K
140°F = 2.2 ~ 2.7K
221°F = 0.6 ~ 0.8K

Frost Protection:

This unit has frost protection heaters mounted at different points to protect the water heater from freezing. All of them should show a positive resistance reading.

Amp Fuses:

This unit has one inline (10) amp glass fuse. Remove the fuse and check continuity through it. If you have continuity through the fuse then it is good. Otherwise the fuse is blown and must be replaced.

Flame Rod:

Place one lead of your meter to the flame rod and the other to ground. With the unit running you should read between 5-150 VAC. Set your meter to the µ amp scale and series your meter in line with the flame rod. You should read 1 µ amp or greater for proper flame circuit. In the event of low flame circuit remove the flame rod and check

(SV1, SV2, SV3 and POV) Gas valve and Modulating solenoids: (Set meter above 2K)

Wire Color	Voltage	Resistance	Connector #	Pin #'s
(Main) Black - Grey	11 ~ 13 VDC	24 ~ 28 ohms	D1	B3 - B4
(SV1) Black - Blue	11 ~ 13 VDC	36 ~ 42 ohms	B3	4 - 6
(SV2) Black - Yellow	11 ~ 13 VDC	36 ~ 42 ohms	B2	4 - 7
(SV3) Black - Red	11 ~ 13 VDC	36 ~ 42 ohms	B4	4 - 5
(SV4) Black - Orange	11 ~ 13 VDC	35 ~ 41 ohms	B1	4 - 8
(POV) Pink - Pink	2 ~ 15 VDC	67 ~ 81 ohms	D1	1 - 2

(M) Water Flow Control Device Servo or Geared Motor:

Red - Pink	5 ~ 8 VDC	44 ~ 52 ohms	G2	3 - 4
White - Blue	5 ~ 8 VDC	44 ~ 52 ohms	G2	1 - 2
Grey - Brown	N/A	N/A	G2	5 - 7
Grey - Orange	N/A	N/A	G2	6 - 7

NOTE: The grey wire listed above turns to black at G connector on the PCB.

Electrical Diagnostic Points

RL94i/e-VC, RL75i/e-VC, V75i/e-VC, V65i/e-VC

(QS) Water Flow Sensor:

Wire Color	Voltage	Resistance	Connector #	Pin #'s
Black - Red	11 ~ 13 VDC	5.5 ~ 6.2 K ohms	L3	E10 - G7
Yellow - Black	4 ~ 7 VDC	1 ~ 1.4 Mega ohms	L3	E1 - G7

By-Pass Flow Control:

Red - Pink	2 ~ 6 VDC	44 ~ 52 ohms	G1	12 - 13
Yellow - Blue	2 ~ 6 VDC	44 ~ 52 ohms	G1	10 - 11

(IG) Ignition System:

Grey - Grey	90 ~ 110 VAC	N/A	C1	1 - 3

(FM) Combustion Fan Motor:

Red - Black	6 ~ 45 VDC	N/A	L2	5 - 6
White - Black	5 ~ 10 VDC	N/A	L2	3 - 5
Yellow - Black	11 ~ 13 VDC	N/A	L2	4 - 5

Set your meter to the hertz scale. Reading across the white and black wires at terminals 3 and 5 you should read between 60 and 420 hertz.

Thermal Fuse / Overheat Switch:

White - White	11 ~ 13 VDC	Below 1 Ohms	B8 B7	B1 - E10

Outgoing Water Thermistor:

White - White	N/A	*See example on page 26	E5	2 - 3
Blue - Blue	N/A	*See example on page 26	E5	4 - 5

Heat Exchanger Temperature Thermistor:

Pink - Pink	N/A	*See example on page 26	E4	4 - 7

Inlet Thermistor:

White - White	N/A	*See example on page 26	E7	4 - 9

Remote Control:

Terminals J	10 ~ 13 VDC	1.5 ~ 3.0 K ohms	J	1 - 2

Wiring Diagram

R/C42e, R/C53e

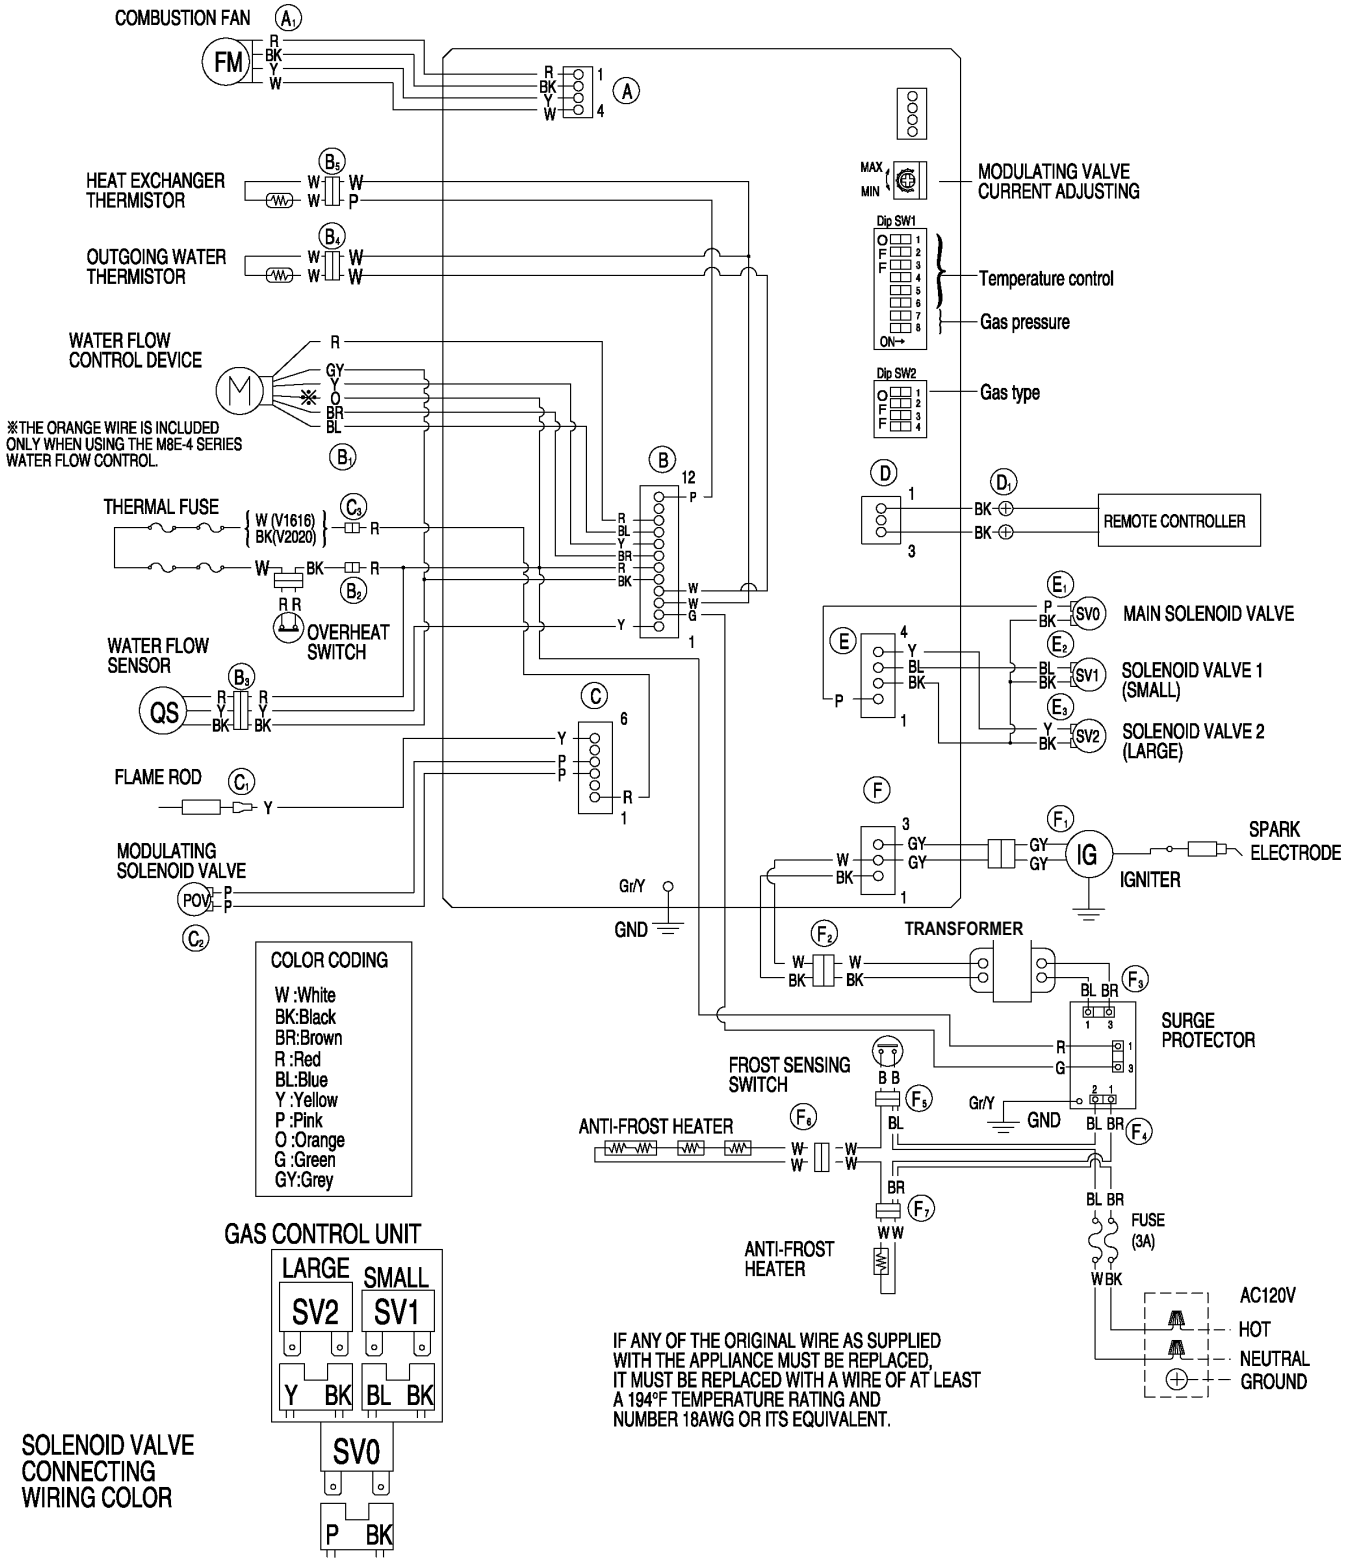

Wiring Diagram

R70e, R/C85e(PLUS)

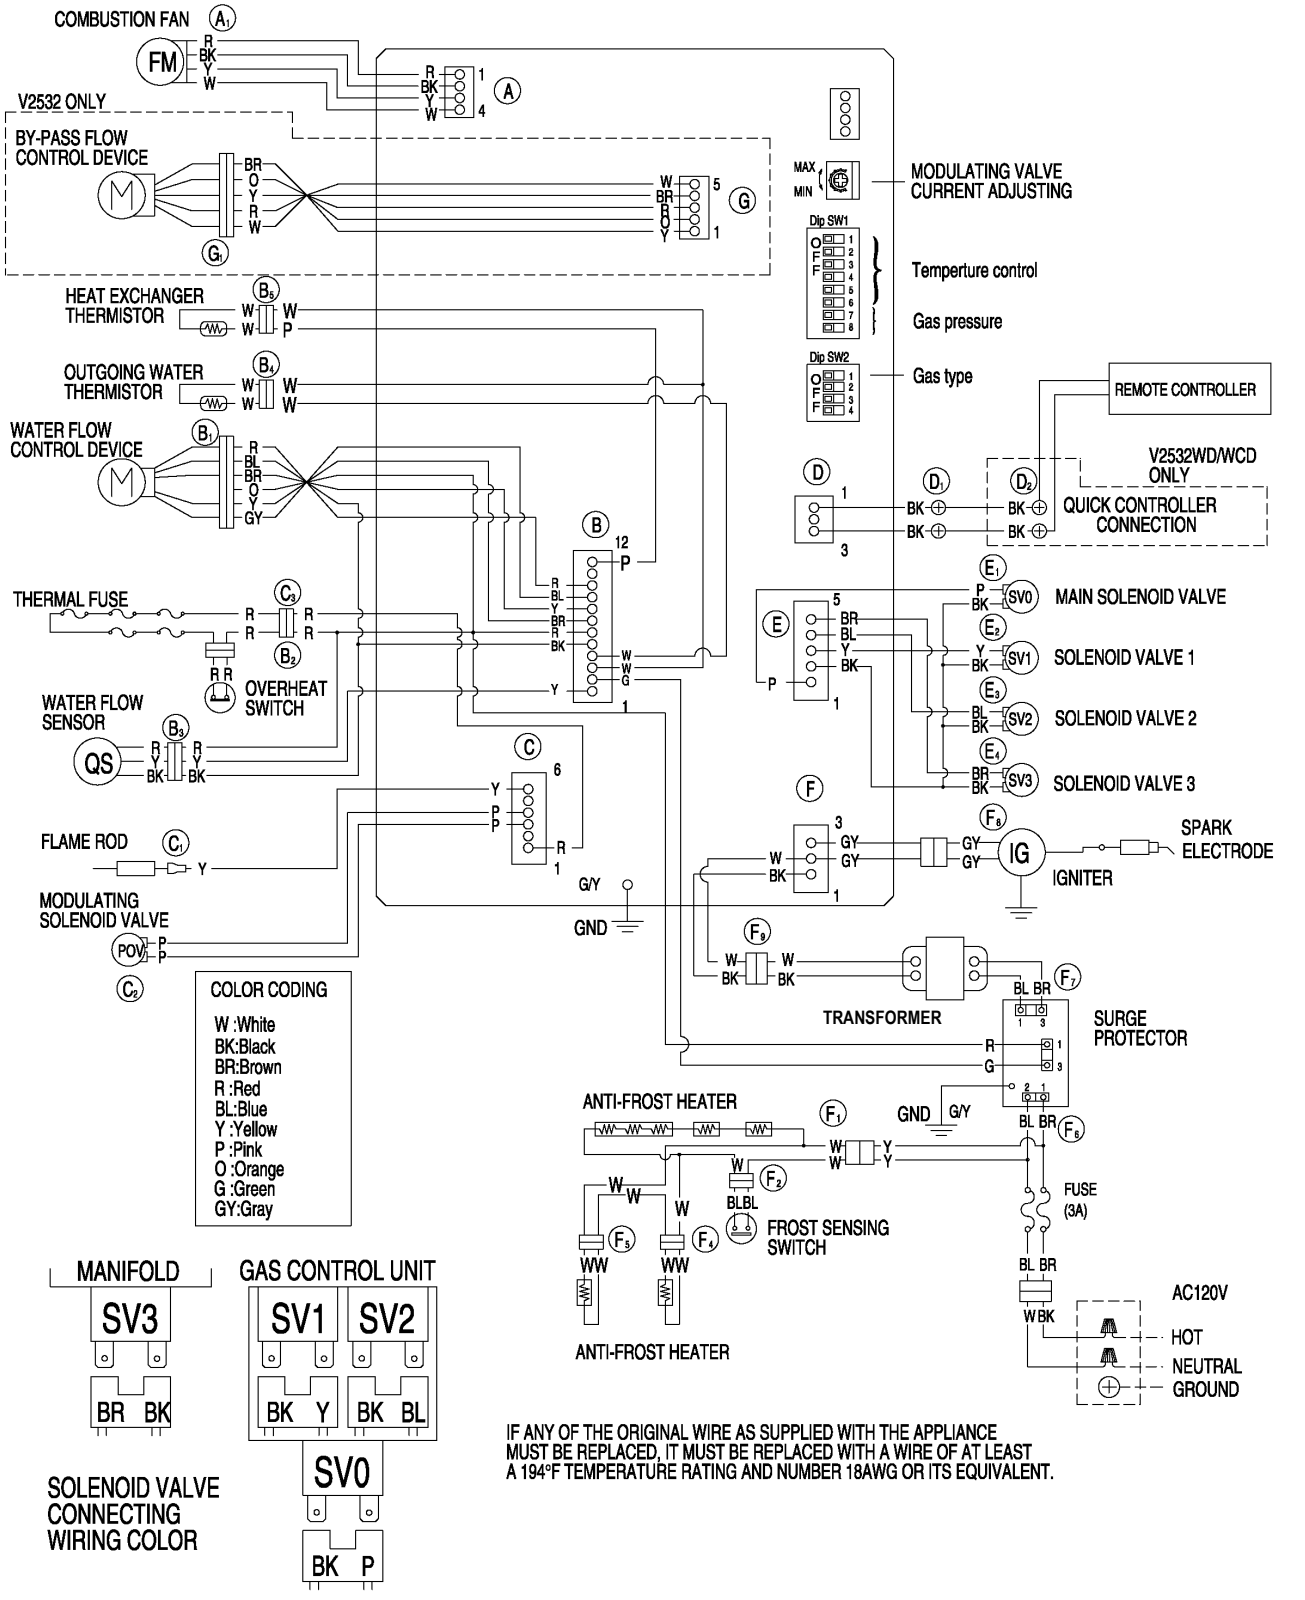

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH A WIRE OF AT LEAST A 194°F TEMPERATURE RATING AND NUMBER 18AWG OR ITS EQUIVALENT.

Wiring Diagram

R/C53i(PLUS),
R/C85i(PLUS)

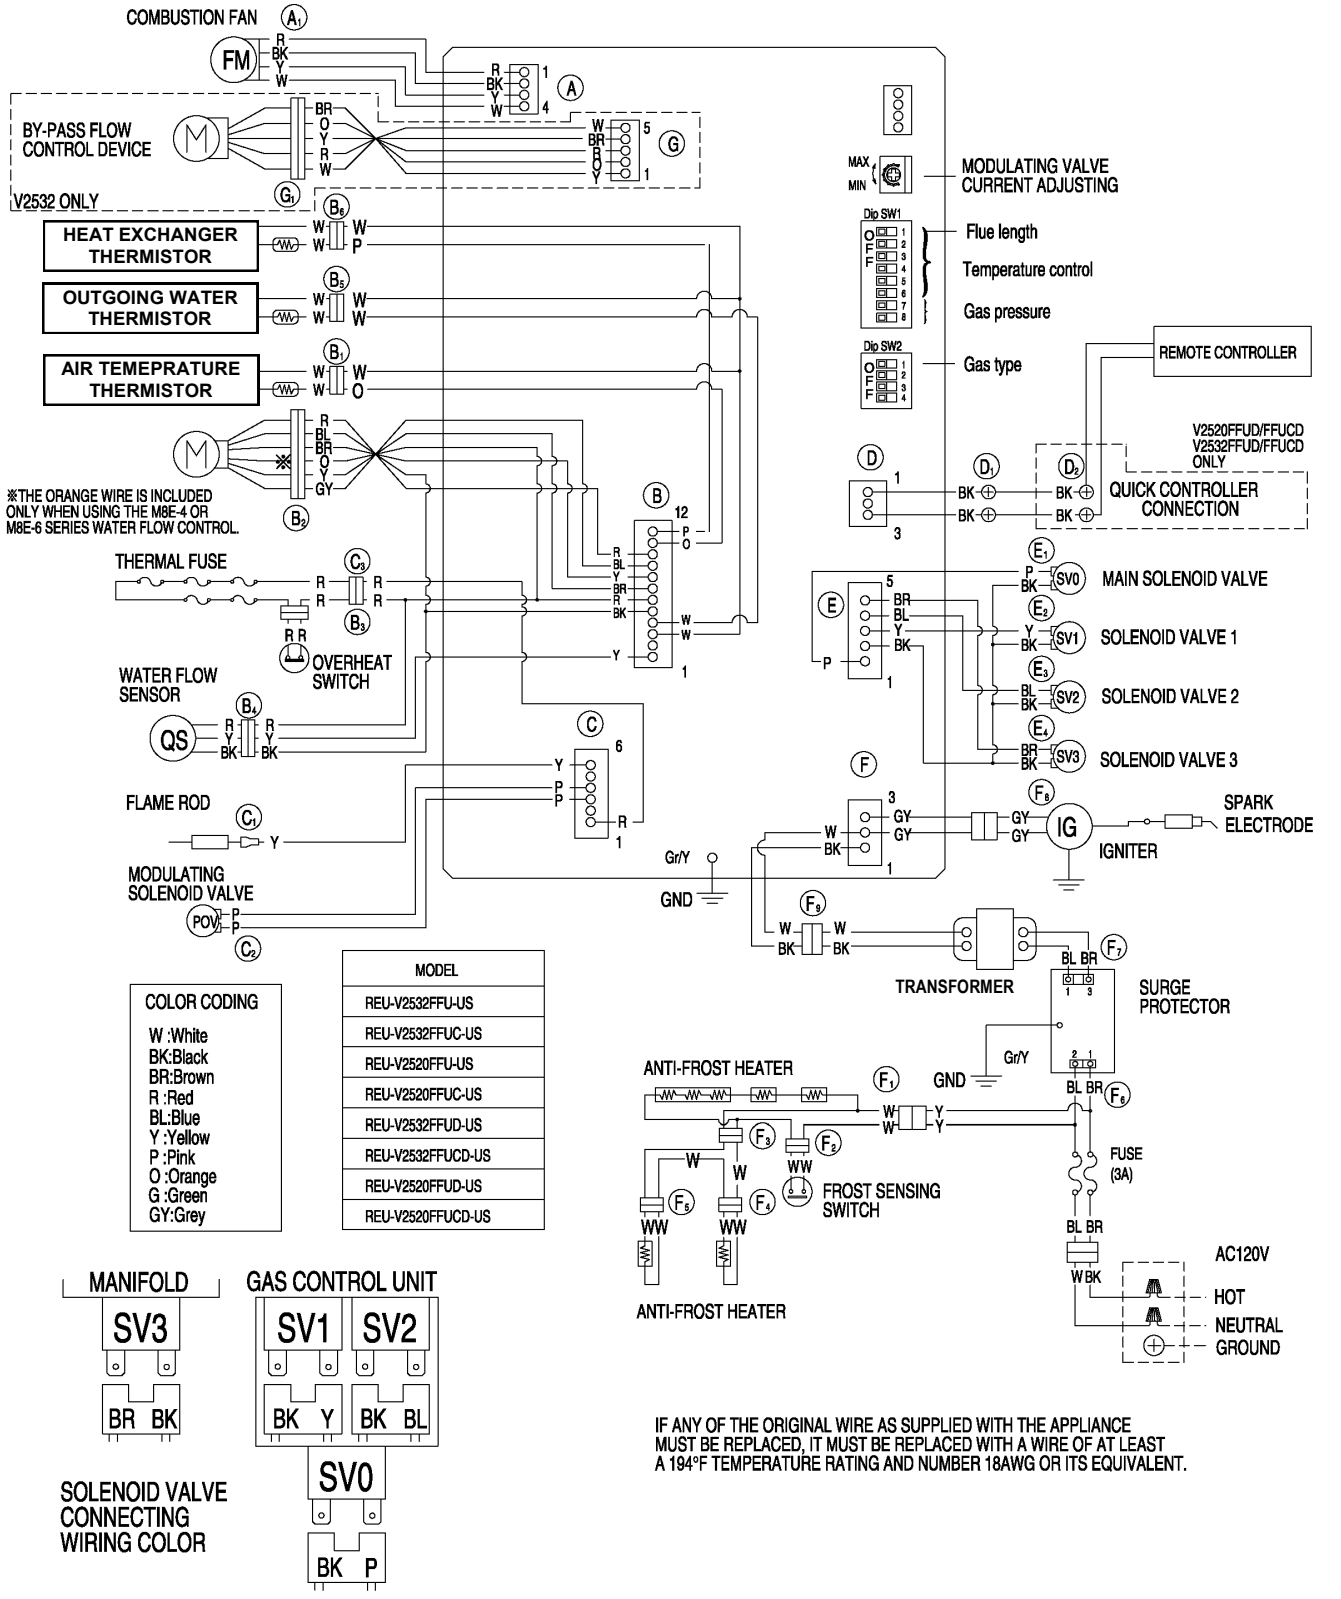

Wiring Diagram

R/C98i(ASME),
R/C98e(ASME)

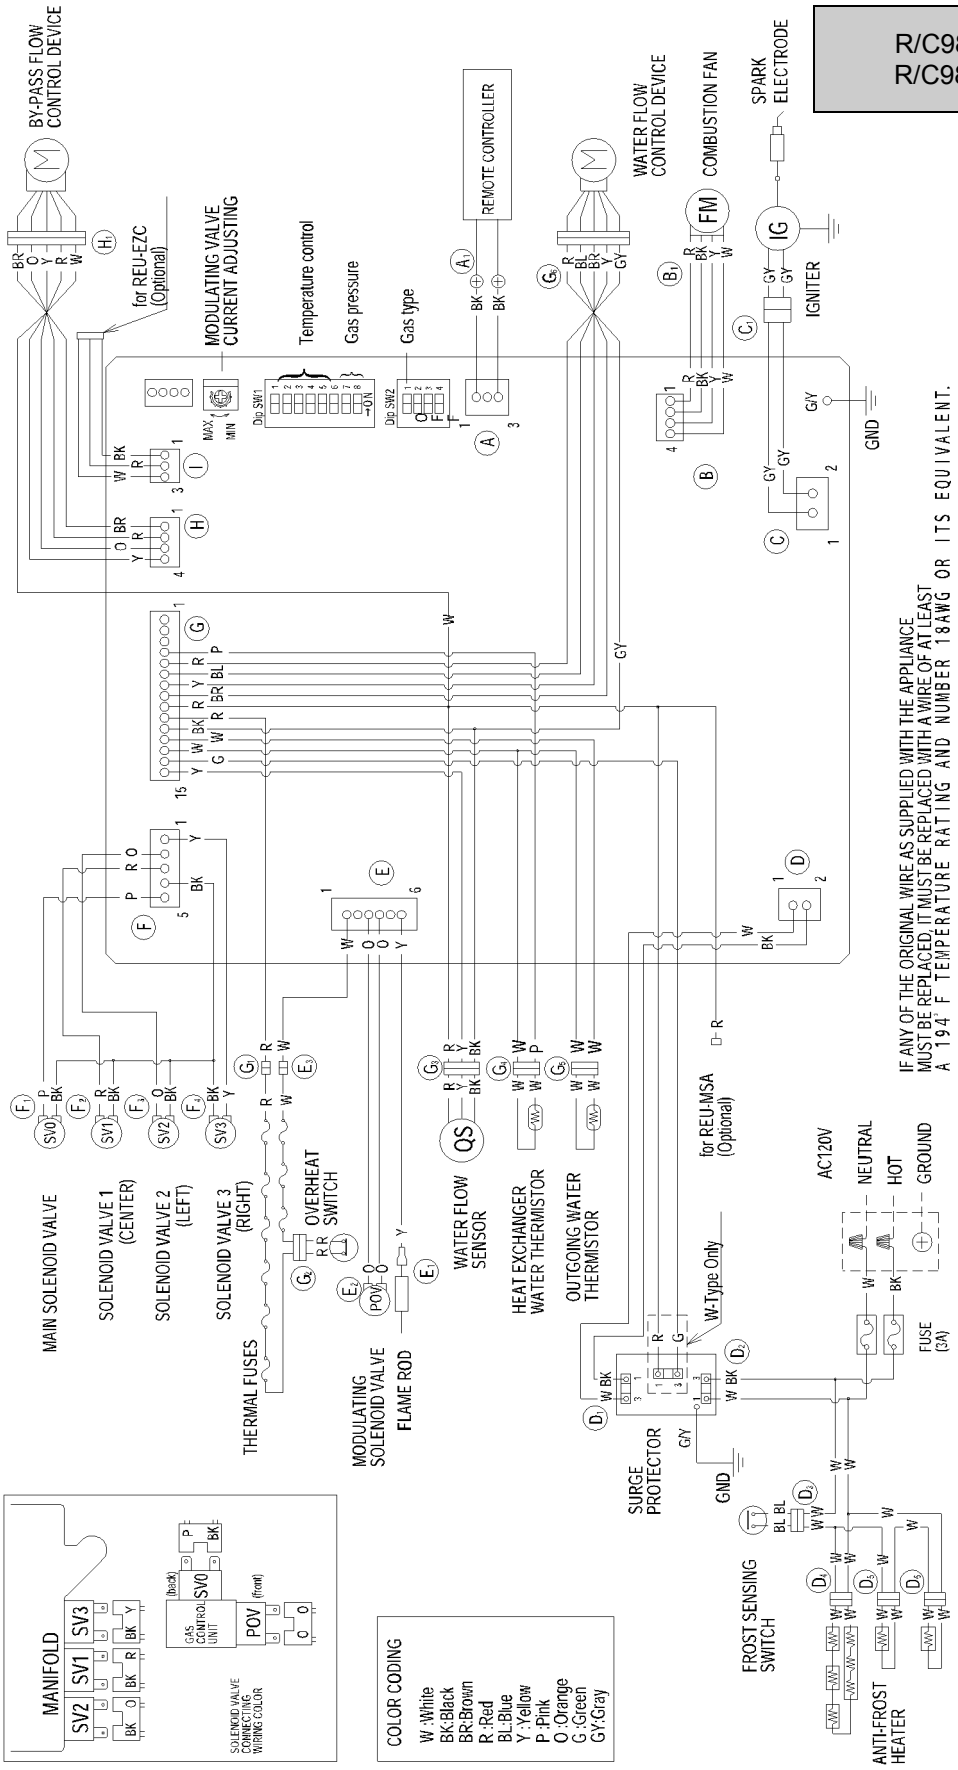

Wiring Diagram

V53e, R63LSe

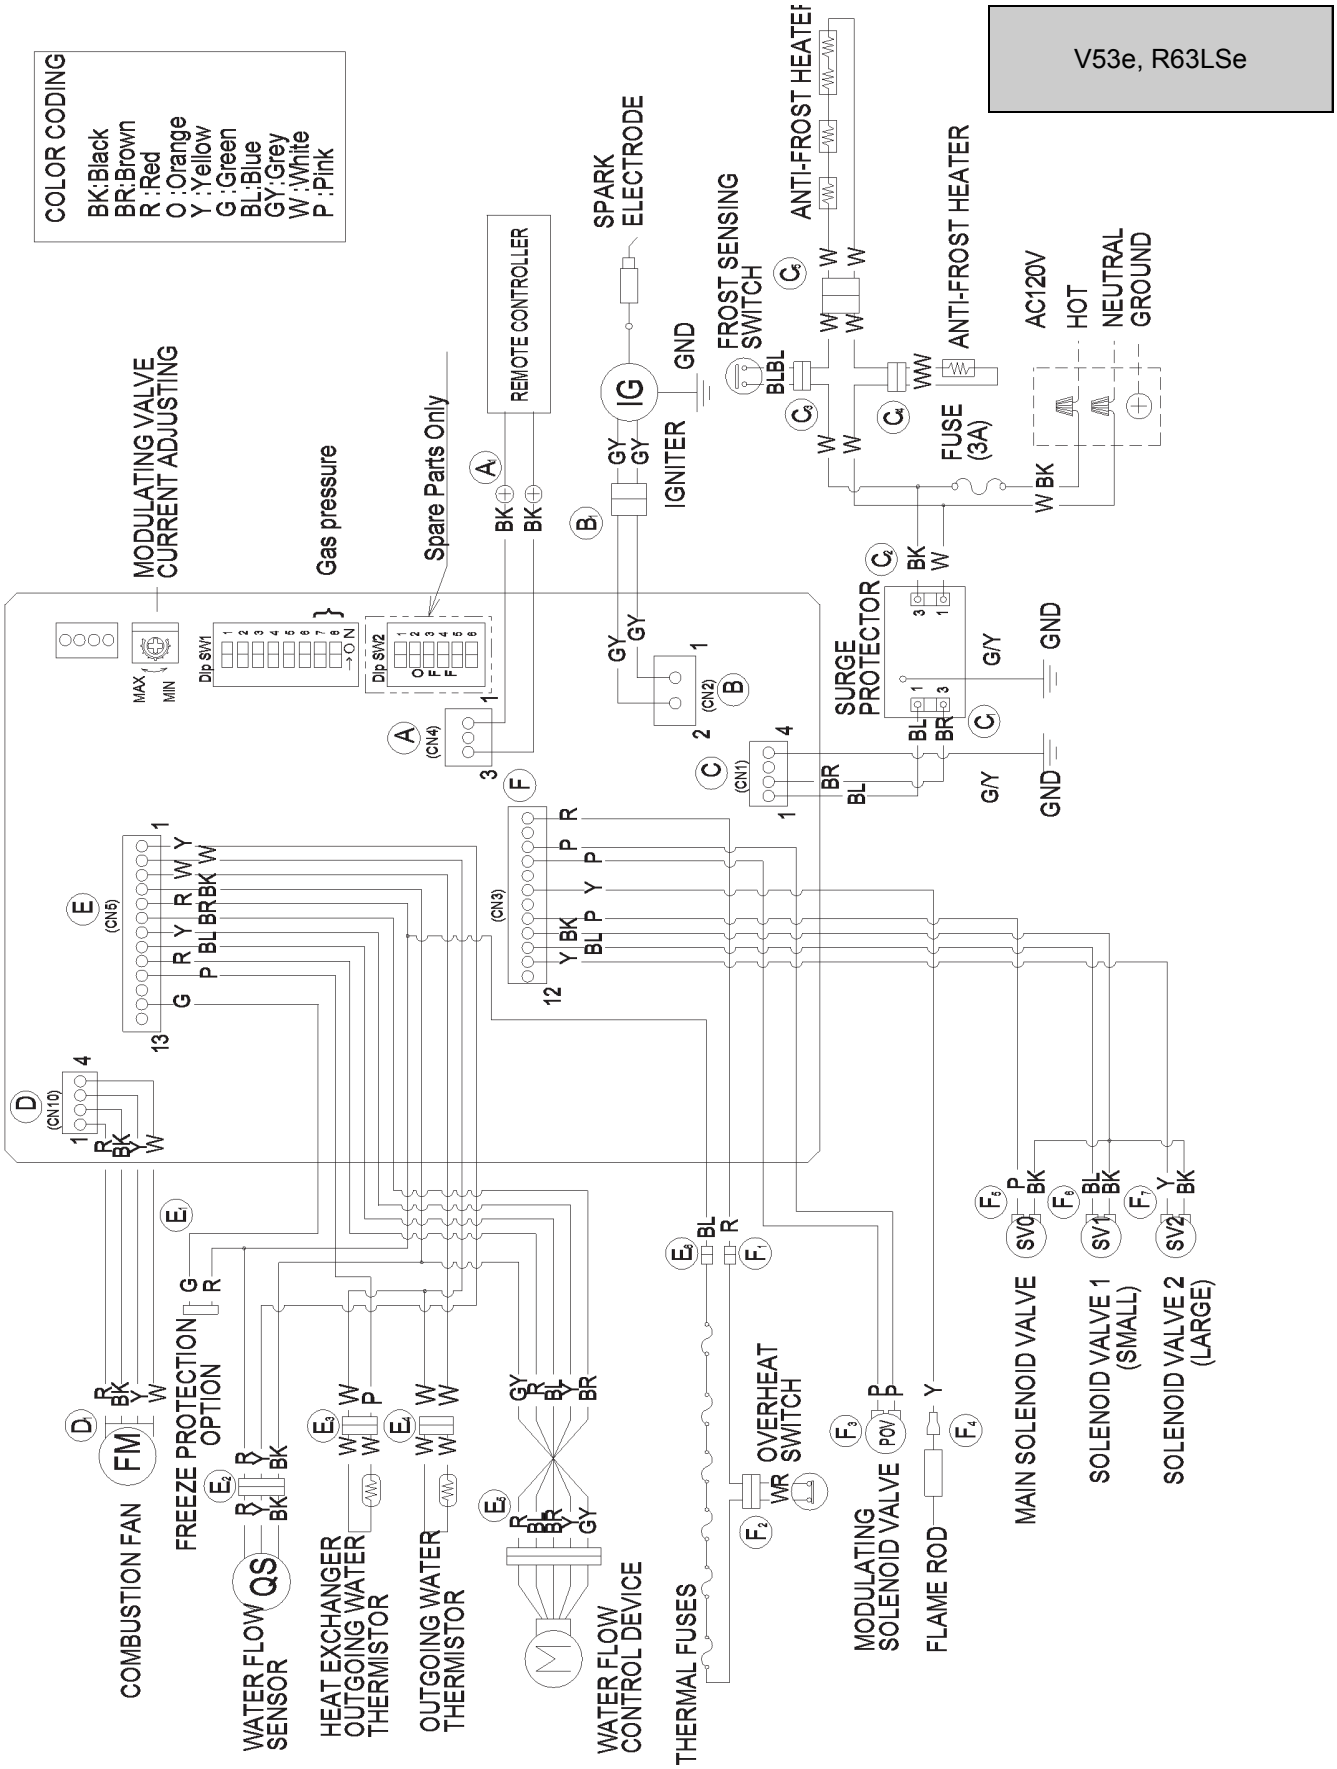

Wiring Diagram

R50LSi, R63LSe2, R75LSe-VA,
R75LSi-VA, R94LSe-VA, R94LSi-VA

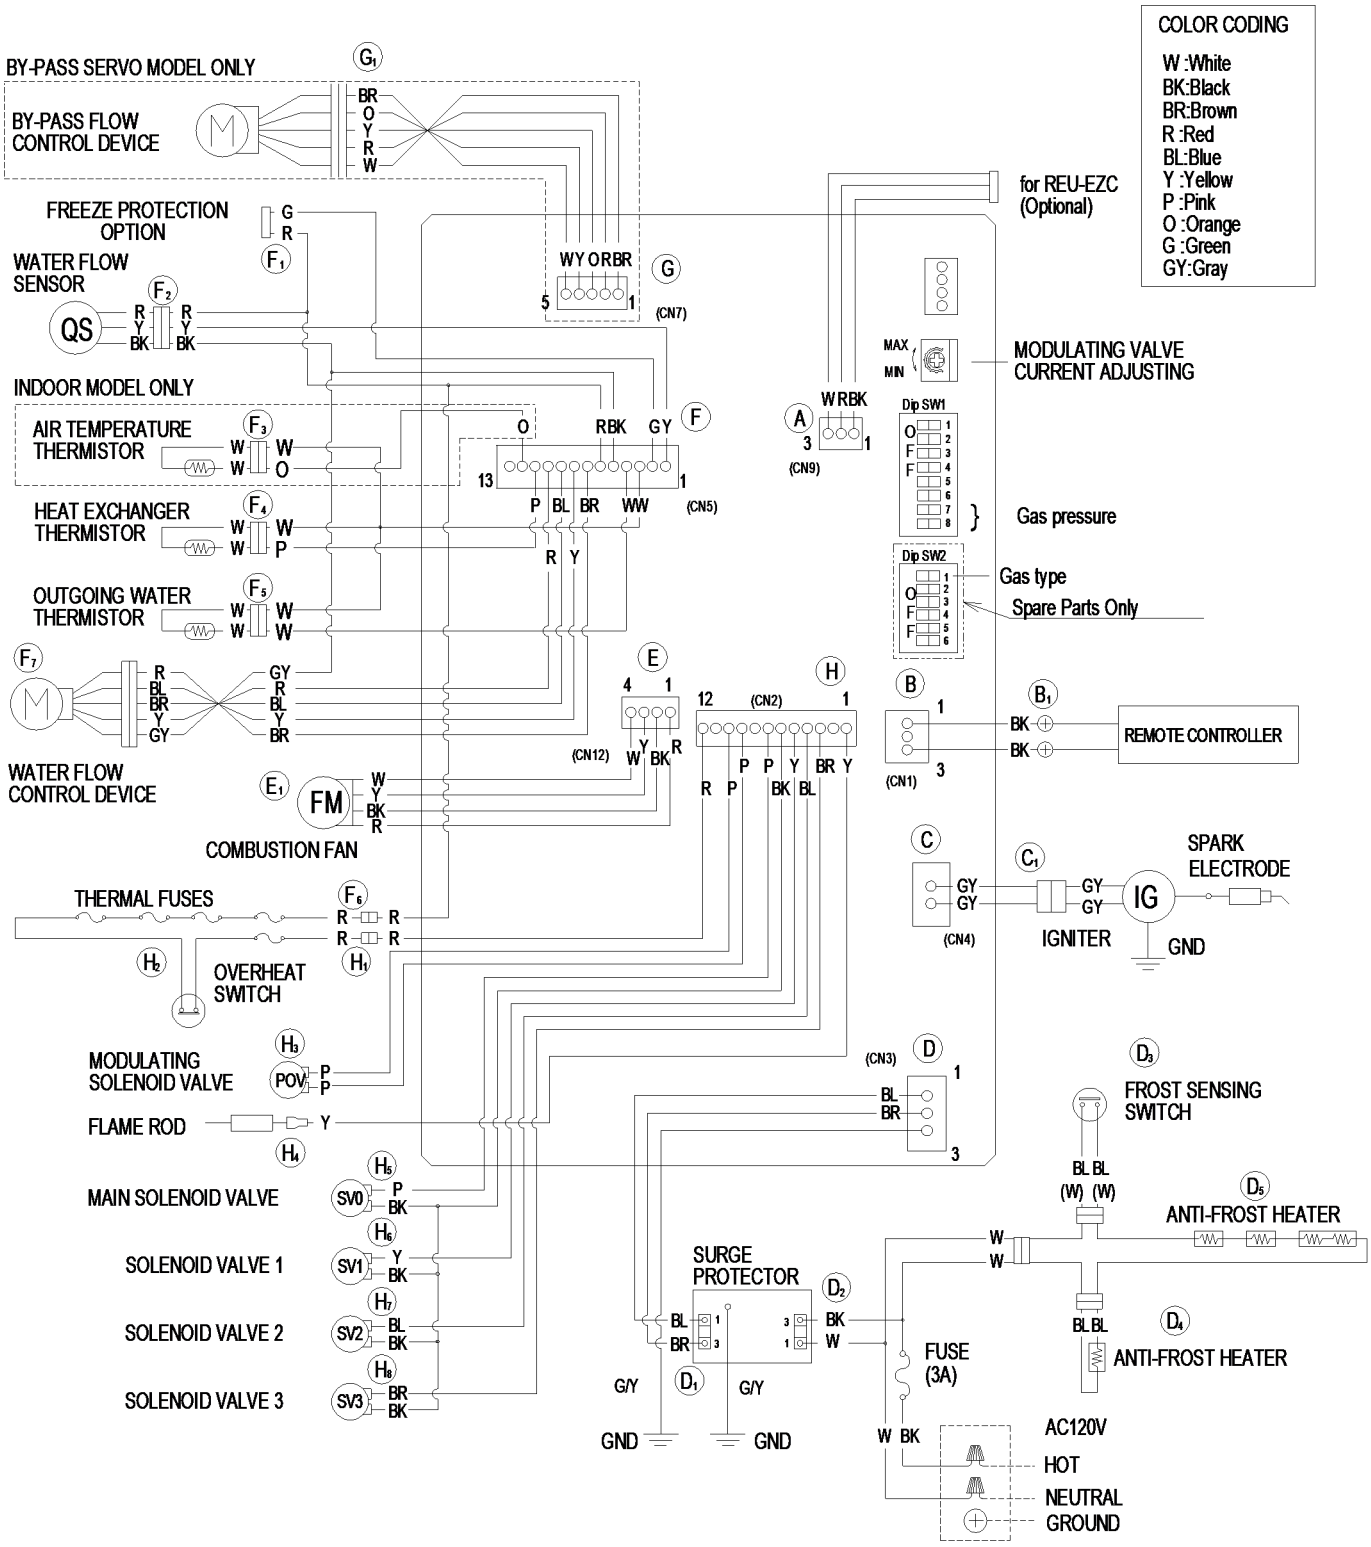

Wiring Diagram

R75LSe-VB, R75LSi-VB,
R94LSe-VB, R94LSi-VB

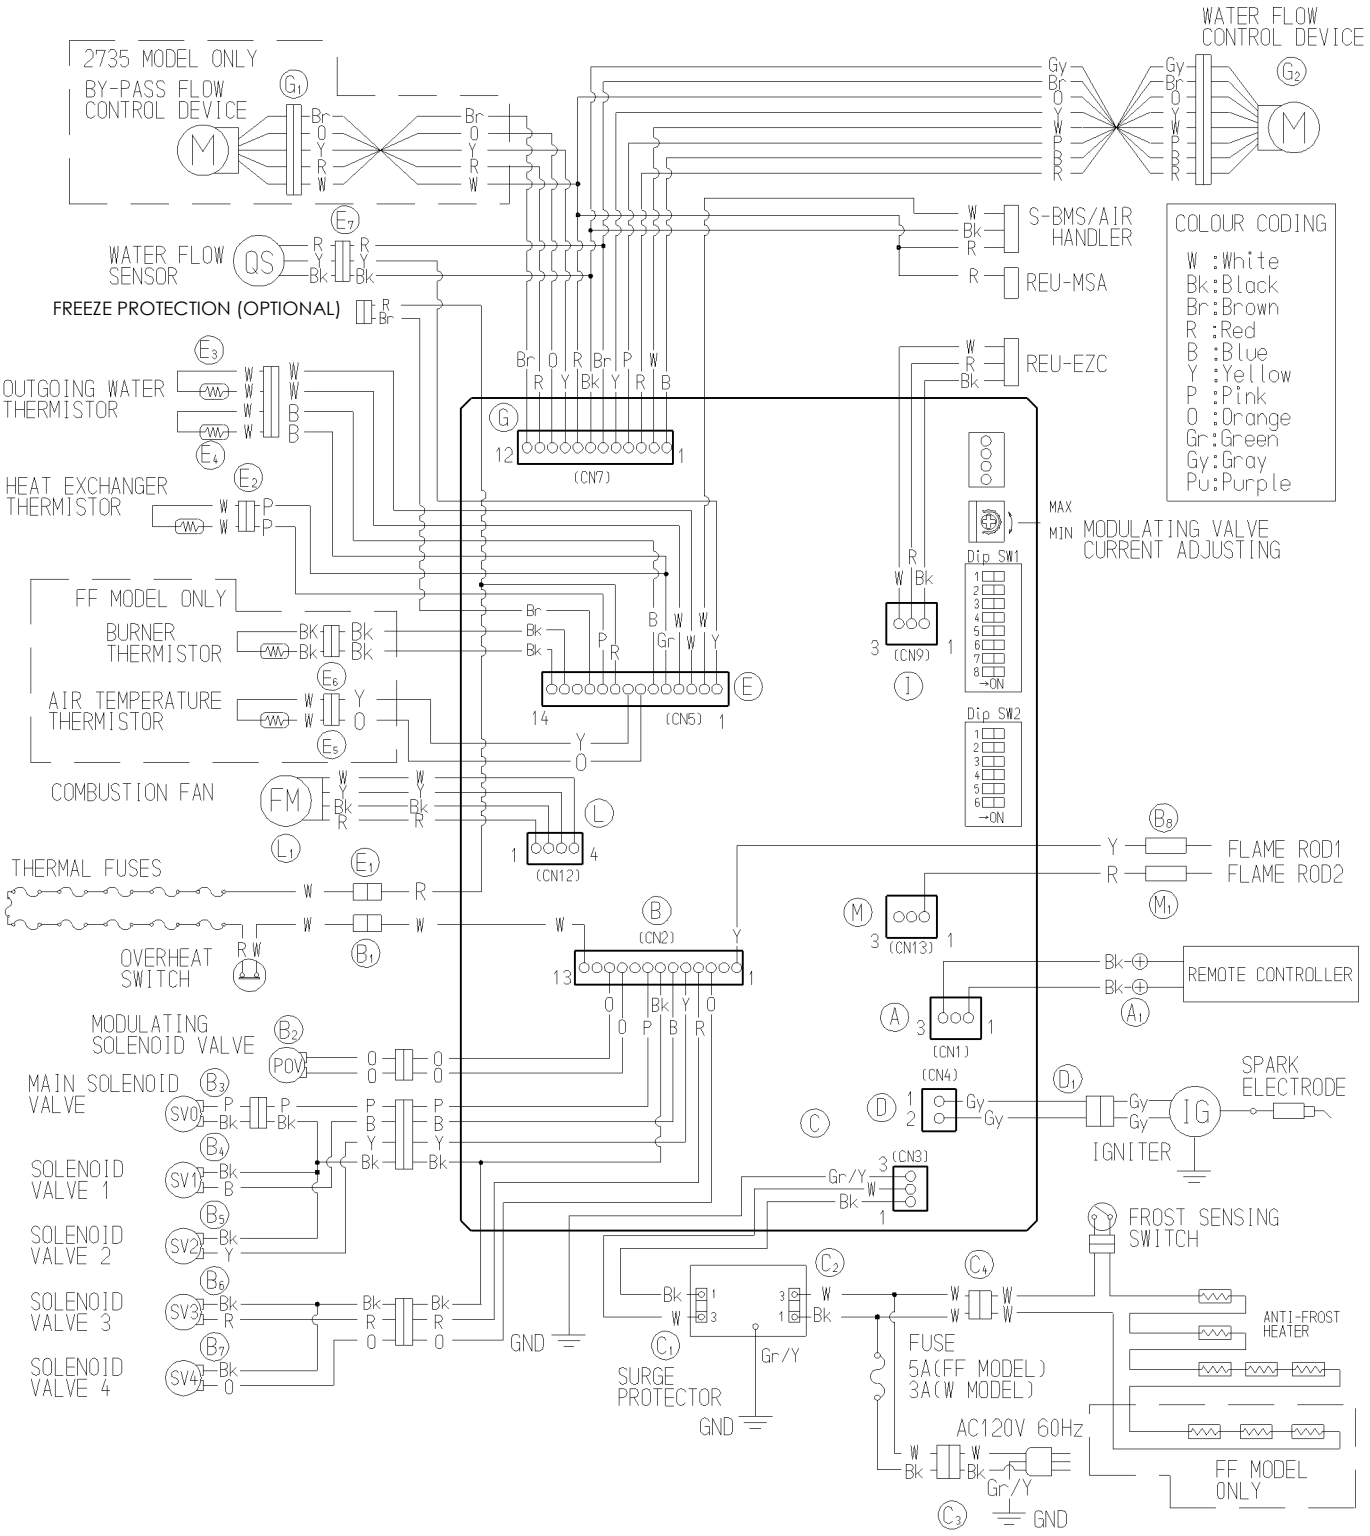

Wiring Diagram

V53i

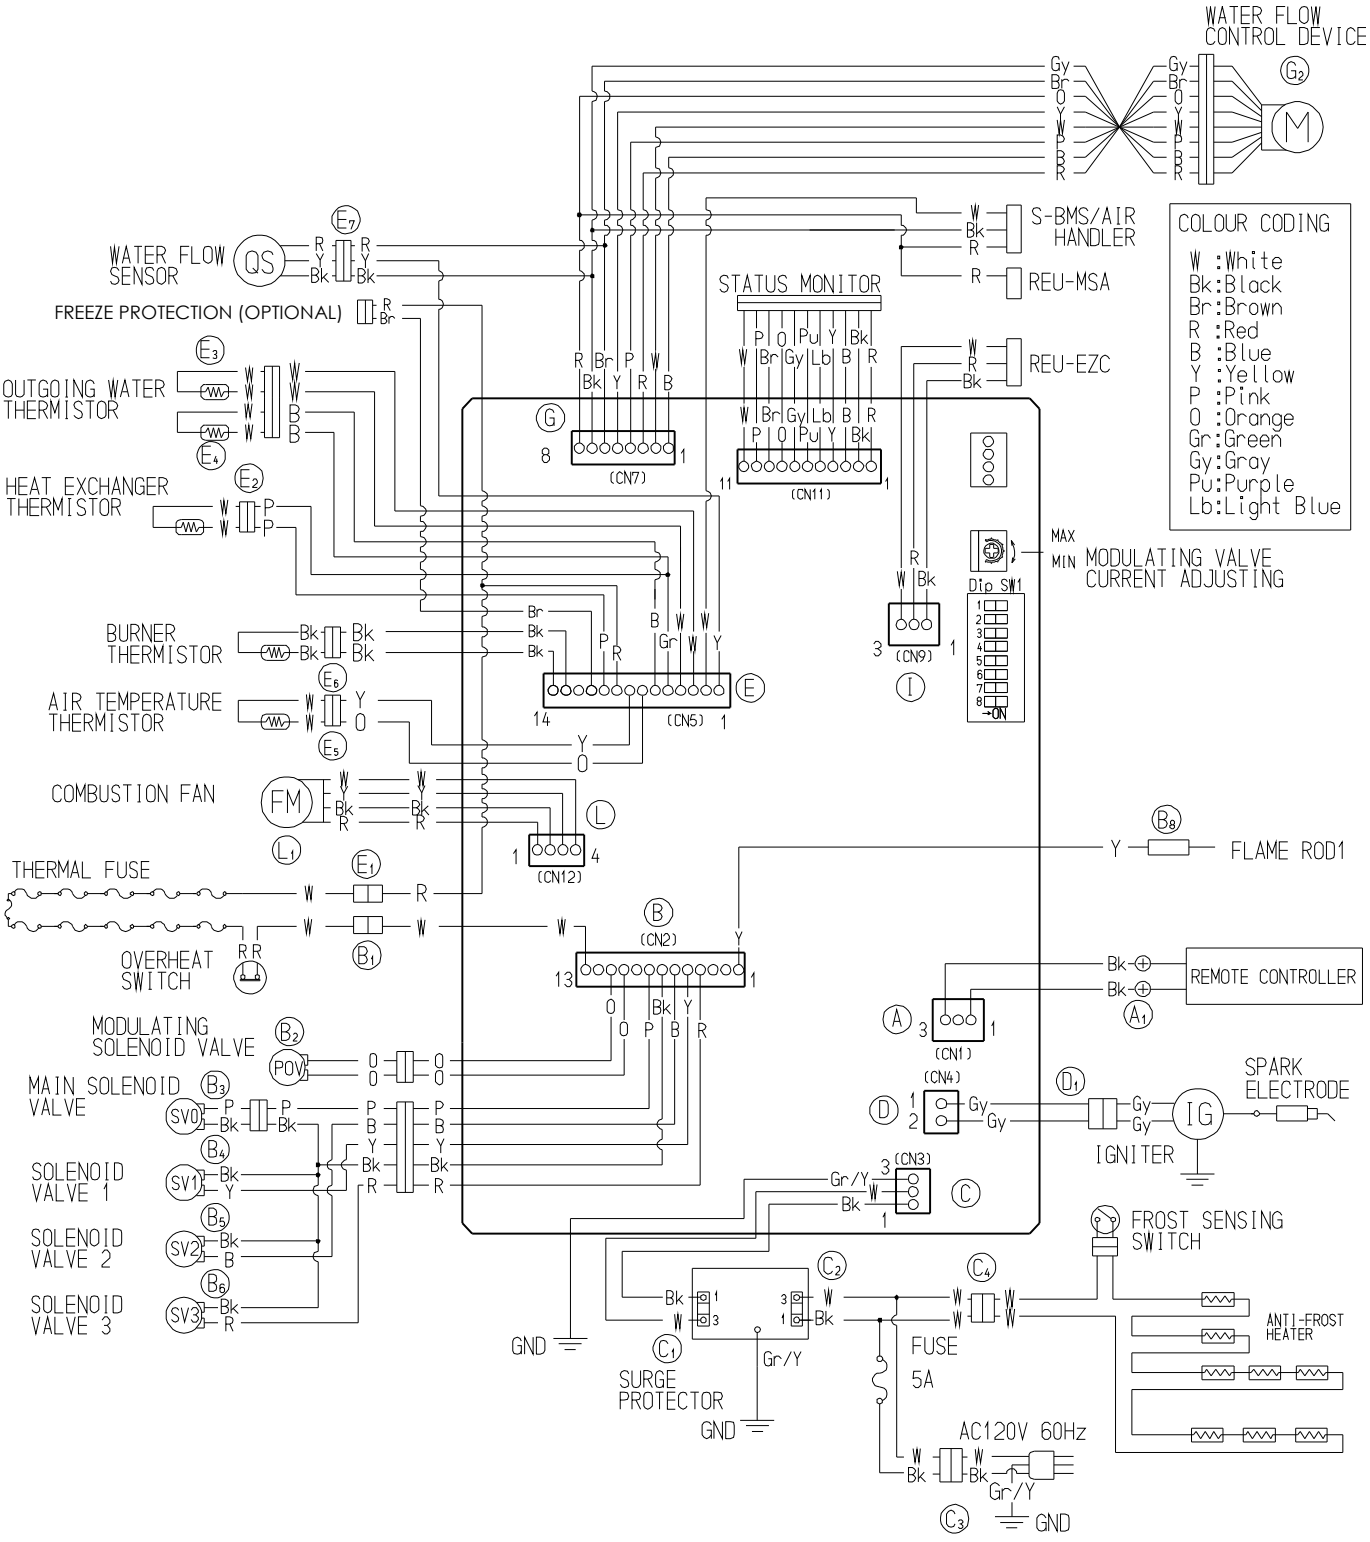

Wiring Diagram

R98LSe(ASME),
R98LSi(ASME)

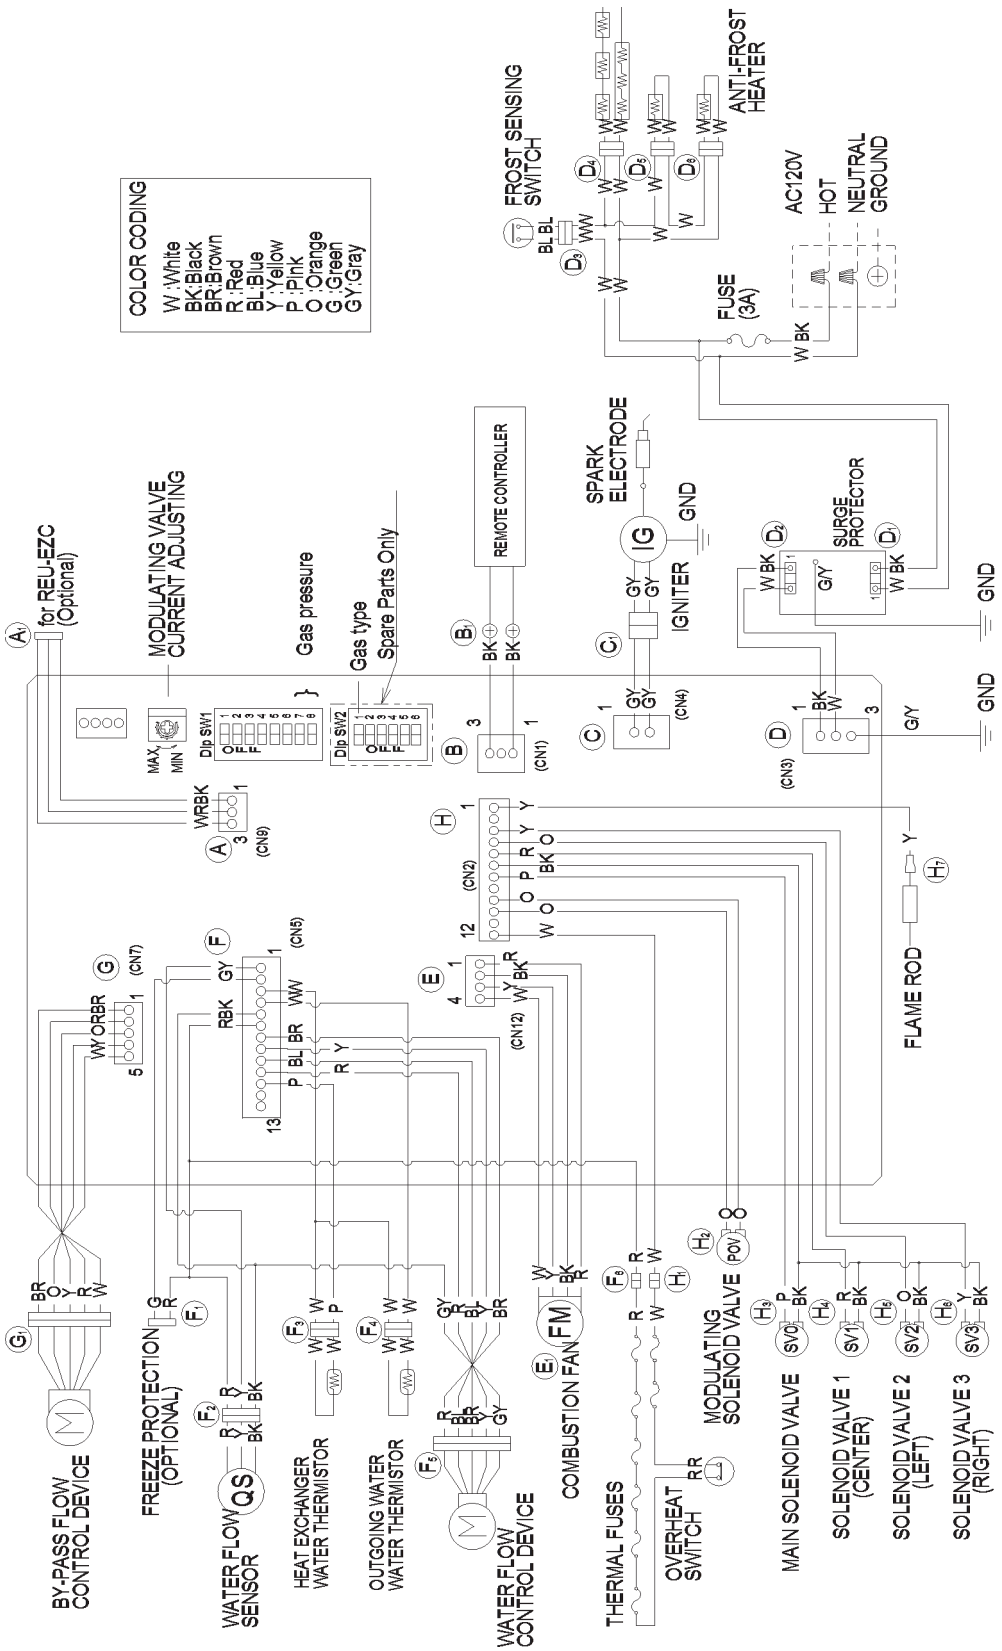

Wiring Diagram

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

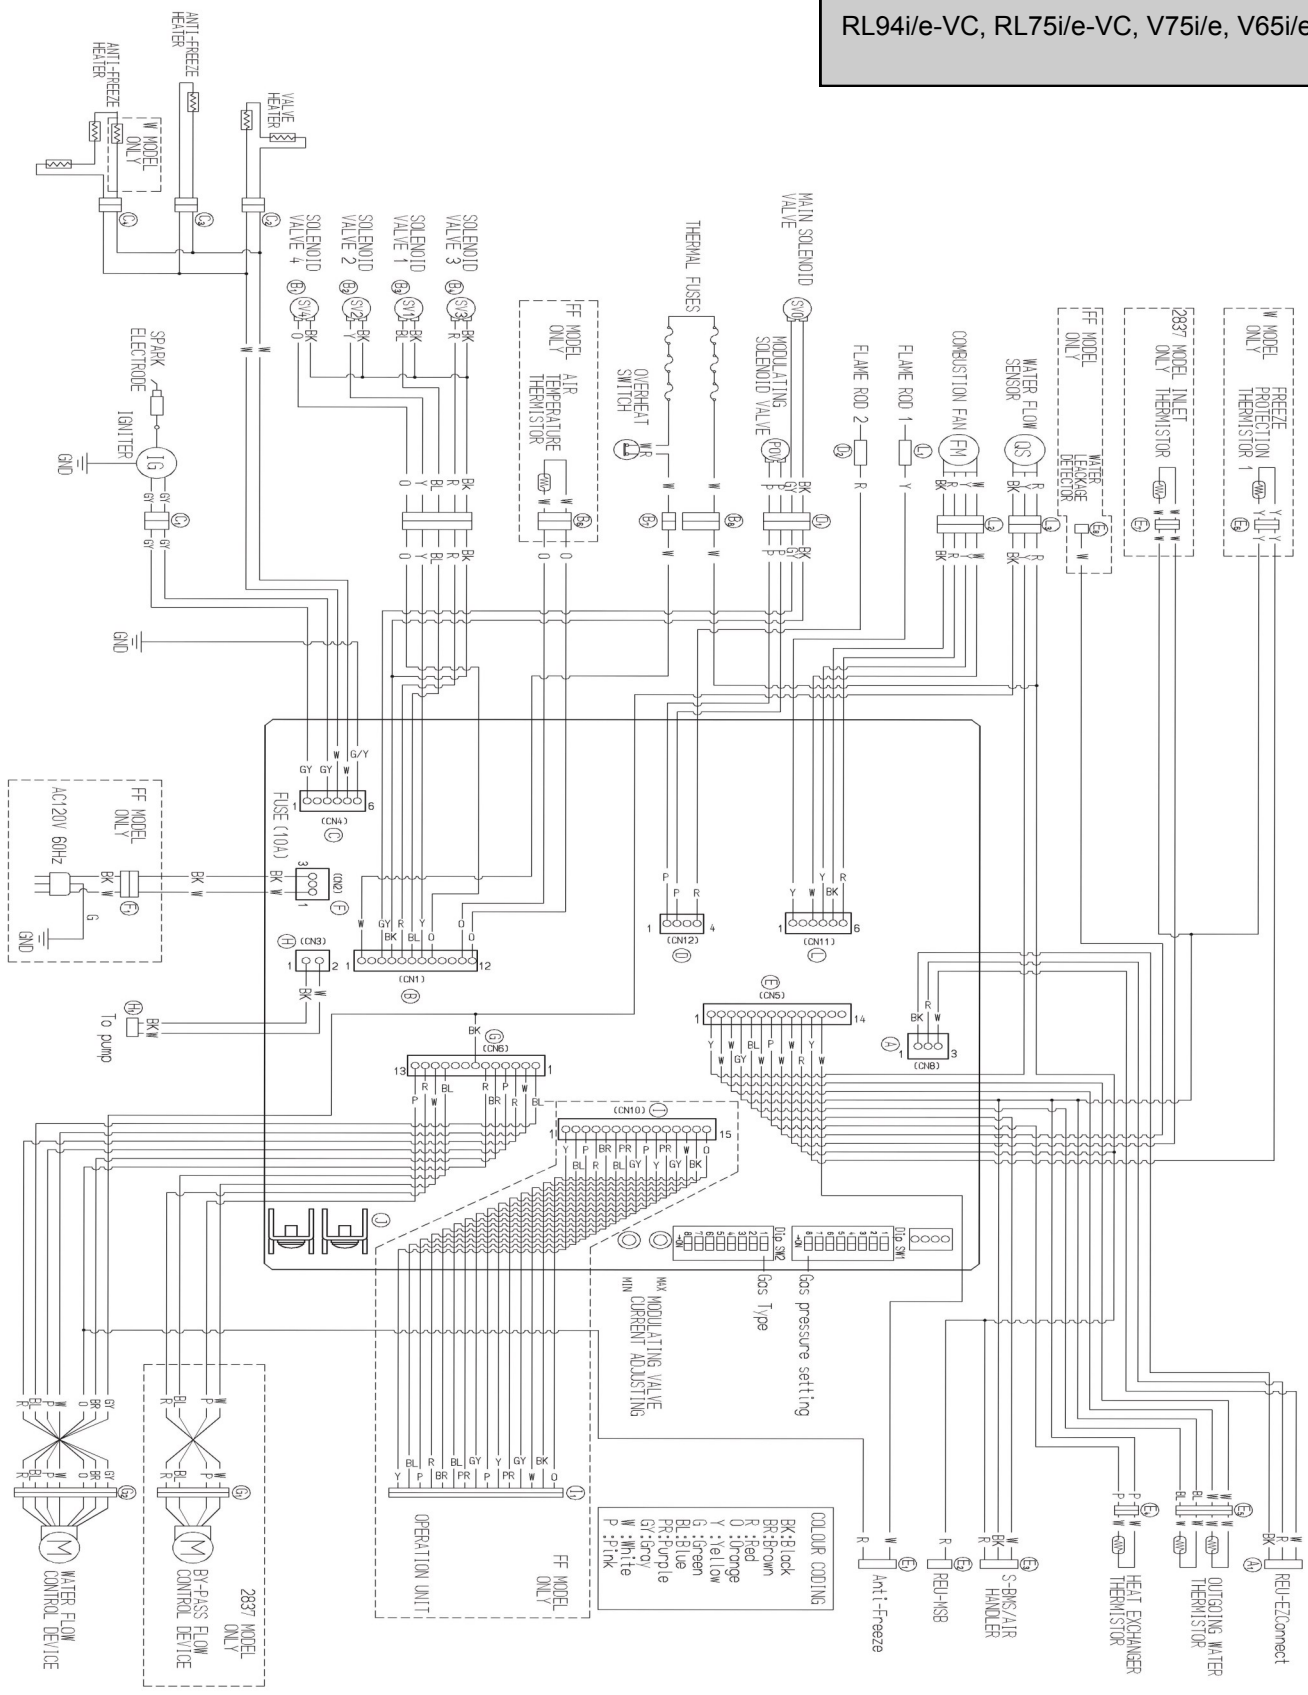

Flushing the Heat Exchanger

An “LC” or “00” error code indicates the unit is beginning to lime up and must be flushed. Failure to flush the appliance will cause damage to the heat exchanger. Damage caused by lime build-up is not covered by the unit’s warranty. After flushing, reset the LC fault code by turning off the power to the unit and turning the power back on.

1. Disconnect electrical power to the water heater.
2. Close the shutoff valves on both the hot water and cold water lines (V3 and V4).
3. Connect pump outlet hose (H1) to the cold water line at service valve (V2).
4. Connect drain hose (H3) to service valve (V1).
5. Pour 4 gallons of undiluted virgin, food grade, white vinegar into pail.
6. Place the drain hose (H3) and the hose (H2) to the pump inlet into the cleaning solution.
7. Open both service valves (V1 and V2) on the hot water and cold water lines.
8. Operate the pump and allow the cleaning solution to circulate through the water heater for at least 1 hour at a rate of 4 gallons per minute (15.1 liters per minute).
9. Turn off the pump.
10. Rinse the cleaning solution from the water heater as follows:
    a. Remove the free end of the drain hose (H3) from the pail. Place in sink or outside to drain.
    b. Close service valve, (V2), and open shutoff valve, (V4). Do not open shutoff valve, (V3).
    c. Allow water to flow through the water heater for 5 minutes.
    d. Close shutoff valve (V4). When unit has finished draining remove the in-line filter at the cold water inlet and clean out any residue. Place filter back into unit and open valve (V4).
    e. Close service valve, (V1), and open shutoff valve, (V3).
11. Disconnect all hoses.
13. Restore electrical power to the water heater.

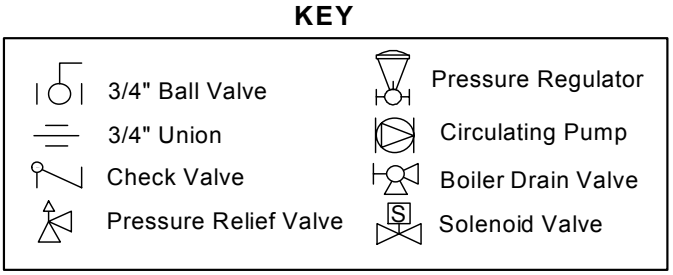

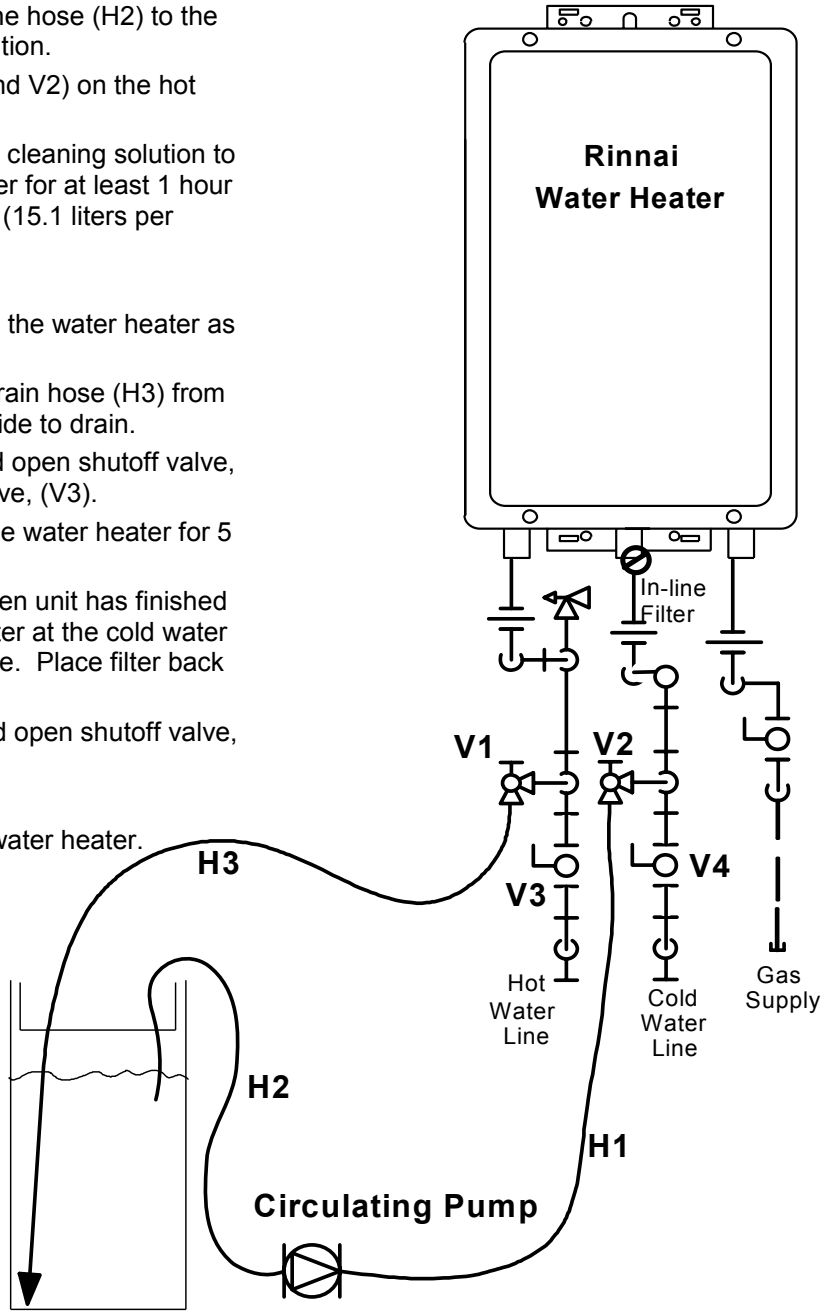

Manual Draining of the Water Heater

⚠ WARNING To avoid burns, wait until the equipment cools down before draining the water. The water in the appliance will remain hot after it is turned off.

If the water heater is not going to be used during a period of possible freezing weather, it is recommended that the water inside the water heater be drained.

To manually drain the water:

1. Shut off cold water supply, hot water valve and gas supply.
2. Turn off the temperature controller.
3. Disconnect the power to the water heater.
4. Remove the drain caps on both isolation valves and open both valves above the caps (blue and red valve handles). -OR- Open hot water drain plug at the hot water outlet.
5. Remove water filter to drain the cold water.

To resume normal operation:

1. Confirm that all water drain plugs are removed, that the gas supply is turned off, and that all taps are closed.
2. Screw in the water filter in the cold water inlet.
3. Replace the drain caps and close both isolation valves. -OR- Screw in the hot water drain plug.
4. Open the cold water supply and hot water valve.
5. Open a tap and confirm that water flows, and then close.
6. Turn on the power.
7. After confirming that the temperature controller is off, turn on the gas supply.
8. Turn on the temperature controller.

* Use a wrench or other tool to unscrew the hot water drain plug.

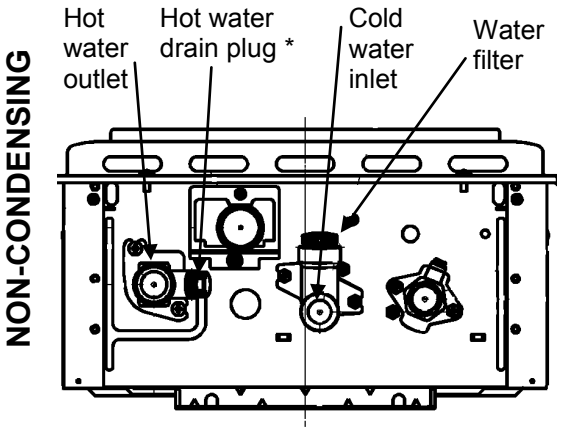

Running a low volume of water through the water heater to prevent freezing

If the temperature exceeds the ability of the water heater to freeze protect itself, or if power is lost, the following steps may prevent the water heater and external piping from freezing. (Units connected with EZConnect™ should be drained to prevent freezing if not in use.)

1. Turn the water heater off.
2. Close the gas supply valve.
3. Turn on a hot water tap to flow water about 0.1 gal/min or where the stream is about 0.2 inches thick.

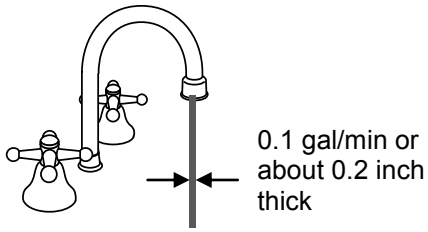

When the water heater or external piping has frozen

1. Do not operate the water heater if it or the external piping is frozen.
2. Close the gas and water valves and turn off the power.
3. Wait until the water thaws. Check by opening the water supply valve.
4. Check the water heater and the piping for leaks.

Component Replacement Instructions

Gas Control Assembly

R/C42e, R/C53e, V53e, R63LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Remove four screws securing the front panel. Remove front panel.
4. Move aside the ignition line by pulling it out from the clear plastic tubing. (Figure 1)
5. Remove the six screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly). (Figure 1)
6. Remove the three screws that attach the gas manifold to the gas valve. Pull out the gas manifold. (Figure 1)

Figure 1

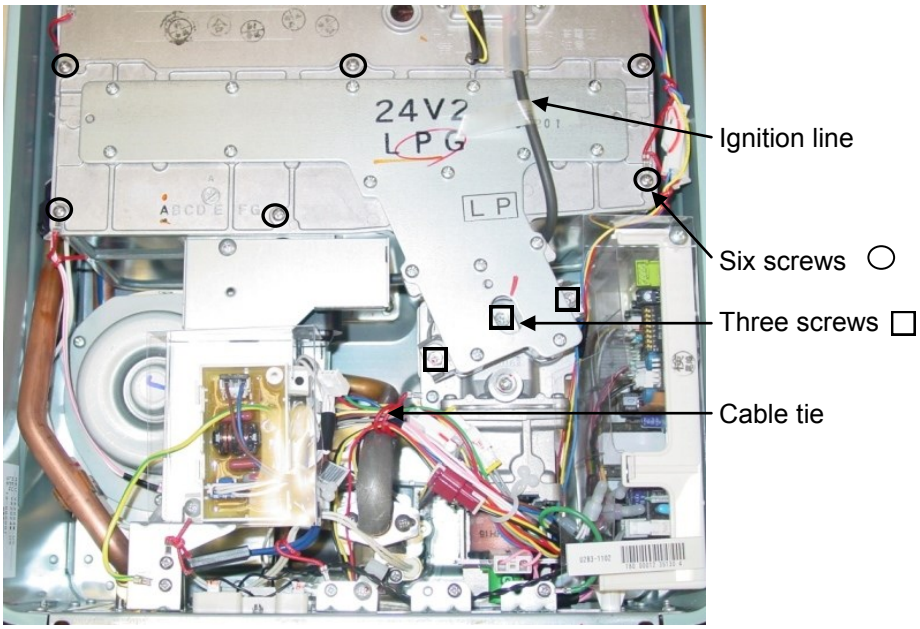

7. Remove the screw on the gas valve holding the cable tie.
8. Remove the 3 screws attaching the gas connection to the underneath side of the water heater. (Figure 2)

Figure 2

9. Pull the gas connection down to disconnect it from the gas control assembly.
10. Pull out the gas control assembly. Remove the wire harness from the 4 solenoids.

Gas Control Assembly

R/C42e, R/C53e, V53e, R63LSe

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

11. Install the gas valve and attach the wire harness to the 4 solenoids. (Figure 3)
12. Install the gas connection with 3 screws.

Figure 3

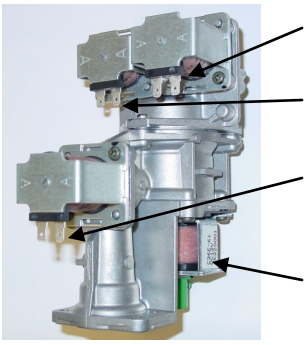

13. Replace the o-ring between the gas valve and the gas connection.
14. Replace the two circular gaskets (included in kit) in the gas valve. (Figure 4) Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.
15. Start the three screws that attach the gas manifold to the gas valve. Tighten the six screws that hold the gas manifold to the combustion chamber. Finish tightening the three screws that hold the gas manifold to the gas valve.
16. Attach ignition line.
17. Perform the Gas Pressure Setting Procedure.

Figure 4

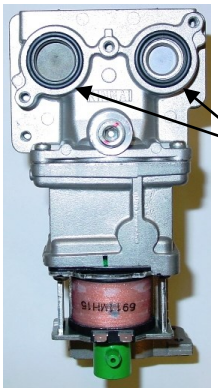

Component Replacement Instructions

Gas Control Assembly

R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, R63LSe2, V53i, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Remove four screws securing the front panel. Remove front panel.
4. Indoor models only: Remove the temperature controller and bracket by sliding up and out of the slots. On the V53i remove the status monitor from the bottom of the manifold (one screw).
5. Pull out wire harness connector at the gas manifold assembly. See Figure 1.
6. Move aside the ignition line by pulling it out from the clear plastic tubing.
7. Remove the six screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly).
8. Remove the three screws that attach the gas manifold to the gas valve. Pull out the gas manifold.

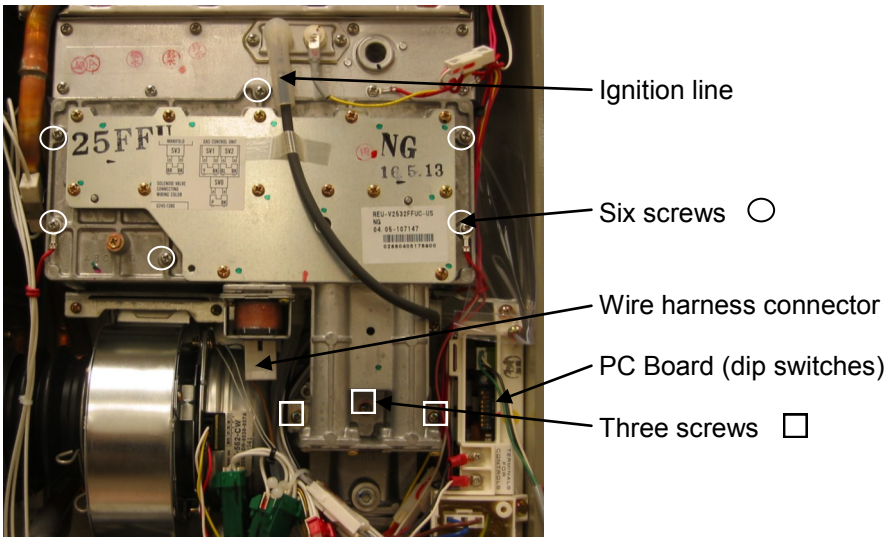

Figure 1

9. Remove the four screws attaching the gas connection to the underneath side of the water heater. Figure 2.

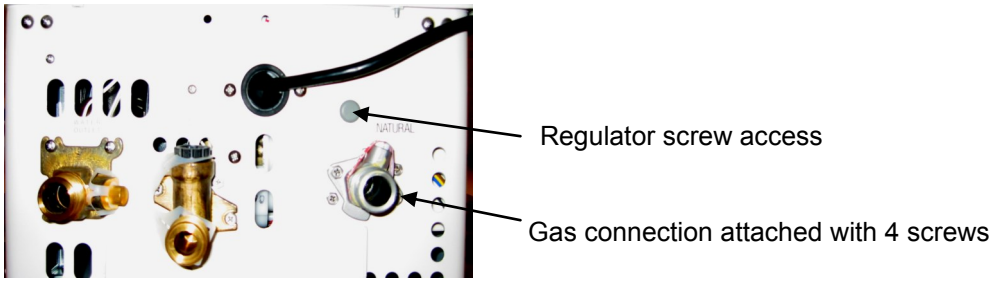

Figure 2

10. Pull the gas connection down to disconnect it from the gas control assembly.
11. Pull out the gas control assembly. Remove the wire harness from the 4 solenoids.

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

12. Replace the O-ring (included in kit) where the assembly attaches to the gas connection. Make sure the old O-ring is removed and discarded. Install the new gas control assembly.

12. Attach wire harness to the solenoids as shown in Figure 3 below.

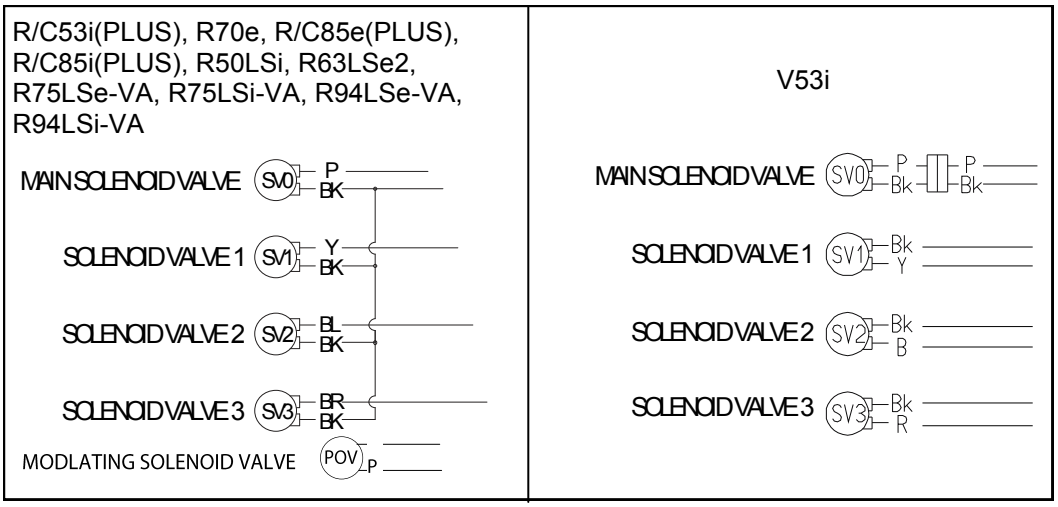
R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, R63LSe2, R75LSe-VA, R75LSi-VA, R94LSe-VA, R94LSi-VA
MAIN SOLENOID VALVE SV0 P BK
SOLENOID VALVE 1 SV1 Y BK
SOLENOID VALVE 2 SV2 BL BK
SOLENOID VALVE 3 SV3 BR BK
MODLATING SOLENOID VALVE POV P
V53i
MAIN SOLENOID VALVE SV0 P Bk P Bk
SOLENOID VALVE 1 SV1 Bk Y
SOLENOID VALVE 2 SV2 Bk B
SOLENOID VALVE 3 SV3 Bk R

Figure 3

13. Remove old packing from gas manifold. Install the gas manifold using 2 new packings (included in kit) between the manifold and the heat exchanger. (Figure 4).
14. Replace the two circular gaskets (included in kit) in the gas valve (Figure 5). Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.

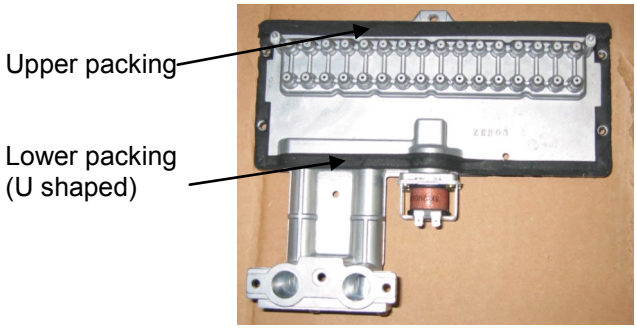

Figure 4

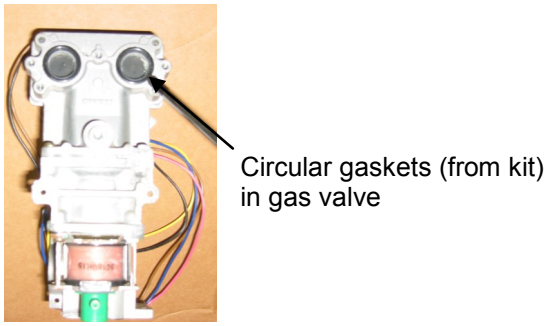

Figure 5

15. Start the three screws that attach the gas manifold to the gas valve. Tighten the six screws that hold the gas manifold to the combustion chamber. Finish tightening the three screws that hold the gas manifold to the gas valve.
16. Attach wiring harness connector (black & brown wires) to the gas manifold.
17. For indoor models only, install the temperature controller and bracket or for the V53i install the status monitor.
18. Attach ignition line.
19. Perform the Gas Pressure Setting Procedure.

Gas Control Assembly

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME)

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Remove four screws securing the front panel. Remove front panel.
4. On indoor models, remove the bracket holding the controller (1 screw). (Figure 1)
5. Move aside the ignition line by pulling it out from the clear plastic tubing. (Figure 2)
6. Disconnect 3 solenoid harnesses from the bottom of the manifold.
7. Remove the 5 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly). (Figure 2)
8. Remove the 2 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations. (Figure 2)
9. Pull out the gas manifold and remove the connector at the ignitor at the left side of the gas manifold.
10. Remove the 3 screws attaching the gas connection to the under side of the water heater. (Figure 3)
11. Remove the screw attaching the gas valve to the rear of the case. (Figure 2)
12. Pull the gas connection down to disconnect it from the gas control assembly.

Bracket screw

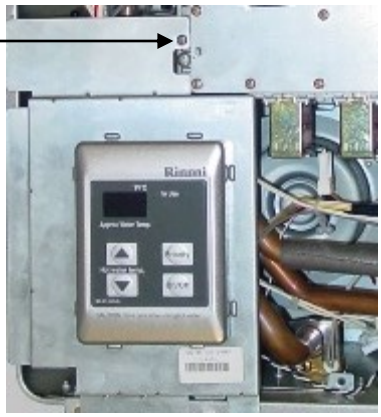

Figure 1

(indoor models)

5 screws ◯ (gas manifold)

2 machine screws □ (gas valve)

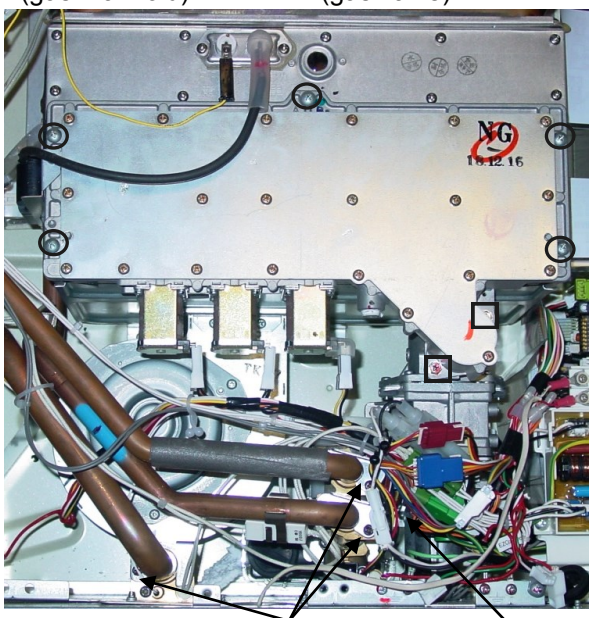

Figure 2

Water line connections

Screw (gas valve, step 11)

Regulator screw access

Gas connection attached with 3 screws

Figure 3

Gas Control Assembly

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME)

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

13. Pull out the gas control assembly. Remove the wire harness from the 2 solenoids.
14. Remove old o-ring from gas connection and install new o-ring from kit.
15. Install the gas valve and attach the wire harness to the 2 solenoids. (Figure 4)

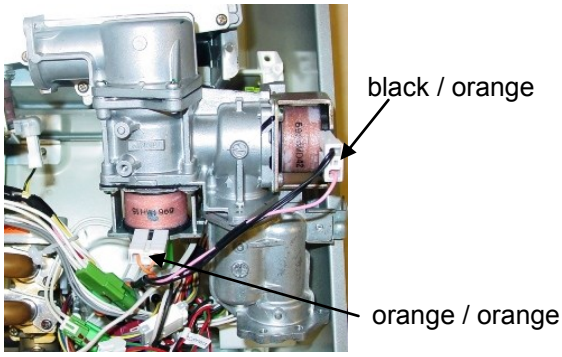

Figure 4

16. Install the gas connection with 3 screws.
17. Replace the circular gasket (included in kit) in the gas valve. (Figure 5) Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.
18. Reconnect gray/gray harness to ignitor module before installing manifold.
19. Remove old packing from manifold and install new packing.
20. Start the 2 screws that attach the gas manifold to the gas valve. Tighten the 5 screws that hold the gas manifold to the combustion chamber. Finish tightening the 2 screws that hold the gas manifold to the gas valve.
21. Install screw attaching the gas valve to the back of the cabinet.
22. Install he 3 solenoid valve harness to the manifold.
23. Attach ignition line.
24. On indoor models, install the bracket with the controller.
25. Perform the Gas Pressure Setting Procedure.

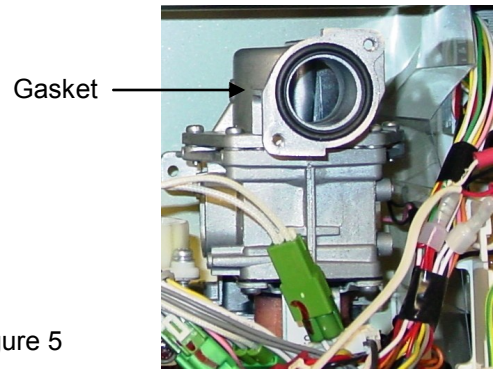

Figure 5

Gas Control Assembly

R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB

1. Turn off gas supply.
2. Turn off water supply.
3. Turn off 120v power supply.
4. Remove four screws securing the front panel. Remove front panel.

Remove controller assembly (indoor model only)

5. RC80HPi: Remove temperature controller. Remove two screws for temperature controller bracket. Remove bracket.
   VB Models: Slide controller bracket up and out of the slots on the cabinet.

Remove gas manifold and gas valve

6. Disconnect high tension cord from ignitor.
7. Disconnect flame rod wires. (yellow and red)
8. Remove six pan head screws from manifold (six screws outer edge) and three machine screws, at bottom of manifold, to gas valve.
9. Disconnect ignitor module harness, mounted on manifold. (gray/gray)
10. Disconnect the two solenoid wire harnesses at bottom of manifold. Remove manifold plate.
11. Remove the four screws attaching the gas connection to the bottom side of water heater.
12. Pull the gas connection down to disconnect it from the gas control assembly.
13. Pull out the gas control assembly. Remove the three solenoid wire harnesses.

⚠ WARNING

Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

Install gas valve and gas manifold

14. Install the gas control assembly and connect the wire harness to the three solenoids.
15. Discard o-ring from gas connection. Install new o-ring from kit. Install the gas connection with four screws.
16. Replace the circular gaskets (included in kit) in the gas valve. Ensure that the ribbed side faces outward.

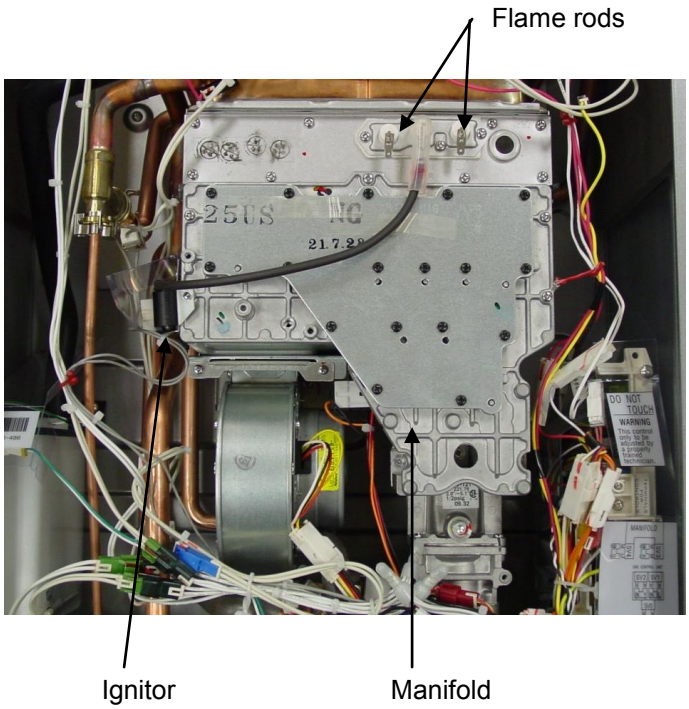

17. Remove old packing from gas manifold. Install new packing from kit to the manifold plate.
18. Reconnect two solenoid wire harnesses to manifold.
19. Reconnect ignitor module harness.
20. Start the three screws that attach the gas manifold to the gas valve. Install and tighten the six screws that hold the gas manifold to the combustion chamber. Tighten the three screws that hold the gas manifold to the gas valve.
21. Reconnect high tension cord to ignitor.
22. Reconnect flame rod wires. (yellow and red)

Install temperature controller assembly (indoor model only)

23. RC80HPi: Install temperature controller bracket with two screws. Install temperature controller.
    VB Models: Slide controller bracket into the slots on the cabinet.

Testing and close up

24. After calibrating the low and high gas pressure settings, install the front panel using four screws.

Gas Control Assembly

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

1.Disconnect the electrical power.

2.Turn off the gas supply.

3.Remove 4 screws securing the front panel. Remove front panel. For indoor models, remove the controller bracket.

4.Remove the 6 screws that attach the gas manifold to the burner case on the heat exchanger assembly. (FIGURE 1)

5.Remove the 2 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations. (FIGURE 1)

6.Disconnect ignition line, electrode and flame rod wires and solenoid harness from manifold. (FIGURE 1)

7.Pull out the gas manifold.

8.Remove the 2 screws attaching the gas inlet connection underneath the water heater as well as the 1 screw holding the gas valve to the bottom of the unit. (FIGURE 2)

9.Pull out the gas control assembly. Remove the wire harness from the solenoid.

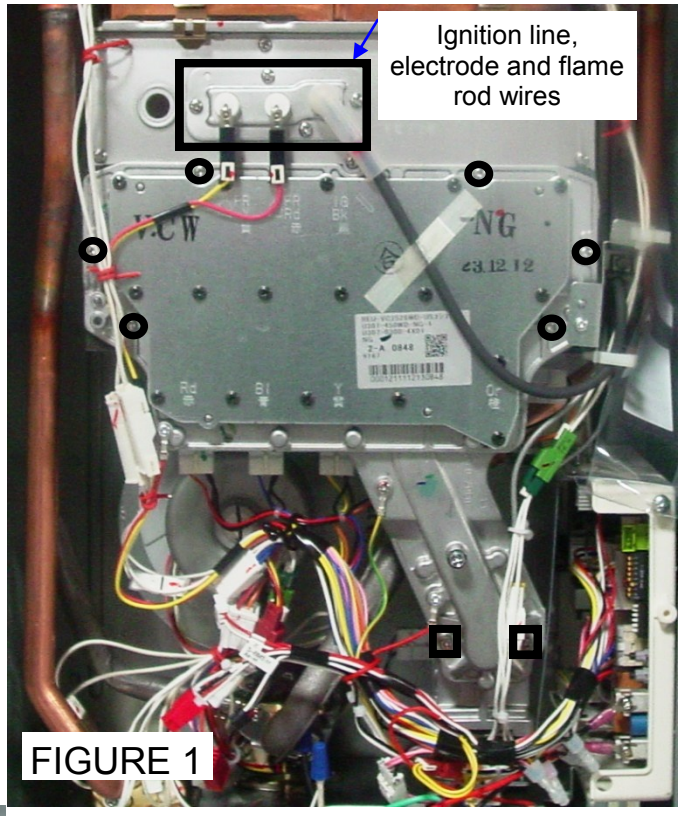

FIGURE 1

O 6 screws (gas manifold)

□ 2 machine screws (gas valve)

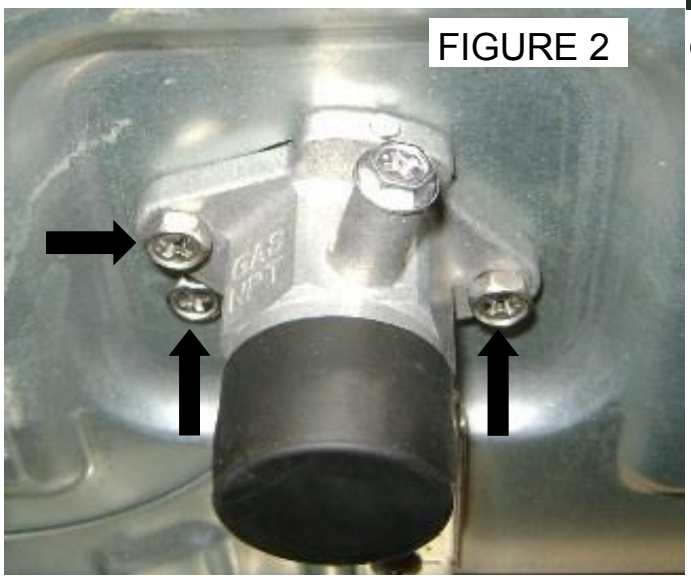

FIGURE 2

Gas Control Assembly

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

10. Install the gas valve and attach the wire harness to the 2 solenoids. (FIGURE 3)
11. Install the gas connection with the 2 screws to attach the gas inlet connection underneath the water heater as well as the 1 screw to attach the gas valve to the bottom of the unit. (FIGURE 2)
12. Replace the circular gasket (included in kit) in the gas valve. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.
13. Start the 2 screws that attach the gas manifold to the gas valve. Tighten the 6 screws that hold the gas manifold to the combustion chamber. Finish tightening the 2 screws that hold the gas manifold to the gas valve. (FIGURE 1)
14. Attach Flame Rods and Electrode wires and solenoid harness from manifold. (FIGURE 1)
15. On indoor models, install the bracket with the controller.
16. Adjust the low and high fire manifold pressures. (Reference the **Gas Pressure Setting Procedure** section of this service manual)
17. After calibrating the low and high gas pressure settings, install the front panel using four screws.

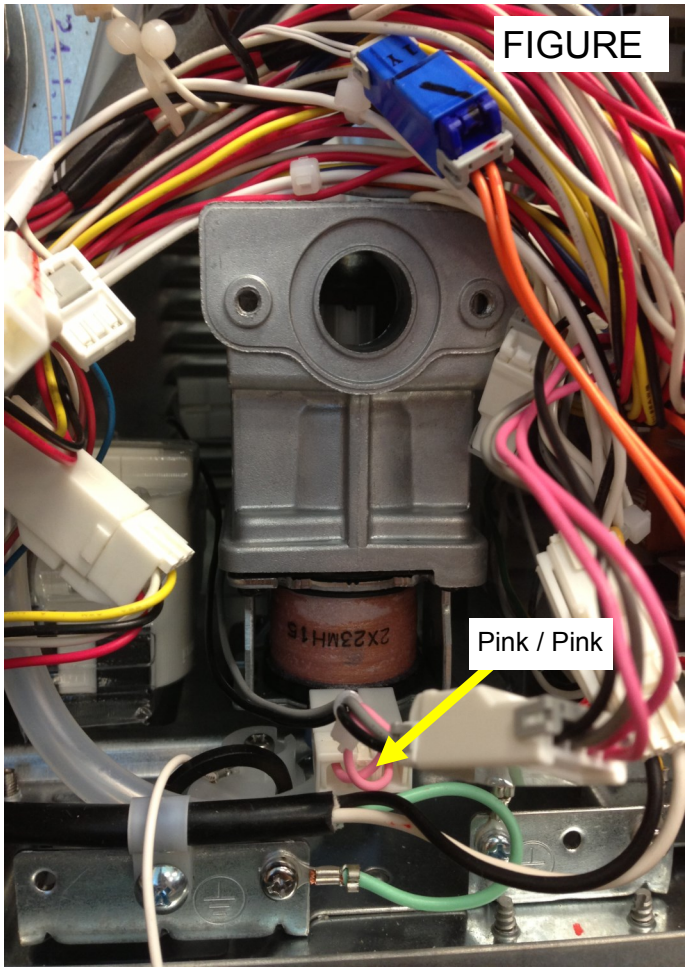

⚠ WARNING Failure to correctly assemble components according to these instructions may result in a gas leak or explosion.

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

Fan

R/C42e, R/C53e, V53e, R63LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply.
4. Remove four screws securing the front panel. Remove front panel.
5. On the V53e and R63LSe, remove the screws (3) holding the bracket with the surge protector. (Figure 1)
6. Disconnect the wire harness at the fan assembly. (Figure 2)
7. On the V53e and R63LSe, remove the screw attaching the bracket with the ignitor to the bottom of the burner case. (Figure 2)
8. Remove the three screws attaching the fan sub -assembly to the fan casing. (Figure 3)
9. Pull out the fan sub-assembly.
10. Install the new fan sub-assembly and tighten with three screws.
11. On the V53e and R63LSe, install the bracket with the ignitor with one screw.
12. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
13. On the V53e and R63LSe, install the bracket with the surge protector with three screws.
14. Install front panel using 4 screws.
15. Turn on water supply, power supply, and gas supply.

Figure 1

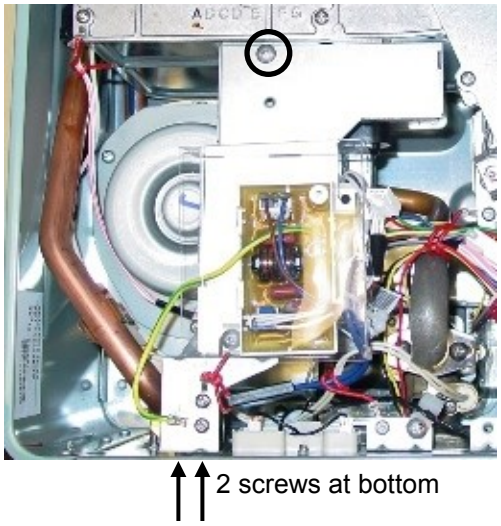

Figure 2

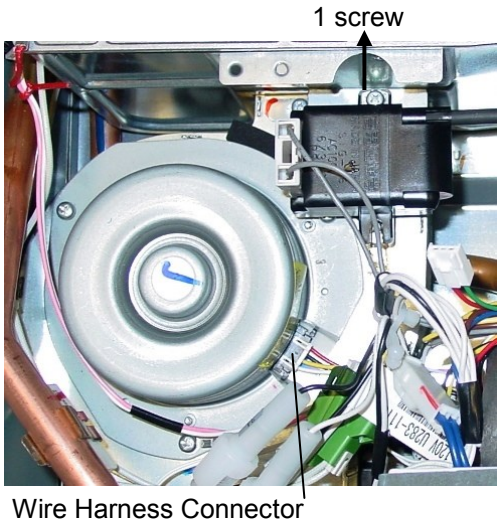

Figure 3

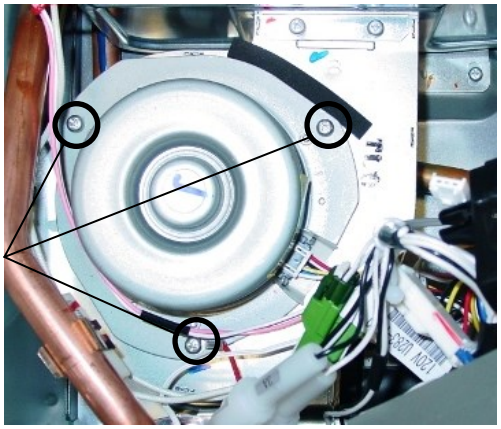

Fan

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply. (The fan may be damaged if it is removed with power still applied.)
3. Turn off the water supply.
4. For VB models, remove the screw covers by pressing them down and sliding them off horizontally.
5. Remove four screws securing the front panel. Remove front panel.
6. For V and VA models, disconnect wire harness at the fan assembly. For VB models disconnect wire harness at the Molex connector.
7. For V and VA models, pull out the harness attached to the solenoid on the manifold to make room to pull out the fan assembly.
8. Remove the two screws that attach the fan assembly to the bottom of the burner.
9. Pull out the fan assembly.
10. Install the fan assembly by inserting the tab on the fan assembly into the slot at the base of the heat exchanger and attaching with two screws.
11. For V and VA models, attach the wire harness to the solenoid on the gas manifold (brown, black wires).
12. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
13. Install front panel using 4 screws. For VB models, slide on screw covers.
14. Turn on water supply, power supply, and gas supply.

V and VA Models

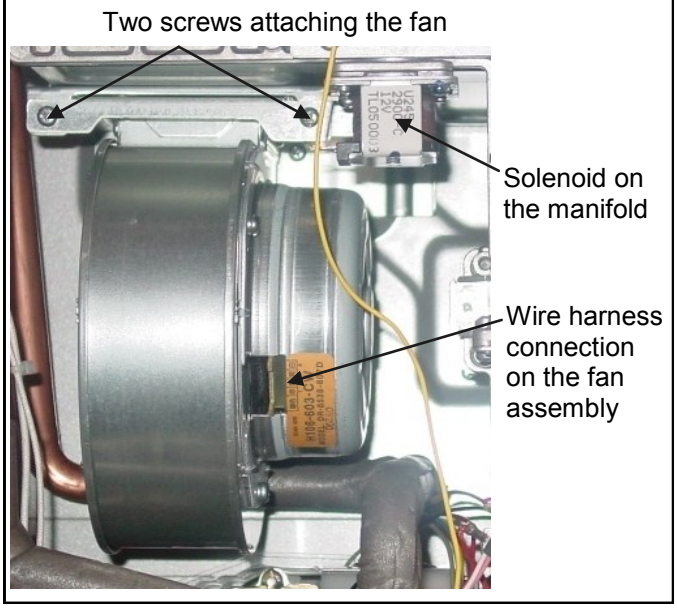

VB Models

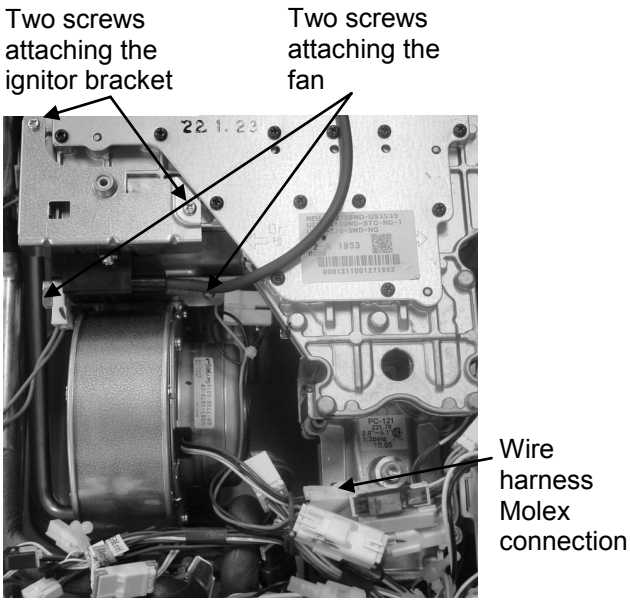

Component Replacement Instructions

Fan

R/C53i(PLUS), R/C85i(PLUS), R50LSi, V53i, R75LSi, R94LSi

1. Turn off the gas supply.
2. Turn off the 120 V power supply. (The fan may be damaged if it is removed with power still applied.)
3. Turn off the water supply.
4. For VB models, remove the screw covers by pressing them down and sliding them off horizontally.
5. Remove four screws securing the front panel. Remove front panel.
6. For VB models, remove the controller bracket.
7. For V and VA models, disconnect wire harness at the fan assembly. For VB models disconnect wire harness at the Molex connector.
8. For V and VA models, pull out the harness attached to the solenoid on the manifold to make room to pull out the fan assembly.
9. Remove the air temperature thermistor (two white wires) at the connection with the (white and orange wires on VA models) / (white and yellow wires on VB models) within the wire bundle.
10. Loosen the ducting from the fan assembly by pinching open the metal clamp.
11. Remove the two screws that attach the fan assembly to the bottom of the burner.
12. Pull out the fan assembly.
13. Install the fan assembly by inserting the tab on the fan assembly into the slot at the base of the heat exchanger and attaching with two screws.
14. Push ducting over fan assembly inlet and secure with metal clamp.
15. For V and VA models, attach the wire harness to the solenoid on the gas manifold (brown, black wires).
16. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
17. Attach the air temperature thermistor (O/W on VA models; O/Y on VB models).
18. For VB models, install the controller bracket.
19. Install front panel using 4 screws. For VB models, slide on screw covers.
20. Turn on water supply, power supply, and gas supply.

V and VA Models

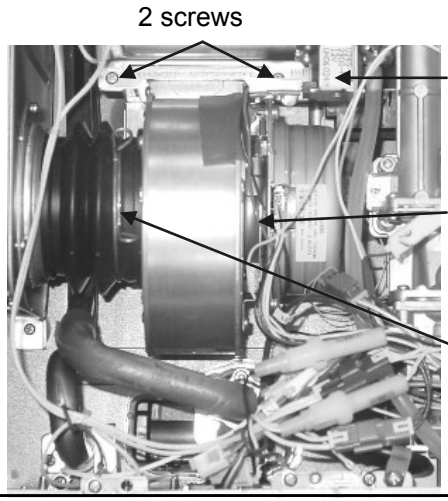

VB Models

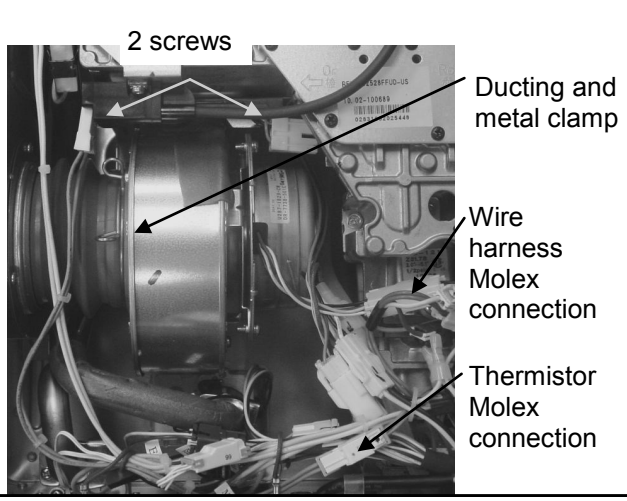

Fan

R/C98e(ASME), R/C98i(ASME),
R98LSe(ASME), R98LSi(ASME)

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply.
4. Remove four screws securing the front panel. Remove front panel.
5. On indoor models, remove the bracket holding the controller (1 screw). (Figure 1)
6. Disconnect the wire harness at the fan assembly. (Figure 2)
7. Remove the three screws attaching the fan motor to the fan casing. (Figure 2)
8. Pull out the fan motor.
9. Install the new fan motor and tighten with three screws.
10. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
11. On indoor models, install the bracket with the remote controller.
12. Install front panel using 4 screws.
13. Turn on water supply, power supply, and gas supply.

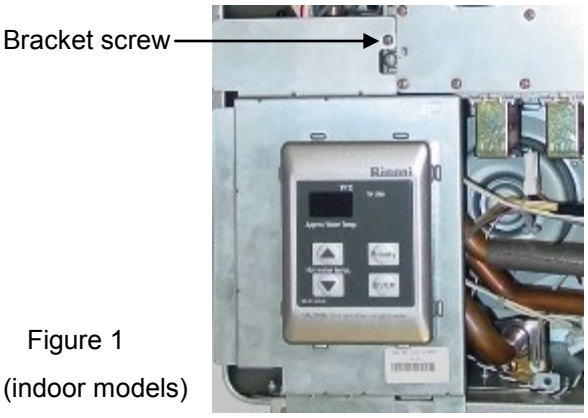

Figure 1

(indoor models)

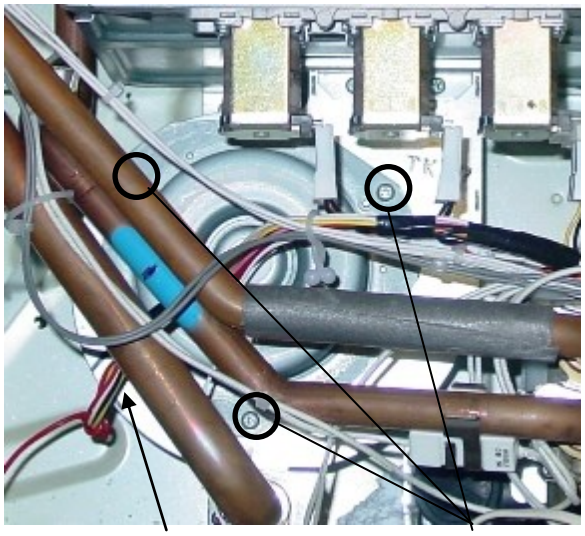

Figure 2

Fan

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

1.Turn off the gas supply.
2.Turn off the 120 V power supply.
3.Turn off the water supply.
4.Remove four screws securing the front panel. Remove front panel.
5.On indoor models, remove the bracket holding the controller (1 screw).
6.Disconnect the solenoid wire harness at the manifold assembly. (FIGURE 1)
7.Disconnect the wire harness at the fan motor assembly. (FIGURE 2)
8.Remove the four screws attaching the fan motor to the fan casing. (FIGURE 1)
9.Pull out the fan motor.
10.Install the new fan motor and tighten with four screws.
11.Attach the wire harness to the fan assembly (white, yellow, black, red wires).
12.Attach solenoid harnesses (Left-Black and Red, Middle-Black and Blue, Right-Black and Yellow) (FIGURE 1)

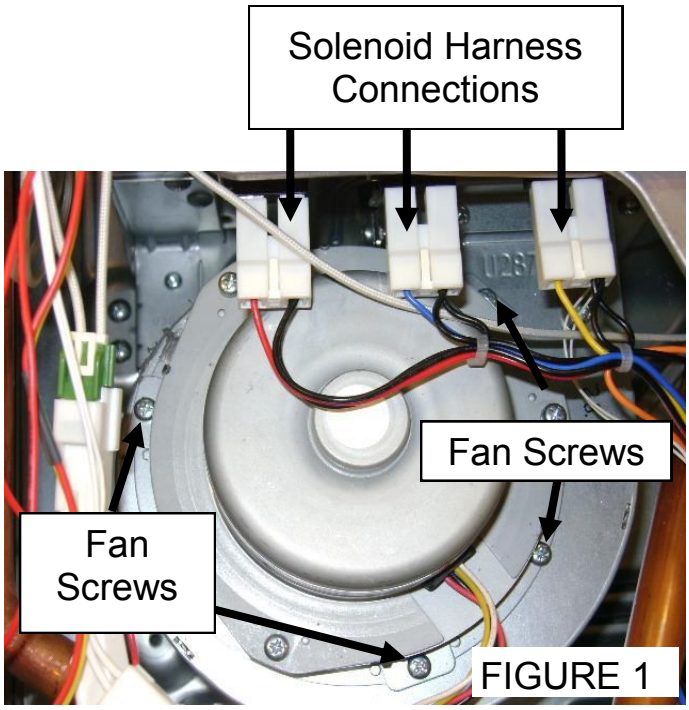

FIGURE 1

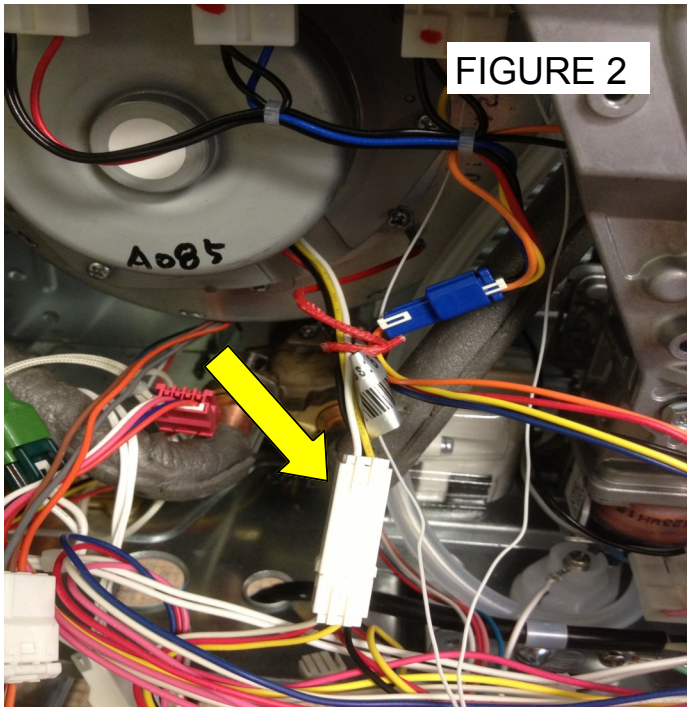

FIGURE 2

13.Adjust dip switches accordingly for replacement fan. (FIGURE 3)

14.On indoor models, install the bracket with the remote controller.

15.Install front panel using 4 screws.

16.Turn on water supply, power supply, and gas supply.

17.Test unit and inspect for gas leak.

FIGURE 3

If fan class is A or B adjust dip switches 6 and 7 to **ON** in the second bank of dips switches (SW2)

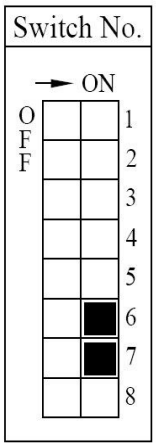

Label on assembly will identify the class

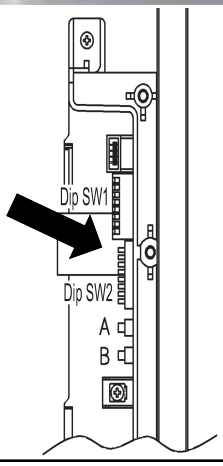

If fan class is C, D, E, or F adjust dip switch 6 to **ON** and dip switch 7 to **OFF** in the second bank of dips switches (SW2)

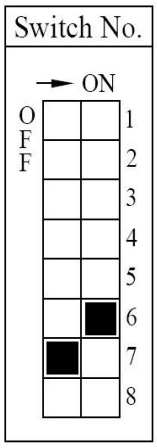

⚠ CAUTION

Do not insert hands or objects into the circulation fans while they are running. Injury or mechanical malfunction may occur.

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

PC Board

R/C42e, R/C53e

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply.
4. Remove four screws securing the front panel. Remove front panel.
5. Lift up the plastic guard covering the front of the PC board.
6. Remove the controller connections.
7. Remove the screws securing the grounding cables.
8. If a surge protector with terminals is installed, then remove this board by removing two screws. This board should be re-installed on the replacement PC board.
9. Remove the two screws at the top and bottom of the PC board.
10. Pull out the PC board, remove plastic cover, and remove the connections.
11. Adjust dip switches on the new PC board.

    Switches 1-8 (SW1): Configure the dip switches the same as on the original PC board. If necessary, refer to the Dip Switch section or to the Operation and Installation Manual for more information on these dip switches.

    Switches 1-4 (SW2): Configure according to the table.

SW2 setup

1	OFF - Propane Gas ON - Natural Gas
2	OFF position for models prior to these serial numbers: (on these units, the front panel does not have an “R” or “C” trade name, unless the front panel has been replaced) V1616W, V1616WC 06.02-000001 V2020W, V2020WC 05.07-000001 V2532W, V2532WC 05.05-117257 V2532FFU, V2532FFUC 05.05-117257 V2520FFU, V2520FFUC 05.05-109539 V2526W 05.05-110434 ON position for other models, serial numbers
3	OFF position
4	OFF - Residential Models ON - Commercial Models

Figure 1

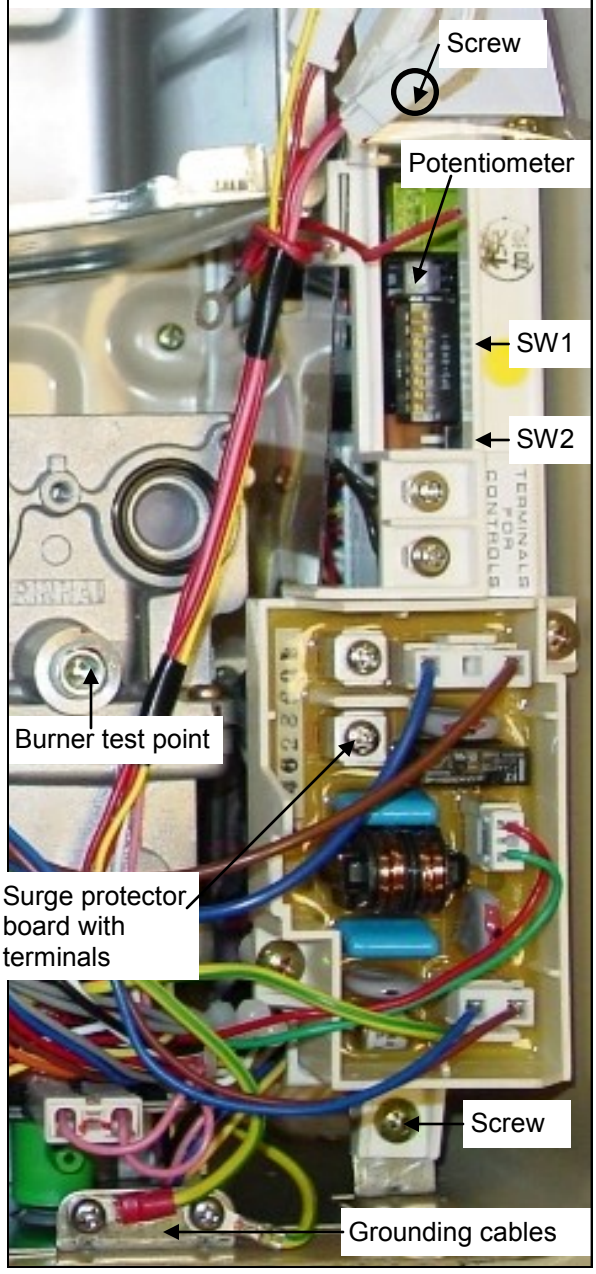

12. Attach connections and plastic cover.
13. Insert PC board and attach with two screws.
14. Attach the grounding cables with screws.
15. Attach connections for the controller.
16. Perform the Gas Pressure Setting Procedure.

PC Board

V53e, R63LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply.
4. Remove four screws securing the front panel. Remove front panel.
5. Remove the screw connecting the PC board to the back of the water heater casing.
6. Remove the ground wire at the bottom of the cabinet.
7. Pull out the PC board and remove the connections.
8. Adjust dip switches on the new PC board. Replacement PC boards have an additional bank of 6 dip switches. Adjust as follows:

   Switches 1-8 (SW1): Configure the dip switches the same as on the original PC board. If necessary, refer to the Dip Switch section or to the Operation and Installation Manual for more information on these dip switches.

   Switches 1-6 (SW2): Configure according to the diagrams below based on your model and gas type.

9. Attach connections and insert PC board. Insert the tab on the PC board into the hole in the bottom of the case. Attach with one screw.
10. Perform the Gas Pressure Setting Procedure.

Figure 1

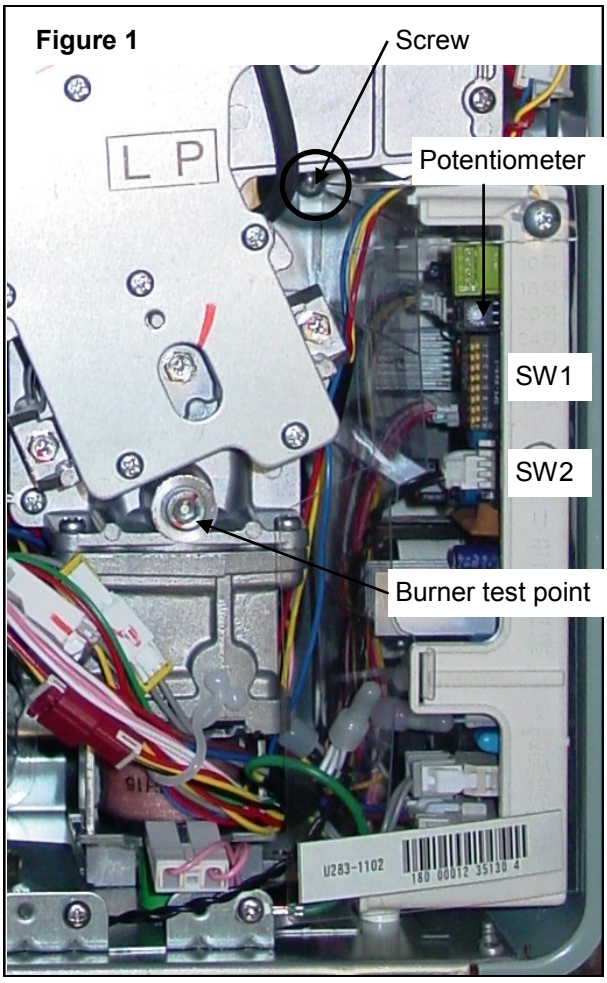

SW2 setup for V53e

Propane (LPG)

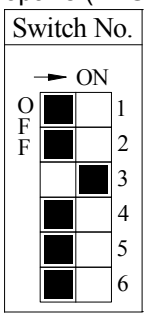

Natural Gas (NG)

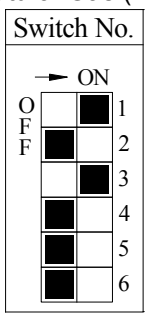

SW2 setup for R63LSe

Propane (LPG)

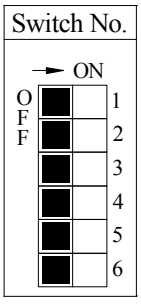

Natural Gas (NG)

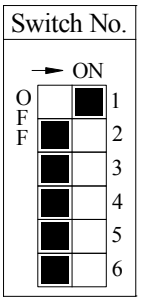

PC Board

R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, R63LSe2, V53i, R75LSe, R75LSi, R94LSe, R94LSi,

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply.
4. Remove four screws securing the front panel. Remove front panel.
5. Lift up the plastic guard covering the front of the PC board.
6. Remove the controller connections and the two ground wires at the bottom of the cabinet.
7. If a surge protector with terminals is installed, then remove this board by removing two screws. This board should be re-installed on the replacement PC board.
8. Remove the two screws at the top and bottom of the PC board.
9. Pull out the PC board, remove plastic cover, and remove the connections.
10. Adjust dip switches on the new PC board.

    Switches 1-8 (SW1): Configure the dip switches the same as on the original PC board. If necessary, refer to the Dip Switch section or to the Operation and Installation Manual for more information on these dip switches.

    V Series (R70e, R/C85e, R/C53i, R/C85i)

    Switches 1-4 (SW2): Configure according to the table.

    VA and VB Series (R50LSi, R63LSe2, R75LSe, R94LSe, R75LSi, R94LSi)

    Switches 1-6 (SW2):

    Replacement PC boards for the VA and VB series have an additional bank of 6 dip switches. Configure according to the diagrams based on your model and gas type. NOTE: The V53i (VB2020FFU) does not have the SW2 dip switch.

11. Attach connections and plastic cover.
12. Insert PC board and attach with two screws.
13. If a surge protector with terminals was installed on the original PC board, remove it and install it on the new PC board. See Figure 1.
14. Attach connections for the remote controller.
15. Attach plastic guard.
16. Install two ground wires at the bottom of the cabinet.
17. Perform the Gas Pressure Setting Procedure.

Figure 1

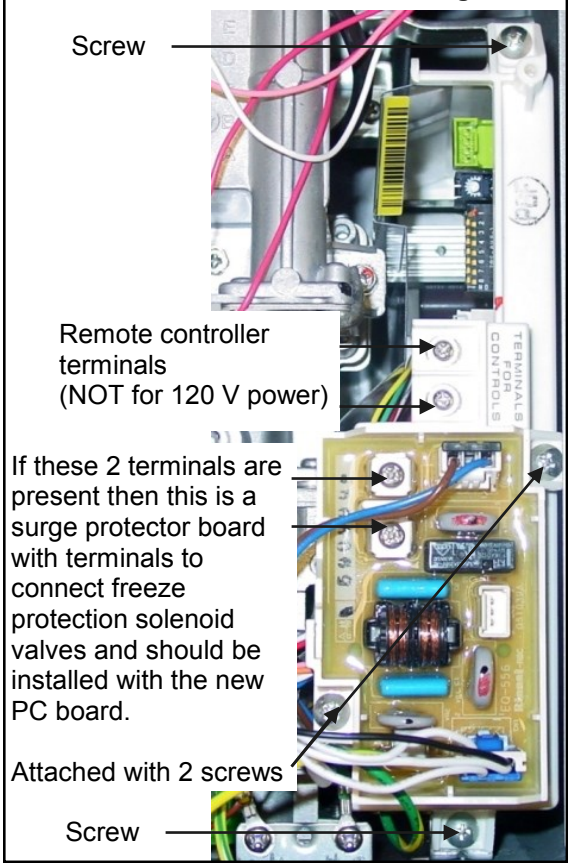
Screw
Remote controller terminals (NOT for 120 V power)
If these 2 terminals are present then this is a surge protector board with terminals to connect freeze protection solenoid valves and should be installed with the new PC board.
Attached with 2 screws
Screw

SW2 setup for V Series (R70e, R/C85e, R/C53i, R/C85i)

1	OFF - Propane Gas ON - Natural Gas
2	OFF position for models prior to these serial numbers: (on these units, the front panel does not have an “R” or “C” trade name, unless the front panel has been replaced) V1616W, V1616WC 06.02-000001 V2020W, V2020WC 05.07-000001 V2532W, V2532WC 05.05-117257 V2532FFU, V2532FFUC 05.05-117257 V2520FFU, V2520FFUC 05.05-109539 V2526W 05.05-110434 ON position for other models, serial numbers
3	OFF position
4	OFF - Residential Models ON - Commercial Models

PC Board

R/C53i(PLUS), R70e, R/C85e(PLUS), R/C85i(PLUS), R50LSi, R63LSe2, V53i, R75LSe, R75LSi, R94LSe, R94LSi RC80HPe, RC80HPi, RC98HPe, RC98HPi

Note carefully the full model number of the unit.

NOTE: The V53i (VB2020FFU) does not have the SW2 dip switch.

SW2 Bank of 6	R50LSi REU-VA2019FFUD-US		R50LSi REU-VA2019FFUD-UC		R75LSi REU-VA2528FFUD-US REU-VA2528FFUD(A)-US		R75LSe REU-VA2528WD-US REU-VA2528WD(A)-US	
	NG	**LPG**	**NG**	**LPG**	**NG**	**LPG**	**NG**	**LPG**
1	ON	OFF	ON	OFF	ON	OFF	OFF	ON
2	ON	ON	ON	ON	ON	ON	OFF	OFF
3	ON	ON	ON	ON	OFF	OFF	OFF	OFF
4	ON	ON	OFF	OFF	ON	ON	ON	ON
5	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

SW2 Bank of 6	R94LSi REU-VA2535FFUD-US REU-VA2535FFUD-UC REU-VB2735FFUD-US R75LSi REU-VA2528FFUD-UC REU-VB2528FFUD-US		R94LSe REU-VA2535WD-US REU-VA2535WD-UC REU-VB2735WD-US R75LSe REU-VA2528WD-UC REU-VB2528WD-US		R63LSe2 RUE-VA2024WD(A)-UC	
	NG	**LPG**	**NG**	**LPG**	**NG**	**LPG**
1	ON	OFF	ON	OFF	ON	OFF
2	ON	ON	OFF	OFF	OFF	OFF
3	OFF	OFF	OFF	OFF	ON	ON
4	OFF	OFF	OFF	OFF	OFF	OFF
5	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	OFF	OFF	OFF

SW2 Bank of 6	RC98HPi		RC98HPe		RC80HPi		RC80HPe	
	NG	**LPG**	**NG**	**LPG**	**NG**	**LPG**	**NG**	**LPG**
1	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2	ON	ON	OFF	OFF	ON	ON	OFF	OFF
3	OFF	OFF	OFF	OFF	ON	ON	ON	ON
4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
5	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

PC Board

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME)

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Remove four screws securing the front panel. Remove front panel.
4. Remove the 2 screws connecting the PC board to the water heater casing.
5. Pull out the PC board and remove the connections.
6. Adjust dip switches on the new PC board.
7. Attach connections and insert PC board.

   Switches 1-8 (SW1):

   Configure the dip switches the same as on the original PC board. If necessary, refer to the Dip Switch section or to the Operation and Installation Manual for more information on these dip switches.

   Switches 1-4 (SW2) or Switches 1-6 (SW2):

   Configure according to the diagrams based on your model and gas type.

   Attach with 2 screws.
8. Perform the Gas Pressure Setting Procedure.

Figure 1

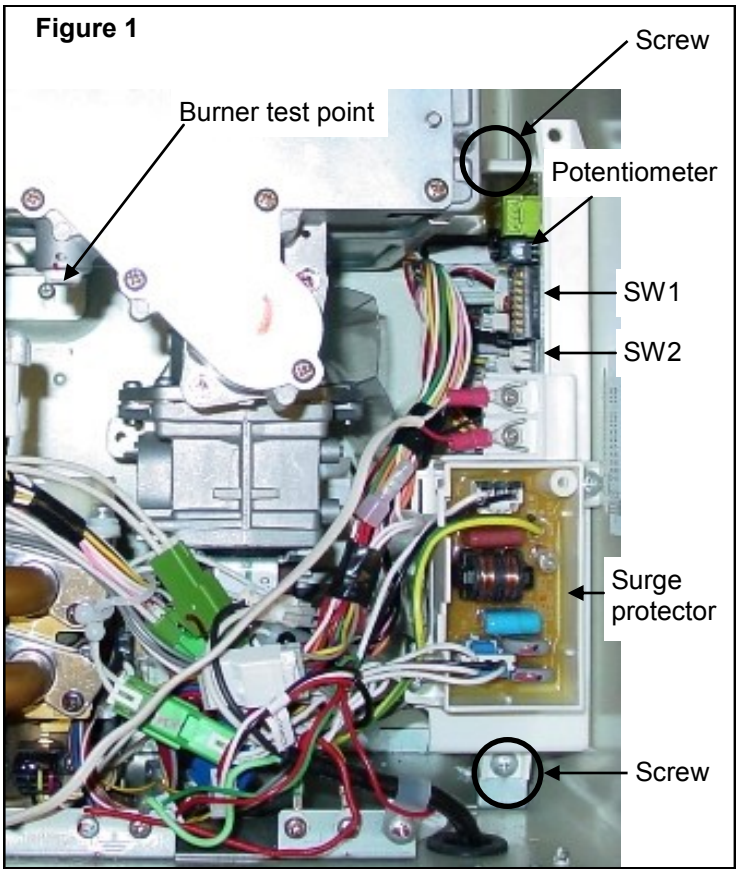

SW2 Bank of 6	R98i		R98e		C98i		C98e		R98LSi		R98LSe	
	NG	**LPG**	**NG**	**LPG**	**NG**	**LPG**	**NG**	**LPG**	**NG**	**LPG**	**NG**	**LPG**
1	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF
3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
5	NA								OFF	OFF	OFF	OFF
6									OFF	OFF	OFF	OFF

PC Board

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

1.Turn off 120v power supply.

2.Turn off gas supply.

3.Turn off water supply.

4.Remove the four screws securing the front panel. Remove front panel.

5.Remove screws connecting the PC board to the cabinet of the water heater.

6.Pull out PC board and remove the connectors.

7.Adjust the dip switches on the new PC board. Adjust as follows:

SW1 Tan Switches	
1	ON for short vent length[1] OFF for long vent length and outdoor models[1]
2	See altitude table (V65 is not approved for high altitude)
3	
4	OFF* (S-BMS/Air Handler)
5	OFF[1] (Fixed Temperature without controller - 120°F/140°F)
6	OFF[1] (Max temperature - 120°F/140°F)
7	OFF[1] (Units in standby with EZConnect™)
8	OFF

Altitude	**Dip Switch #2**	**Dip Switch #3**
0-2000 ft (0-610 m)	OFF	OFF
2001-5200 ft (610-1585 m)	OFF	ON
5201-7700 ft (1585-2277 m)	ON	OFF
7701-10200 ft (2277-3109 m)	ON	ON

SW2 White Switches		
	RL75, RL94	**V65, V75**
1	OFF for Propane Gas ON for Natural Gas	
2	OFF[1] (Optional Temperature table)	
3		
4	OFF[1] (Recirculation[2] - pump)	ON for V75 OFF for V65
5	OFF	
6	Applicable to Indoor models only Determine fan class[3] Class A or B: #6 is ON / #7 is ON Class C, D, E, or F: #6 is ON / #7 is OFF	
7		
8	OFF[1] (Recirculation[2] - insulation)	OFF (Not applicable)

[1] These are specific for the water heater installation. Copy the settings on the old PC Board or refer to the manual for details on these switch settings. Default is OFF.

[2] Applicable to: RL94
RL75 with an "(A)" on part number, REU-VC2528FFUD-US(A) or REU-VC2528WD-US(A)

[3] Find the label on the wiring of the fan assembly that indicates its class, A to F.
Example:

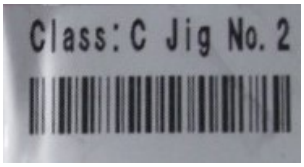

8.Attach connectors and insert PC Board. Attach with screws.

9.After calibrating the low and high gas pressure settings (Reference **Gas Pressure Setting Procedure** section), install the front panel using four screws.

Component Replacement Instructions

Water Flow Control Assembly

R/C42e, R/C53e

NOTICE Due to design changes, the new valve may appear different than the installed valve in color, size, and in the number of wires in the harness connections.

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.

Remove the water flow assembly

5. Remove 2 screws and bracket at the water flow assembly. The bracket can be left on the water line. Pull out the water line. (Figure 1)

Figure 1

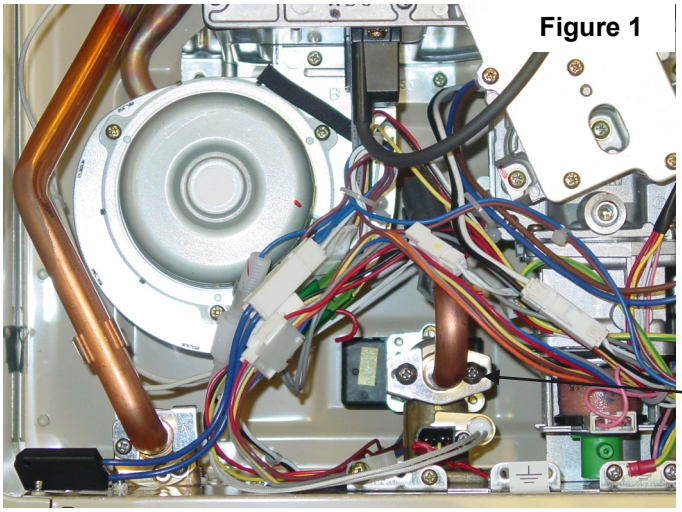

2 screws and bracket
(water flow assembly)

6. Remove the 3 screws attaching the water inlet to the under side of the water heater. (Figure 2).

Figure 2

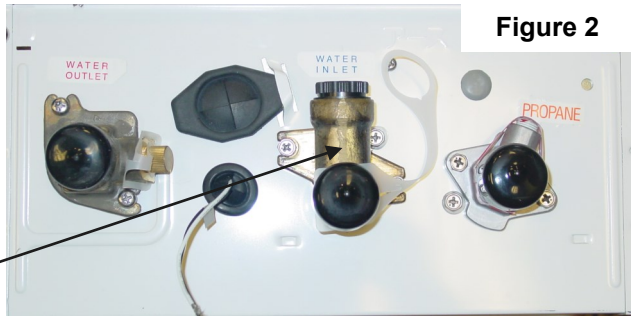

Water inlet

7. Pull out the water flow servo assembly and disconnect the cable harnesses. (Figure 3)
   A. water flow sensor harness (black/yellow/red wires)
   B. water flow servo harness (red/blue/brown/yellow/gray or red/blue/brown/orange/yellow/gray wires)
   C. heating element

Figure 3

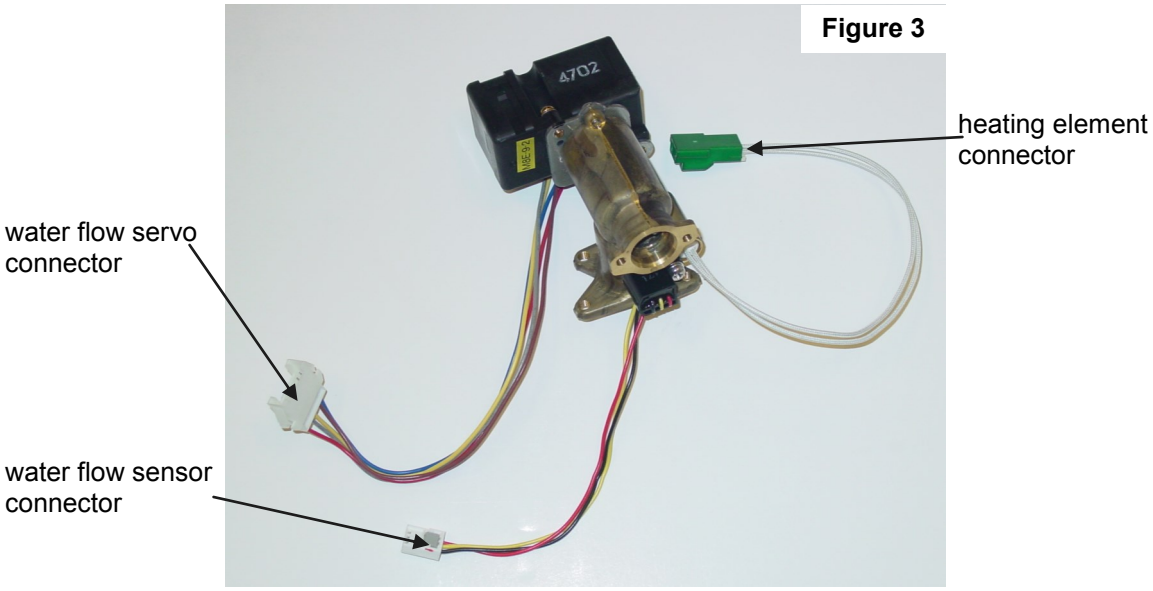

Assemble

8. Place the new water flow assembly inside the water heater and attach the cable harnesses.
9. Replace the O-ring on the water inlet (included in kit). Attach the water flow assembly through the bottom of the compartment to the water inlet using 3 screws. The shorter screw can be installed first to connect the water flow assembly to the bottom of the compartment. Then install the 2 longer screws through the water inlet.
10. Replace the O-ring on the water line (included in kit). Attach the water line to the water flow assembly with 2 screws and bracket.
11. Install the front panel using 4 screws. Turn on the water supply, power supply, and gas supply.
12. Open a hot water tap and ensure there are no leaks at the water heater.

Water Flow Control Assembly

V53e, R63LSe

1. Turn off the gas supply.
2. Disconnect the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.

Remove the water flow assembly

5. Remove the bracket holding the surge protector (one screw on top of the bracket and two from the bottom of the cabinet.
6. Remove 2 screws and 1 bracket at the water flow assembly. Pull out the water line. (Figure 1)

Figure 1

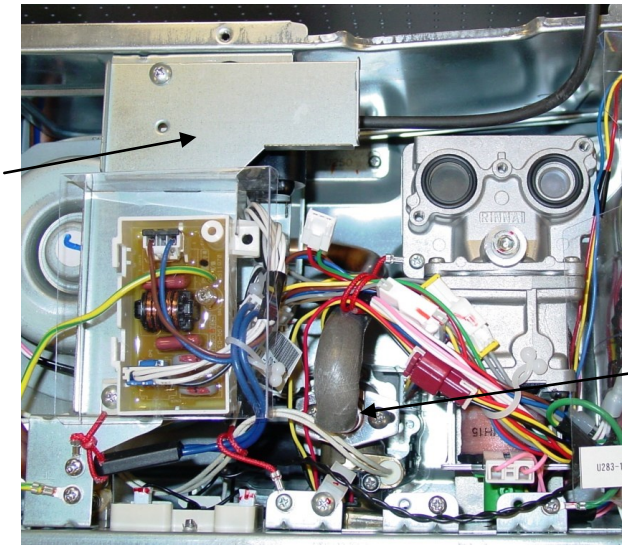

7. Remove the 3 screws attaching the water inlet to the under side of the water heater. (Figure 2).

Figure 2

8. Pull out the water flow servo assembly and disconnect the cable harnesses. (Figure 3)
   a. water flow sensor harness (black/yellow/red wires)
   b. water flow servo harness (red/blue/brown/yellow/gray or red/blue/brown/orange/yellow/gray wires) at the water flow assembly
   c. heating element

Figure 3

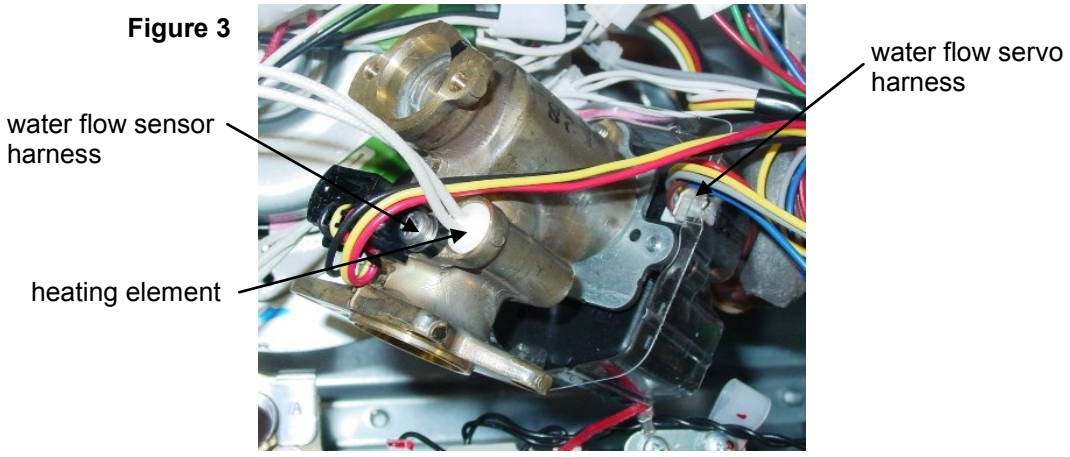

Assemble

9. Place the new water flow assembly inside the water heater and attach the cable harnesses.
10. Replace the O-ring on the water inlet (included in kit). (Figure 4) Attach the water flow assembly through the bottom of the compartment to the water inlet using 3 screws. The shorter screw can be installed first to connect the water flow assembly to the bottom of the compartment. Install the 2 longer screws through the water inlet.

Figure 4

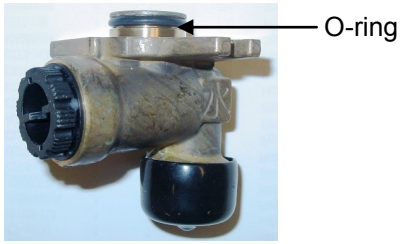

11. Replace the O-ring on the water line (included in kit). Attach the water line to the water flow assembly with 2 screws and bracket.
12. Install the bracket with the surge protector.
13. Install the front panel using 4 screws.
14. Turn on the water supply, power supply, and gas supply.
15. Open a hot water tap and ensure there are no leaks at the water heater.

Component Replacement Instructions

Water Flow Control Assembly

R/C53i, R70e, R50LSi, R63LSe2, V53i, R75LSe, R75LSi

NOTICE Due to design changes, the new valve may appear different than the installed valve in color, size, and in the number of wires in the harness connections.

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. (On VB models, remove the screw covers by pressing them down and sliding them off horizontally.) Remove four screws securing the front panel. Remove front panel.

Remove the water flow assembly

5. Remove 1 screw and bracket at the water flow assembly. The bracket can be left on the water line. Pull out the water line. (Figure 1)
6. Remove the controller bracket (on indoor models only).

Figure 1

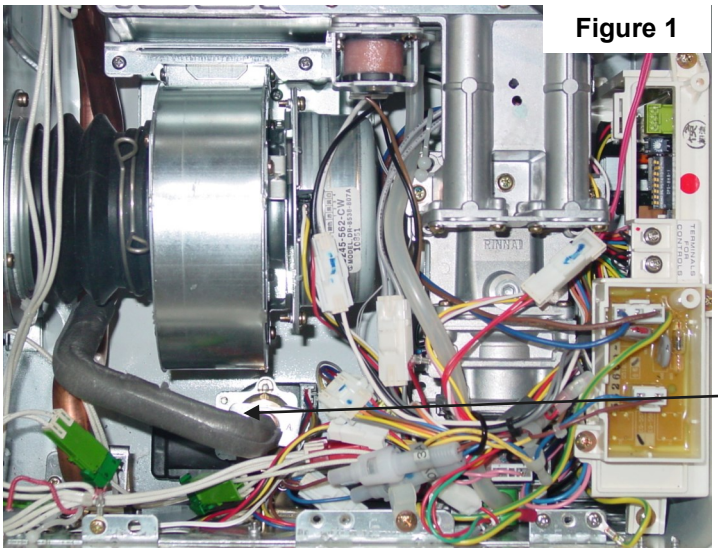

7. Remove the 4 screws attaching the water inlet to the underneath side of the water heater. (Figure 2).

Figure 2

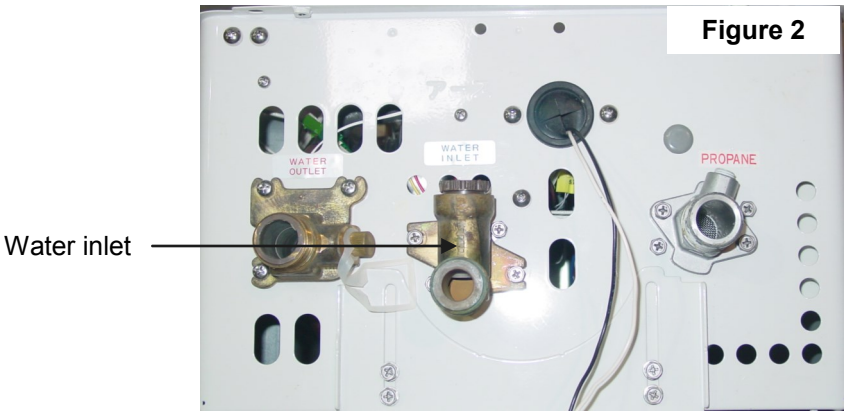

8. Pull out the water flow servo assembly and disconnect the cable harnesses. (Figure 3)
   A. water flow sensor harness (black/yellow/red wires)
   B. water flow servo harness (red/blue/brown/yellow/gray or red/blue/brown/orange/yellow/gray wires)
   C. heating element
   D. For VB models remove the ceramic heater from the valve body

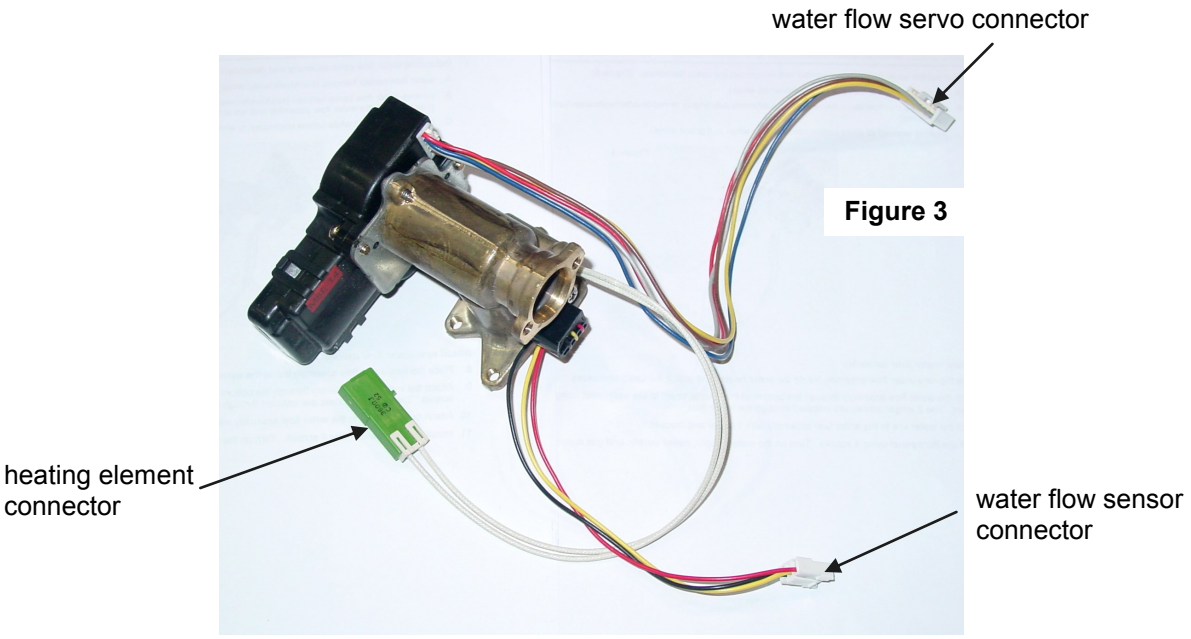

Figure 3

Assemble

9. Place the new water flow assembly inside the water heater and attach the cable harnesses. For VB models, re-install the ceramic heater.
10. Replace the O-ring on the water inlet (included in kit). Attach the water flow assembly through the bottom of the compartment to the water inlet using 4 screws. The 2 shorter screws can be installed first to connect the water flow assembly to the bottom of the compartment. Then install the 2 longer screws through the water inlet.
11. Replace the O-ring on the water line (included in kit). Attach the water line to the water flow assembly with 1 screw and bracket.
12. Install the controller bracket (on indoor models only).
13. Install the front panel using 4 screws. (On VB models, slide on the screw covers.)
14. Turn on the water supply, power supply, and gas supply.
15. Open a hot water tap and ensure there are no leaks at the water heater.

Component Replacement Instructions

Water Flow Control Assembly

R/C85e(PLUS), R/C85i(PLUS), R94LSe, R94LSi

NOTICE Due to design changes, the new valve may appear different than the installed valve in color, size, and in the number of wires in the harness connections.

1. Turn off gas supply.
2. Turn off water supply. Drain all water from appliance.
3. Turn off 120v power supply.
4. (On VB models, remove screw covers.) Remove four screws securing the front panel. Remove front panel.

Remove controller assembly (indoor VB model only)

5. Remove one screw from ignitor module bracket. Remove bracket.
6. Remove temperature controller and bracket by sliding up and out of slots on cabinet.

Remove ignitor module (outdoor VB model only)

7. Remove two screws from ignitor module bracket. Remove bracket and module.

Remove fan assembly (Figure 1)

8. Disconnect fan motor harness.
9. Disconnect air inlet thermistor harness. (indoor model only)
10. Release the fan duct from the left side by pinching open the metal clamp. (indoor model only)
11. Remove two screws that attach the fan assembly to the bottom of the combustion chamber.
12. Remove fan assembly. On V and VA models, remove the solenoid harness on the manifold to make room to pull out the fan assembly.

Remove water flow servo valve and bypass valve

13. Remove two screws and brackets at the bypass valve. Remove two copper tubes.
14. Remove two screws attaching the water inlet to the bottom of the water heater cabinet. (Figure 3)
15. Remove two screws attaching the water flow servo valve to the bottom of the water heater cabinet.
16. Disconnect the wire harnesses (water flow sensor harness - black, yellow, red wires; bypass servo assembly harness - white, red, yellow, orange, brown wires; water flow servo valve harness - 5-8 multicolored wires depending on model). (Figure 4)

Figure 1

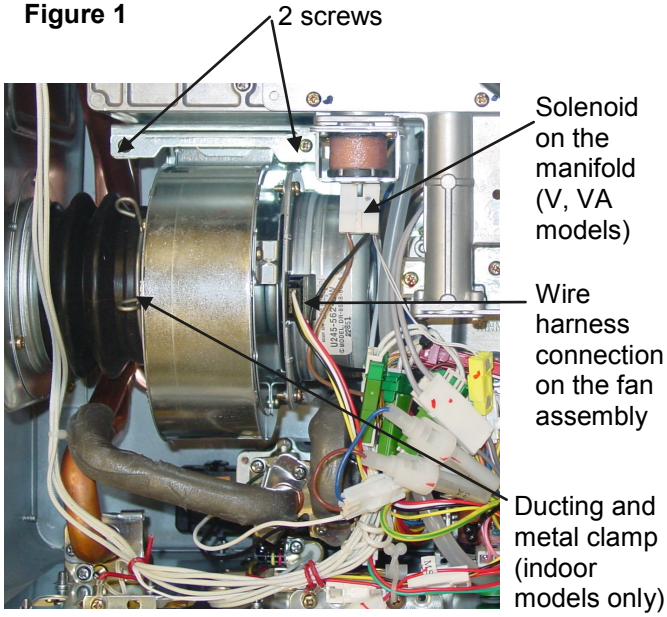
2 screws
Solenoid on the manifold (V, VA models)
Wire harness connection on the fan assembly
Ducting and metal clamp (indoor models only)

Figure 2

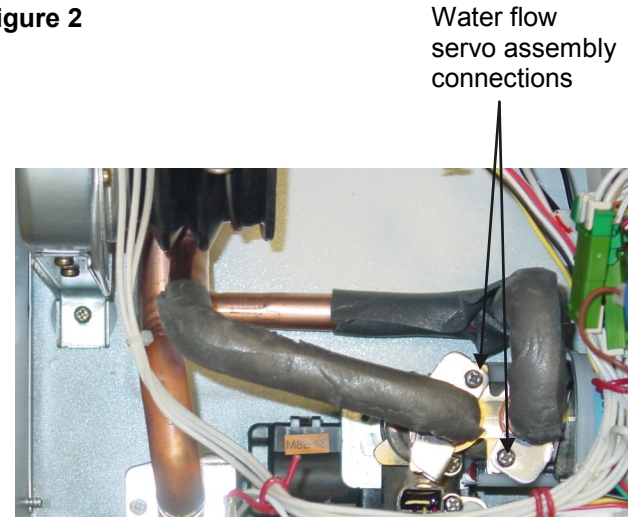

Figure 3

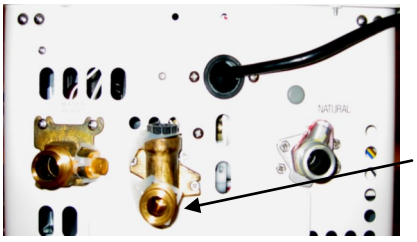

Water Flow Control Assembly

R/C85e(PLUS), R/C85i(PLUS), R94LSe, R94LSi

17. For VB models only, remove one screw that is securing ceramic heater. Remove ceramic heater from water flow servo assembly.
18. Pull out the water flow servo assembly and bypass servo assembly.
19. Remove two screws to separate the bypass servo assembly from the water flow servo assembly. (Figure 5)

Reinstall water flow servo valve and bypass valve

20. Replace the O-ring (included in kit) between the water flow servo assembly and the bypass servo assembly. Attach the water flow servo assembly to the bypass assembly with two screws.
21. Place inside the heater and attach the wire harnesses.
22. For VB models only, reinstall ceramic heater.
23. Replace the O-ring on the water inlet (included in kit). Attach the water flow assembly to the bottom of the water heater cabinet using two short screws. Then install the two longer screws through the water inlet.
24. Replace the O-ring on the copper lines (included in kit). Attach the two copper lines to the bypass valve, with one bracket and one screw for each line.

Reinstall fan assembly

25. Reconnect fan motor harness.
26. Reconnect air inlet thermistor harness. (indoor model only)
27. Reinstall the fan duct. (indoor model only)
28. Install two screws that attach the fan assembly to the bottom of the combustion chamber.

Install controller assembly (indoor VB model only)

29. Reinstall temperature controller and bracket.
30. Reinstall ignitor module bracket with one screw.

Install ignitor module (outdoor VB model only)

31. Install bracket and ignitor module with two screws.

Close up

32. Turn on the water supply, power supply, and gas supply.
33. Open hot water tap and ensure there are no leaks at the water heater.
34. Install front panel using four screws. Reinstall screw covers.

Figure 4

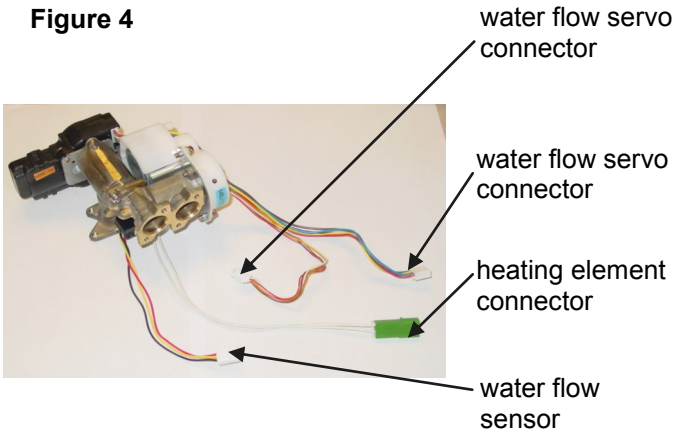

Figure 5

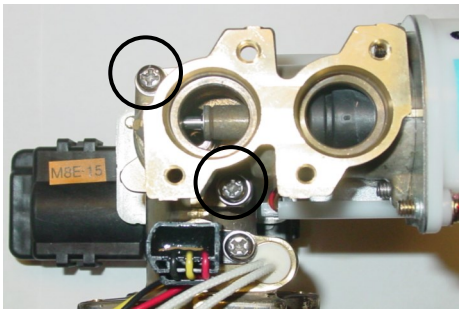

Water Flow Control Assembly

R/C98e(ASME), R/C98i(ASME), R98LSe(ASME), R98LSi(ASME)

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.
5. Remove 2 screws and 2 brackets at the water flow servo assembly. Pull out the water lines. (Figure 1)
6. Disconnect the wiring harnesses from the water flow sensor, heating element, water flow servo assembly, and bypass servo assembly. (Figure 1)
7. Remove the 4 screws attaching the water inlet to the underneath side of the water heater. (Figure 2)
8. Pull out the water flow servo assembly and bypass servo assembly. (Figure 3)
9. Remove 2 screws in order to separate the bypass servo assembly from the water flow servo assembly. (Figure 3)
10. Replace the O-ring (included in kit) between the water flow servo assembly and the bypass servo assembly. Attach the new water flow servo assembly to the bypass servo assembly with 2 screws.
11. Reconnect the wire harnesses (4).
12. Place inside the water heater.
13. Attach the water flow assembly to the water inlet using 4 screws. The 2 shorter screws can be installed first to connect the water flow assembly to the bottom of the compartment. Install the 2 longer screws through the water inlet.
14. Replace the O-ring on the water lines (included in kit). Attach the two water lines to the bypass servo assembly with 1 screw each.
15. Install the front panel using 4 screws.
16. Turn on the water supply, power supply, and gas supply.
17. Open a hot water tap and ensure there are no leaks at the water heater.

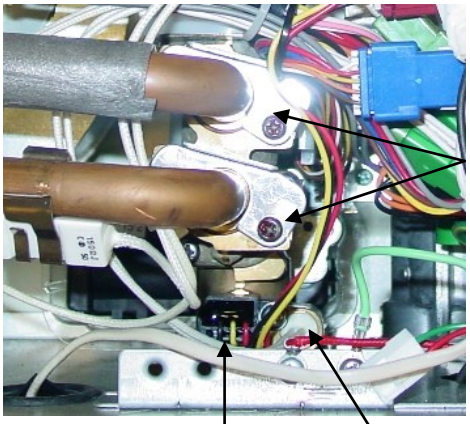

Figure 1

Figure 2

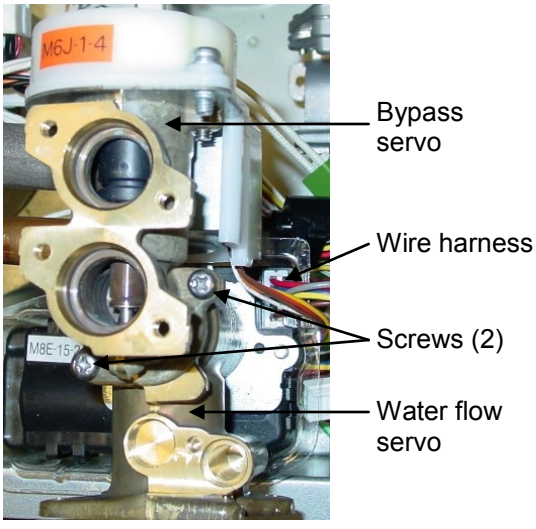

Figure 3

Component Replacement Instructions

Water Flow Control Assembly

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

1. Disconnect the electrical power.
2. Turn off the gas supply.
3. Turn off water supply. Drain all water from the appliance.
4. Remove 4 screws securing the front panel. Remove front panel. For indoor models, remove the controller bracket.
5. Remove 2 screws securing inlet fixture as well as the 1 screw to the right of inlet fixture. Pull fixture away from unit (ensure fixture o-ring is intact) (FIGURE 1)
6. Remove the screw(s) from Water Flow Servo retainer clip(s) as well as the screw holding in the ceramic anti-frost heater to the valve assembly. (on models with fixed bypass remove pipe clip) (FIGURE 2-A for Variable By-Pass Model, 2-B for fixed By-Pass Model)
7. Unplug flow sensor and flow control wire harnesses.
8. Remove the Water Flow Servo Valve assembly. *(A small amount of water may still be present be sure not to let water come into contact with electrical components)*

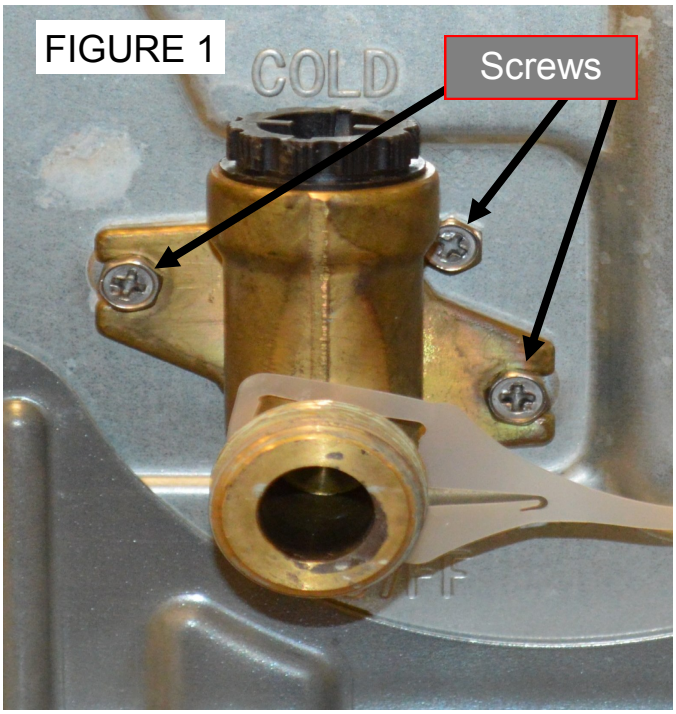

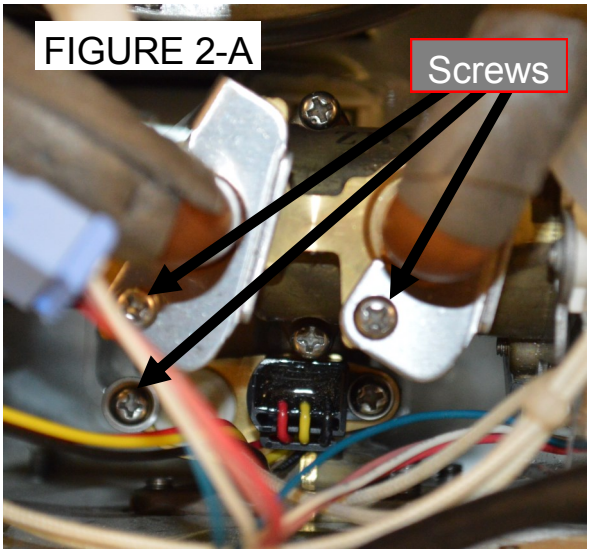

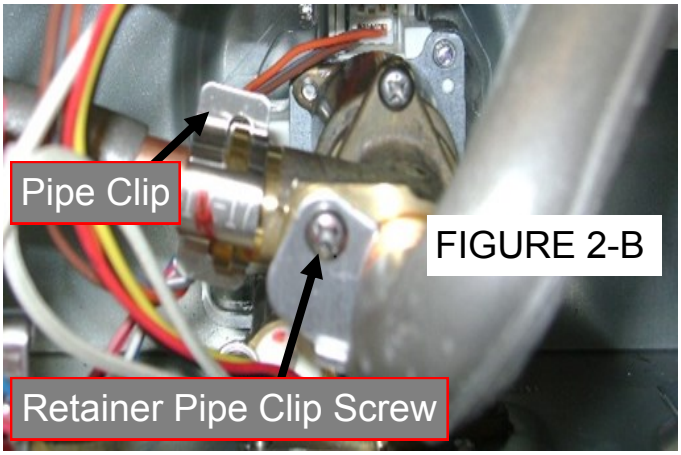

Please note that the O-rings for the two different types of By-Passes are not the same as one is smaller than the other. As the kit will include both sizes be sure to use the proper one.

Water Flow Control Assembly

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

9. Separate the Water Flow Servo Valve from the By-Pass Valve by removing 2 screws. (FIGURE 3-A and FIGURE 3-B)
10. Attach the new Water Flow Servo Valve to the By-pass Valve using the 2 screws. (FIGURE 3-A)
11. Reinstall the Water Flow Servo Valve assembly.
12. Reconnect flow sensor and flow control wire harnesses.
13. Attach the Water Flow Servo Valve retainer clips using 2 screws (1 screw per clip) as well as the 1 screw to hold in the ceramic anti-frost heater to the valve assembly (FIGURE 2)
14. Reinstall the inlet fixture using 2 screws as well as the 1 screw to the right of inlet fixture. (FIGURE 1)
15. For indoor models, reinstall the controller bracket and controller. Replace the front panel. Reinstall 4 screws securing the front panel.
16. Turn on the gas supply.
17. Turn on water supply.
18. Reconnect the electrical power.
19. Open a hot water tap and ensure there are no leaks at the water heater.

NOTE
The O-rings for the Variable and Fixed By-pass valves are a different size and cannot be interchanged between each other. Pay attention as this kit includes both sizes.

FIGURE 3-A

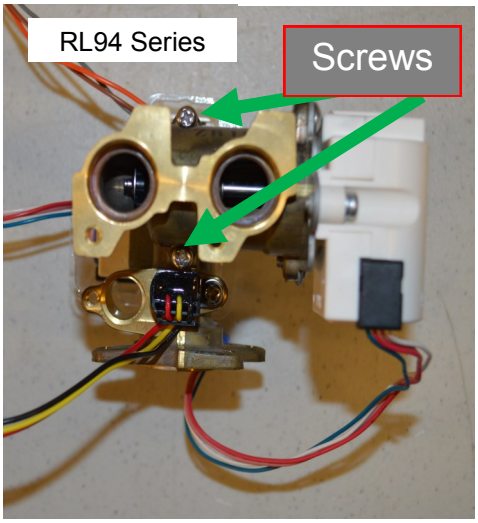

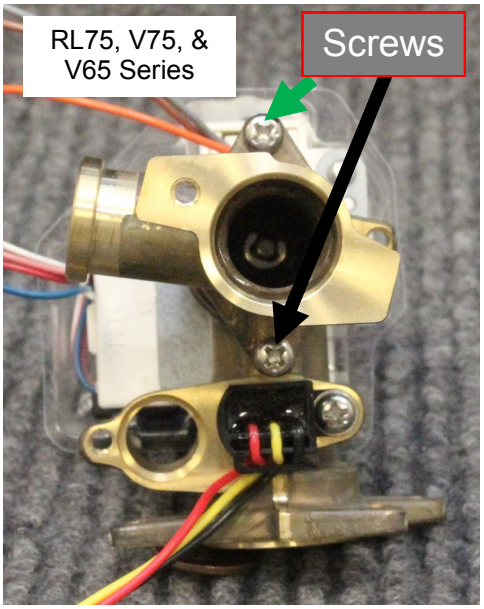

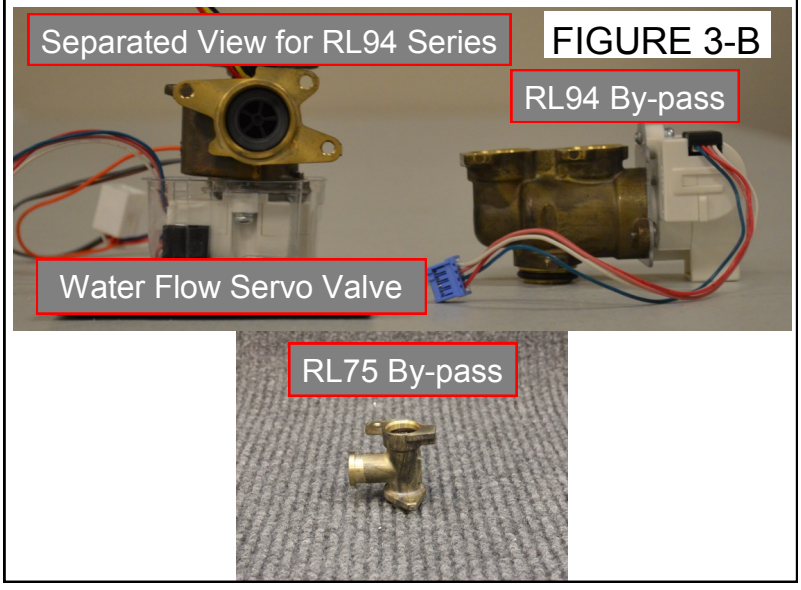

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in water leak.

Heat Exchanger

R/C42e, R/C53e, V53e, R63LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.
5. On the V53e and R63LSe, remove the screws (3) holding the bracket with the surge protector. (Figure 1)
6. Disconnect the wire harness at the fan assembly. (Figure 2)
7. Remove screws and brackets securing the water line connections. (Figure 1)
8. Remove the 3 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations. (Figure 1)
9. Remove the 6 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly). (Figure 1)
10. Pull out the gas manifold.

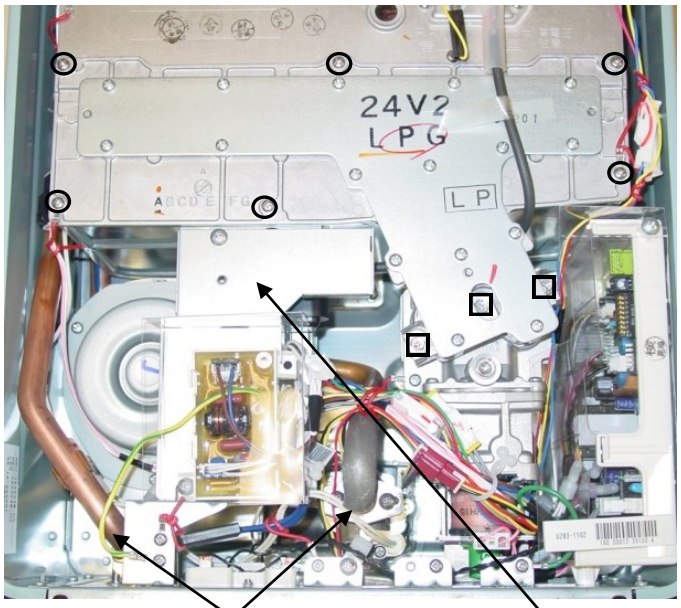

Figure 1 Water Connections Bracket

6 screws ○ (gas manifold)

3 machine screws □ (gas valve)

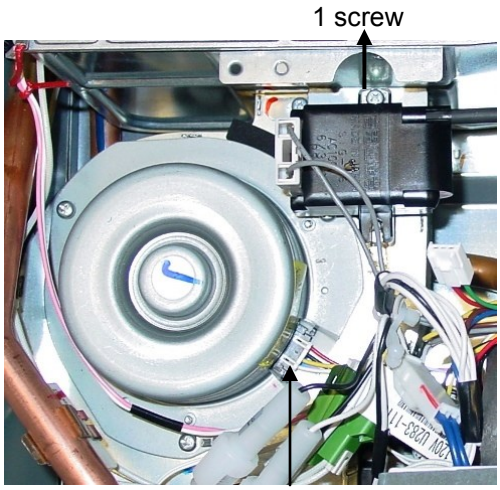

Figure 2 Wire Harness Connector

Heat Exchanger

R/C42e, R/C53e, V53e, R63LSe

11. Remove the clips and screws (5 for the V53e and R/C42; 6 for the R/C53 and R63LSe) attaching the burner cover plate to the combustion chamber. (Figure 3)
12. Remove the 2 screws attaching the burner to the heat exchanger. Pull out the burner. (Figure 3)
13. Disconnect wire harnesses:
    A. Thermal fuse connectors (two) from bundle near PCB (BK to RD and WT to RD)
    B. Disconnect overheat bimetal from upper right heat exchanger.
    C. Heat exchanger thermistor connector from bundle near PCB (WT/WT to WT/PK)
    D. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).
    E. Ignitor harness in front of fan housing (GY/GY)
14. Remove the 4 screws connecting the heat exchanger to the casing. (Figures 4 and 5)
15. Pull out the assembly.

IMPORTANT: Take note of wire harness routing prior to removal.

16. Remove overheat bimetal from upper right heat exchanger. (one screw) Install on new heat exchanger.
17. Remove thermistor and o ring from upper left heat exchanger. (two screws, one clip) Install thermistor and new o ring (in kit) on new heat exchanger.
18. Remove thermal fuse harness and clips from around heat exchanger. Install on new heat exchanger and connect to overheat bimetal connector.
19. Remove heating elements and clips from heat exchanger. Install on new heat exchanger.
20. Remove ignitor module and bracket from bottom of combustion chamber.

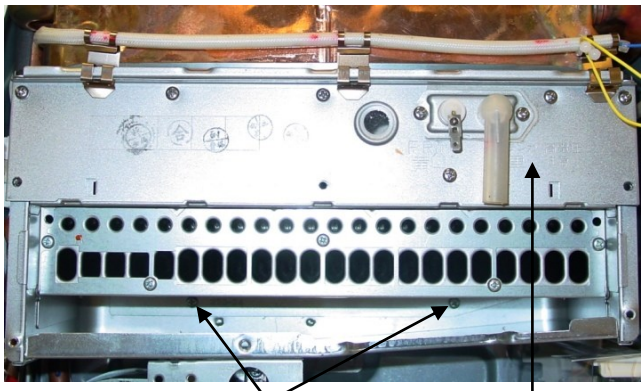

Figure 3 Screws attaching burner Burner cover plate

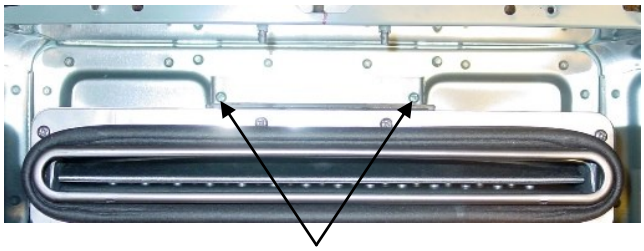

Figure 4 Top attachment screws

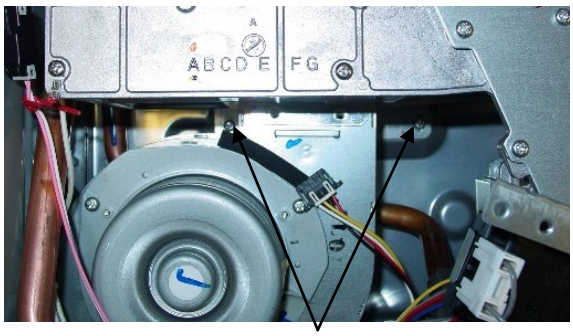

Figure 5 Bottom attachment screws

21. Remove the fan assembly (four screws) and install on new heat exchanger.
22. Install ignitor module and bracket on new heat exchanger.
23. Remove the flue outlet (seven screws) and install on the new heat exchanger.
24. Install the largest O-ring (included in kit) over the water outlet tube and the smaller O-ring (included in kit) over the water inlet tube. (Figure 1)
25. Install the 4 screws at the top and bottom of the heat exchanger to the casing. (Figures 4 and 5)
26. Insert the burner and place the burner cover plate into position. Attach the burner cover plate first with screws (5 for the V53e and R/C42; 6 for the R/C53 and R63LSe) and then attach the burner with 2 screws. (Figure 3)
27. Make sure that the black gaskets (Figure 6) are intact on the gas control assembly. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.
28. Attach the gas manifold with 3 machine screws at the gas control assembly. (Figure 1)
29. Attach the gas manifold with 6 screws at heat exchanger. (Figure 1)
30. Connect wire harnesses:
    A. Thermal fuse connectors (two) from bundle near PCB (BK to RD and WT to RD)
    B. Heat exchanger thermistor connector from bundle near PCB (WT/WT to WT/PK)
    C. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).
    D. Ignitor harness in front of fan housing (GY/GY).
31. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
32. Attach the brackets to the water line connections. (Figure 1)
33. On the V53e and R63LSe, install the bracket with the surge protector (3 screws). (Figure 1)
34. Install the front panel using 4 screws.
35. Turn on the water supply, power supply, and gas supply.

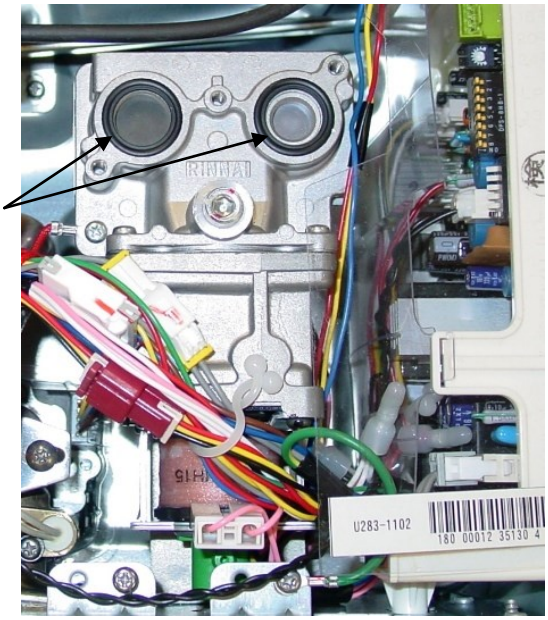

Figure 6

Heat Exchanger

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.
5. **On VB models**, remove one screw from ignitor module bracket. Remove bracket.

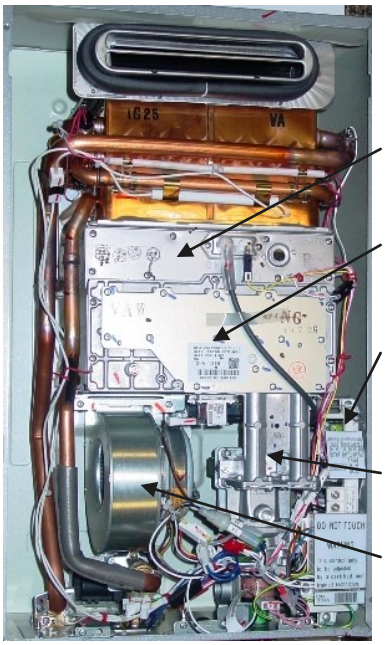

Figure 1

Remove Fan Assembly (Figure 2)

6. Disconnect wire harness at the fan assembly.
7. **On V and VA models**, pull out the harness attached to the solenoid on the manifold to make room to pull out the fan assembly.
8. Remove the 2 screws that attach the fan assembly to the bottom of the burner.
9. Pull out the fan assembly.

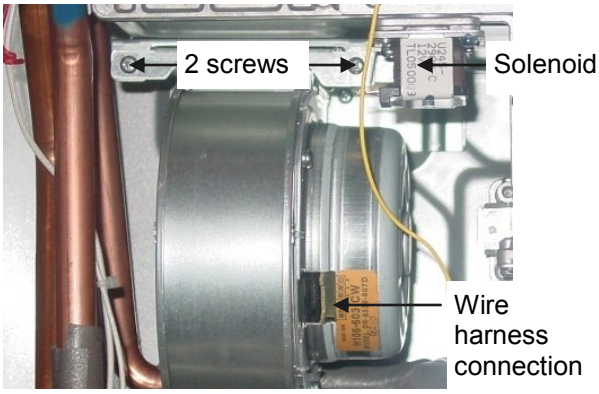

Figure 2

Disconnect Water Lines (Figure 3)

10. Remove 1 screw from the water outlet bracket. Remove the bracket by rotating and moving it up toward the bend in the tube where the diameter is smaller.
11. **For models with a bypass valve**, remove 2 screws and 2 brackets at the bypass servo assembly.
    For models without a bypass valve, remove 1 screw and 1 bracket at the water flow servo assembly.

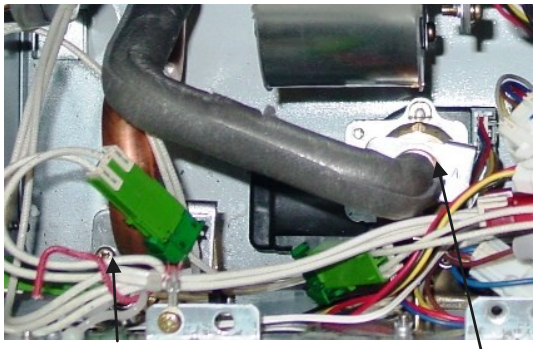

Figure 3

Disconnect PC Board (Figure 4)

12. Remove 1 screw connecting the PC Board to the heat exchanger assembly.

Heat Exchanger

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe

Remove Gas Manifold (Figure 4)

13. Remove the 3 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations.
14. Remove the 6 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly).
15. Pull out the ignition line and remove the gas manifold.
16. **On VB models**, disconnect the two solenoid harnesses form the manifold (black/red and black/orange).

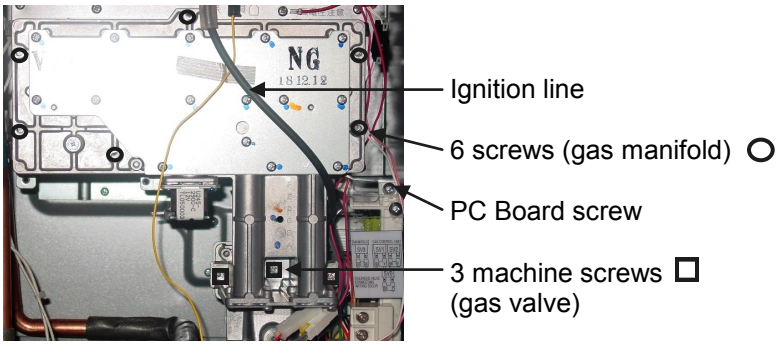

Figure 4

Remove Burner and Burner Cover Plate (Figure 5)

17. Remove the 8 screws attaching the burner cover plate to the combustion chamber. Move the cover plate to the side. It is not necessary to disconnect the wire harness from the burner cover plate.
18. Remove the 2 screws attaching the burner to the heat exchanger. Pull out the burner.

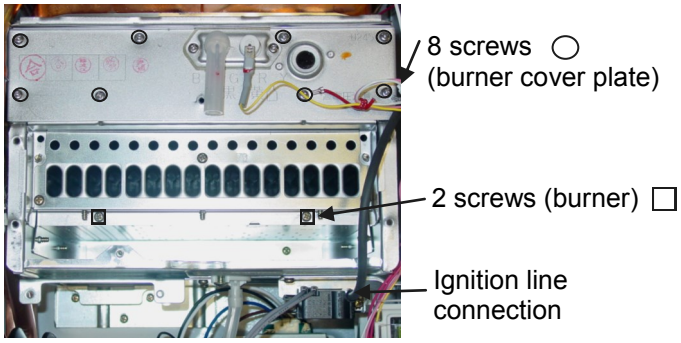

Figure 5

Disconnect Wire Harness Attachments and Screws Holding the Heat Exchanger

19. Disconnect the wire harnesses:

    A. 1. Thermal fuse connector(s) from bundle near PCB (RD/RD to RD/RD) VB Models: (WT to RD and WT to WT)
    B. 2. Heat exchanger thermistor connector from bundle near PCB. (WT/WT to PK/WT) VB Models: (WT/WT to PK/PK)
    C. 3. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom), frost sensing switch (bottom center). NOTE: Some models do not have a connector at water outlet or water flow servo heating elements and must be removed from the assembly.
    D. 4. Ignitor module harness (GY/GY) N/A for VB models

20. Remove 3 screws behind the fan. (Figure 6)
21. Remove 2 screws above the exhaust. Pull assembly from the unit. (Figure 7)

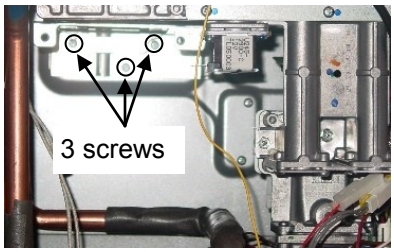

Figure 7

Figure 8

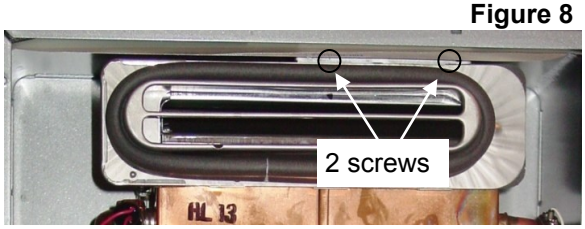

Heat Exchanger

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

Installation

22. Install the largest O-ring (included in kit) over the water outlet tube and the two smaller O-rings (included in kit) over the bypass servo tubes. (Figure 3)
23. Relocate water heater components:

    Important: Take note of wire harness routing prior to removal.

    A. Remove overheat bimetal from upper left heat exchanger. (one screw) Remove thermal fuse harness and clips from around heat exchanger. Install bimetal and thermal fuse on new heat exchanger.

    B. Remove thermistor and o ring from upper right heat exchanger. Install thermistor and new o ring (in kit) on new heat exchanger.

    C. Remove heating elements, sensor and clips from heat exchanger. Install on new heat exchanger.

    D. Remove ignitor module from bottom of combustion chamber. Install on new heat exchanger.
24. Install the new heat exchanger using 2 screws above the exhaust and 3 screws behind the fan. (Figures 6, 7)
25. Connect wire harnesses:

    A. Thermal fuse connector(s) from bundle near PCB (RD/RD to RD/RD) VB Models: (WT to RD and WT to WT)

    B. Heat exchanger thermistor connector from bundle near PCB. (WT/WT to PK/WT) VB Models: (WT/WT to PK/PK)

    C. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom), frost sensing switch (bottom center). NOTE: Some models do not have a connector at water outlet or water flow servo heating elements and must be reinstalled.

    D. Ignitor module harness (GY/GY) N/A for VB models

26. (Figure 5) Replace the combustion chamber packing (included in kit) removing any residue from old packing. Insert the burner and place the burner cover plate into position. Attach the burner cover plate first with 8 screws and then attach the burner with 2 screws.

Install Gas Manifold and Connect PC Board

27. Make sure that the two black packings (Figure 8) are intact on the gas control assembly. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.Attach the gas manifold with 3 machine screws at the gas control assembly. Replace the lower and upper packings (included in kit) for the manifold plate removing any residue.
28. **On VB models**, connect the two solenoid harnesses from the manifold (black/red and black/orange).
29. Attach the gas manifold with 6 screws at heat exchanger.
30. Attach the ignition line at the burner cover plate.
31. Attach the PC Board to the heat exchanger with 1 screw.

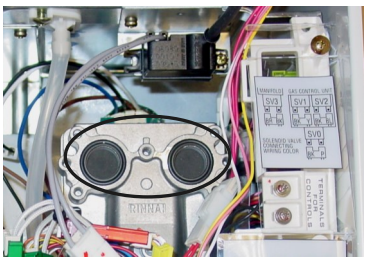

Figure 8

Heat Exchanger

R70e, R/C85e(PLUS), R63LSe2, R75LSe, R94LSe

Connect Water Lines (Figure 3)

32. Attach the water outlet line and bracket with 1 screw.
33. Depending on model, attach the line to the water flow servo assembly with 1 screw and 1 bracket or attach the lines to the bypass valve with 1 screws and 1 brackets for each line.

Install Fan Assembly (Figure 2)

34. Install the fan assembly by inserting the tab on the fan assembly into the slot at the base of the heat exchanger and attaching with two screws.
35. Attach the wire harness to the solenoid on the gas manifold (brown, black wires).
36. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
37. **On VB models**, install the ignitor module bracket with one screw.
38. Install the front panel using 4 screws. Turn on the water supply, power supply, and gas supply. Check for gas leaks.

Heat Exchanger

R/C53i(PLUS), R/C85i(PLUS), V53i, R50LSi, R75LSi, R94LSi

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.
5. **On VB models except the VB2020**, remove one screw from ignitor module bracket. Remove bracket.
6. Remove temperature controller and bracket by sliding up and out of slots on cabinet. On the VB2020, remove one screw from the status monitor assembly at the gas manifold. Remove module.

Remove Fan Assembly (Figure 2)

7. Disconnect wire harness at the fan assembly. Disconnect the air temperature thermistor (two white wires) at the connection with the white and orange wires within the wire bundle.
8. **On V and VA models and VB2020**, pull out the harness attached to the solenoid on the manifold to make room to pull out the fan assembly.
9. Remove the 2 screws that attach the fan assembly to the bottom of the burner.
10. Loosen the ducting from the fan assembly by pinching open the metal clamp. Pull out the fan assembly.

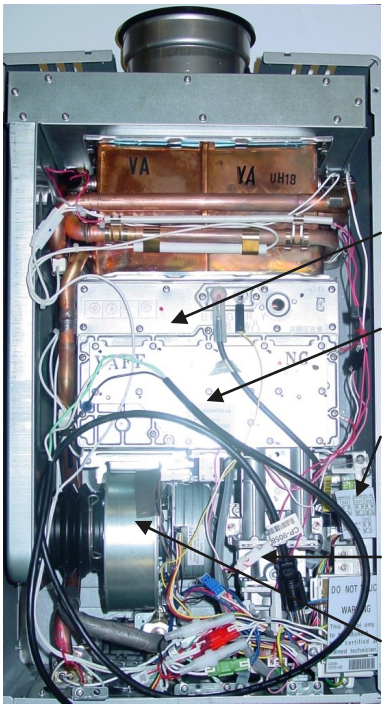

Figure 1

Disconnect Water Lines and PC Board (Figure 2)

11. Remove 1 screw from the water outlet bracket. Remove the bracket by rotating and moving it up toward the bend in the tube where the diameter is smaller.
12. **For models with a bypass valve**, remove 2 screws and 2 brackets at the bypass servo assembly.
    For models without a bypass valve, remove 1 screw and 1 bracket at the water flow servo assembly.
13. Remove 1 screw connecting the PC Board to the heat exchanger assembly.

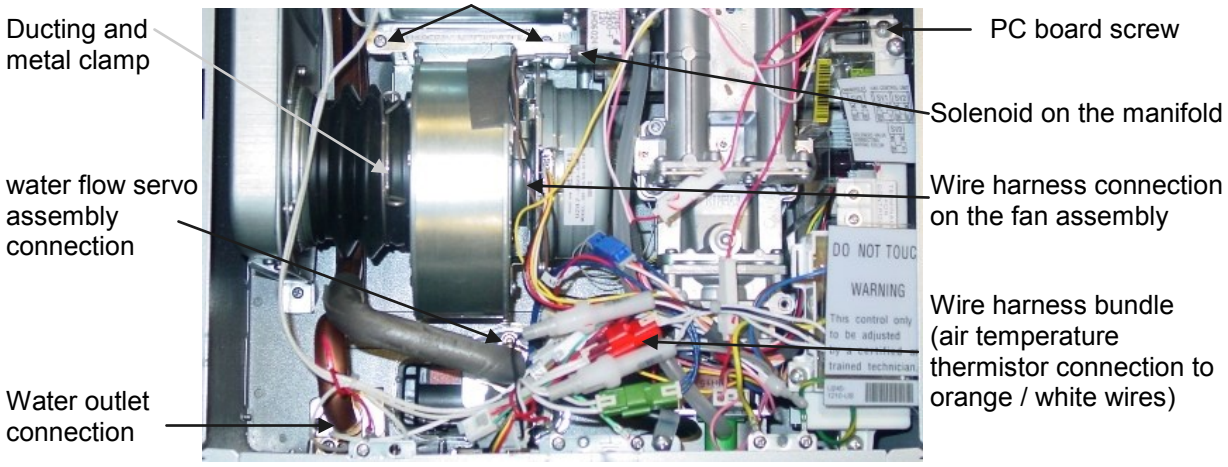
2 screws
Ducting and metal clamp
water flow servo assembly connection
Water outlet connection
PC board screw
Solenoid on the manifold
Wire harness connection on the fan assembly
Wire harness bundle (air temperature thermistor connection to orange / white wires)

Figure 2

Heat Exchanger

R/C53i(PLUS), R/C85i(PLUS), V53i, R50LSi, R75LSi, R94LSi

Remove Gas Manifold (Figure 3)

14. Remove the 3 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations.
15. Remove the 6 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly).
16. Pull out the ignition line and remove the gas manifold.
17. **On VB models except the VB 2020**, disconnect the two solenoid harnesses from the manifold (black/red and black/orange).

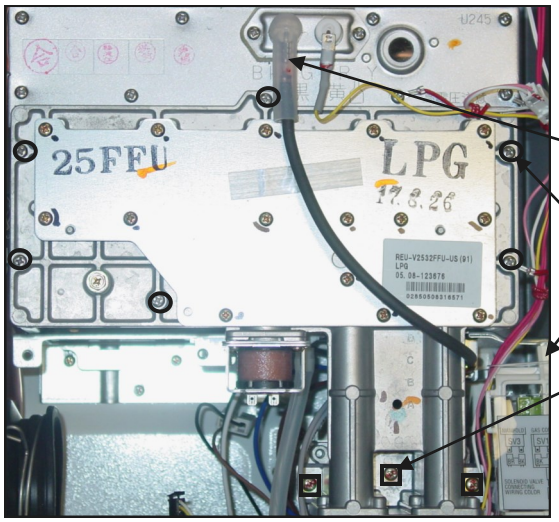

Figure 3

Remove Burner and Burner Cover Plate (Figure 4)

18. Remove the 8 screws attaching the burner cover plate to the combustion chamber. Move the cover plate to the side. It is not necessary to disconnect the wire harness from the burner cover plate.
19. Remove the 2 screws attaching the burner to the heat exchanger. Pull out the burner.
20. Disconnect the pressure tube from the heat exchanger.

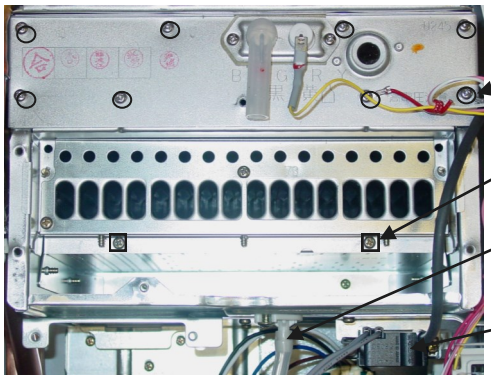

Figure 4

21. Disconnect wire harnesses:
    - A. Thermal fuse connector(s) from bundle near PCB (RD/RD to RD/RD) VB Models: (WT to RD and WT to WT)
    - B. Heat exchanger thermistor connector from bundle near PCB. (WT/WT to PK/WT) VB Models: (WT/WT to PK/PK)
    - C. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom), frost sensing switch (top left heat exchanger). NOTE: Some models do not have a connector at water outlet or water flow servo heating elements and must be removed from the assembly.
    - D. Ignitor module harness (GY/GY) N/A for VB models
    - E. VB models only: Burner sensor from bundle near PCB. (BK/BK)
22. Remove 8 screws connecting the assembly to the water heater casing assembly. (Figures 6, 7)

Near fan assembly location

Figure 6

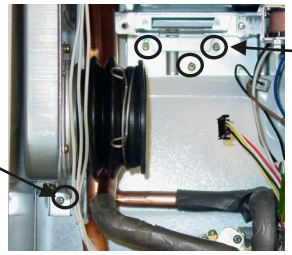

At right and left upper corners of water heater

2 screws **Figure 7** 2 screws

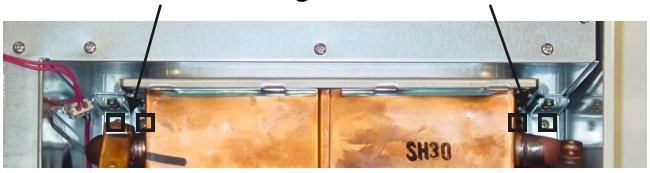

23. Pull out the assembly. Remove 3 brackets on the side and back holding the fusible link.
24. Remove the 9 screws at the cover plate over the air intake passage. (Figure 8)
25. Remove the 4 screws attaching the heat exchanger to the air intake/exhaust assembly. (Figure 9)

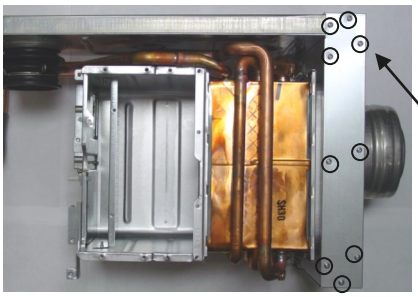

Figure 8

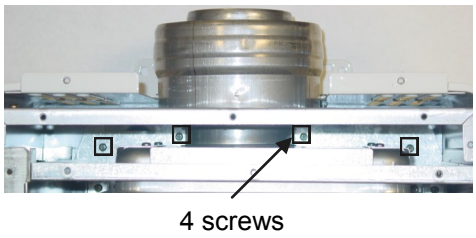

Figure 9

26. Pull apart the heat exchanger and air intake/exhaust assembly. (Figure 10)
27. Remove 4 screws attaching the bracket on top of the heat exchanger. Pull off the bracket. (Figure 11)

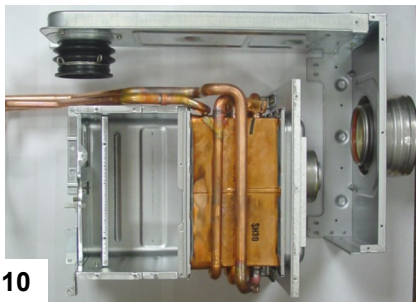

Figure 10

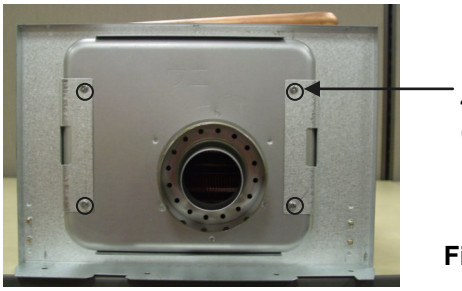

Figure 11

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

28. Install the O-ring (included in kit) over the water outlet tube and the O-ring (included in kit) over the water flow servo tube or bypass tube. (Figure 2)
29. Install the bracket over the replacement heat exchanger. Push evenly on both sides of the bracket. Attach with four screws. (Figure 10)
30. Push the heat exchanger into the air intake/exhaust assembly. Attach with four screws. (Figure 8)
31. Attach the cover plate over the air intake passage with 9 screws. (Figure 7)
32. Relocate water heater components:

Important: Take note of wire harness routing prior to removal.

A. Remove overheat bimetal from upper left heat exchanger. (one screw) Remove thermal fuse harness and clips from around heat exchanger. Install bimetal and thermal fuse on new heat exchanger. Use 2 clips on back and 1 clip on side for thermal fuse
B. Remove thermistor and o ring from upper right heat exchanger. Install thermistor and new o ring (in kit) on new heat exchanger.
C. Remove heating elements, sensor and clips from heat exchanger. Install on new heat exchanger.Remove ignitor module from bottom of combustion chamber. Install on new heat exchanger.
D. VB models only: Remove burner sensor from right side of heat exchanger. Install with new gasket (in kit) on new heat exchanger.

33. *(Figures 6a, 6b)* Slide the assembly into the casing assembly and attach with 8 screws starting at the top of the water heater.
34. Connect wire harness attachments. (Figure 5)
    A. Thermal fuse connector(s) at bundle near PCB (RD/RD to RD/RD) VB Models: (WT to RD and WT to WT)
    B. Heat exchanger thermistor connector at bundle near PCB. (WT/WT to PK/WT) VB Models: (WT/WT to PK/PK)
    C. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom), frost sensing switch (top left heat exchanger). NOTE: Some models do not have a connector at water outlet or water flow servo heating elements.
    D. Ignitor module harness (GY/GY) N/A for VB models
    E. VB models only: Burner sensor from bundle near PCB. (BK/BK)
35. Connect the pressure tube.
36. (Figure 4) Replace the combustion chamber packing (included in kit) removing any residue from old packing. Insert the burner and place the burner cover plate into position. Attach the burner cover plate first with 8 screws and then attach the burner with 2 screws.
37. Make sure that the two black packings (Figure 12) are intact on the gas control assembly. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve.Attach the gas manifold with 3 machine screws at the gas control assembly. Replace the lower and upper packings (included in kit) for the manifold plate removing any residue.
38. **For VB models except the VB2020**, connect the two solenoid harnesses from the manifold (black/red and black/orange).
39. Attach the gas manifold with 6 screws at heat exchanger.
40. Attach the ignition line at the burner cover plate.
41. Attach the PC Board to the heat exchanger with 1 screw.

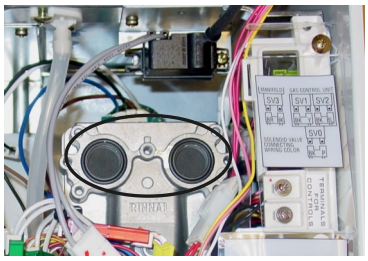

Figure 12

42. (Figure 2) Attach the water outlet line and bracket with 1 screw.
43. Depending on model, attach the line to the water flow servo assembly with 1 screw and 1 bracket or attach the lines to the bypass valve with 1 screws and 1 brackets for each line.
44. (Figure 2) Install the fan assembly by inserting the tab on the fan assembly into the slot at the base of the heat exchanger and attaching with two screws.
45. Push the ducting over the fan assembly exit and secure with the metal pinch clamp.
46. **On V and VA models and VB2020**, attach the wire harness to the solenoid on the gas manifold (brown, black wires).
47. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
48. Attach the air temperature thermistor (white, white wires) to the wire harness.
49. **For VB models except the VB2020**, install the ignitor module bracket with one screw.
50. Install temperature controller and bracket. For the VB2020, install the status monitor assembly with one screw.
51. Install the front panel using 4 screws.
52. Turn on the water supply, power supply, and gas supply. Check for gas leaks.

Heat Exchanger

R/C98e(ASME), R98LSe(ASME)

1. Turn off the gas supply, the 120 V power supply, and the water supply. Drain all water from the appliance.
2. Remove four screws securing the front panel. Remove front panel.
3. Disconnect wire harness at the fan assembly, the electrical connections to the 3 solenoid valves, and the ignition line.
4. Remove 3 screws and brackets securing the water line connections. (Figure 1)
5. Remove the 2 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations. (Figure 1)
6. Remove the 5 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly). (Figure 1)
7. Pull out the gas manifold and remove the connector at the ignitor at the left side of the gas manifold. (GY/GY)
8. Remove the 9 screws attaching the burner cover plate to the combustion chamber. (Figure 2)
9. Remove the 2 screws attaching the burner to the heat exchanger. Pull out the burner. (Figure 2)
10. Disconnect wire harnesses:
    A. Thermal fuse connectors (two) from bundle on left side of heat exchanger (WT to WT and RD to RD)
    B. Disconnect overheat bimetal from upper right heat exchanger.
    C. Heat exchanger thermistor connector from bundle on left side of heat exchanger (WT/WT to WT/PK)
    D. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).
11. Remove the 4 screws connecting the heat exchanger to the casing. (Figure 3)
12. Pull out the assembly.
13. Relocate water heater components:

    Important: Take note of wire harness routing prior to removal.
    A. Remove overheat bimetal from upper right heat exchanger. (one screw) Install on new heat exchanger.
    B. Remove thermistor and o ring from upper left heat exchanger. (two screws, one clip) Install thermistor and new o ring (in kit) on new heat exchanger.
    C. Remove thermal fuse harness and clips from around heat exchanger. Install on new heat exchanger by sliding the harness between the water outlet and inlet tubes (figure 4) and connect to overheat bimetal connector.
    D. Remove heating elements and clips from heat exchanger. Install on new heat exchanger.
    E. Remove the fan assembly (four screws) and install on new heat exchanger. Figure 4
    F. Remove the flue outlet (six screws) and install on the new heat exchanger. Figure 5

5 screws ◯ (gas manifold) 2 machine screws □ (gas valve)

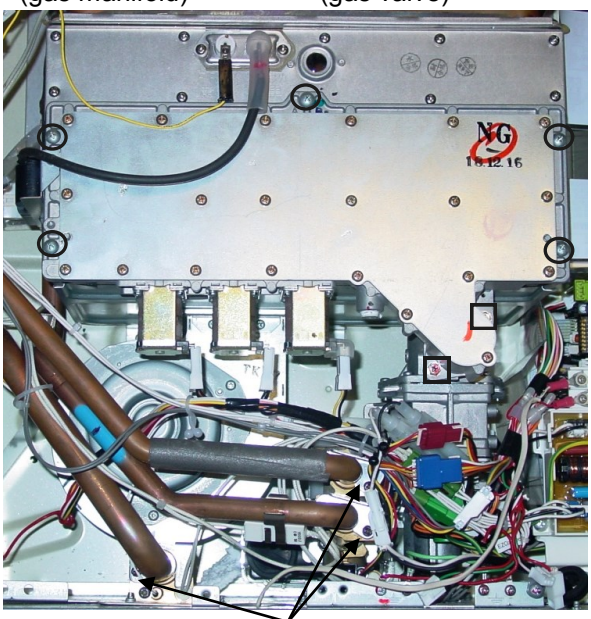

Figure 1 Water line connections

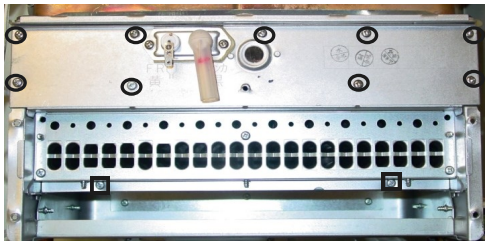

Figure 2 9 screws ◯ (burner cover plate) 2 screws □ (burner)

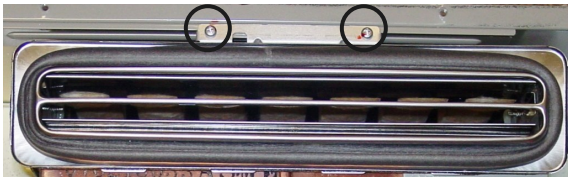

Top screws

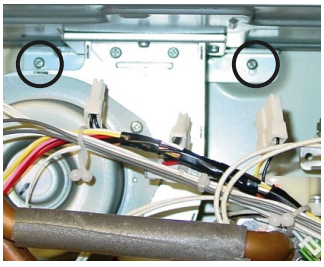

Figure 3 Bottom screws

Heat Exchanger

R/C98e(ASME), R98LSe(ASME)

14. Install the largest O-ring (included in kit) over the water outlet tube and the two smaller O-rings (included in kit) over the water inlet tubes. (Figure 4)
15. Attach brackets at the back and side holding the fusible link.
16. Install the 4 screws at the top and bottom of the heat exchanger to the casing. (Figure 3)
17. Insert the burner and place the burner cover plate into position. Attach the burner cover plate first with 9 screws and then attach the burner with 2 screws. (Figure 2)
18. Replace the electrode gasket. (Figure 6)
19. Make sure that the black gasket (Figure 7) is intact on the gas control assembly. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve. Replace the lower and upper gaskets (included in kit) for the manifold plate removing any residue. (Figure 8)
20. Attach the electrical connector (GY/GY) to the ignitor on the manifold and attach the gas manifold with 2 machine screws at the gas control assembly. (Figure 1)
21. Attach the gas manifold with 5 screws at heat exchanger. (Figure 1)
22. Connect wire harness attachments:
    A. Thermal fuse connectors (two) at bundle on left side of heat exchanger (WT to WT and RD to RD).
    B. Overheat bimetal at upper left heat exchanger.
    C. Heat exchanger thermistor connector at bundle on left side of heat exchanger (WT/WT to WT/PK).
    D. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).
23. Attach the ignition line at the burner cover plate.
24. Attach the 3 electrical connectors to the solenoid valves.
25. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
26. Attach the brackets to the water line connections. (Figure 1)
27. Install the front panel using 4 screws. Turn on the water supply, power supply, and gas supply. Check for gas leaks.

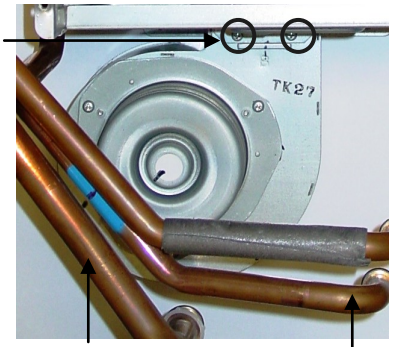

Figure 4

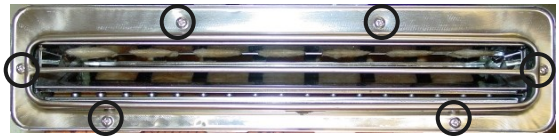
Figure 5

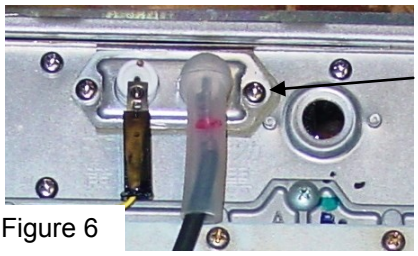

Figure 6

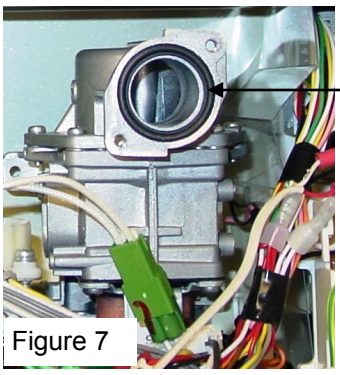

Figure 7

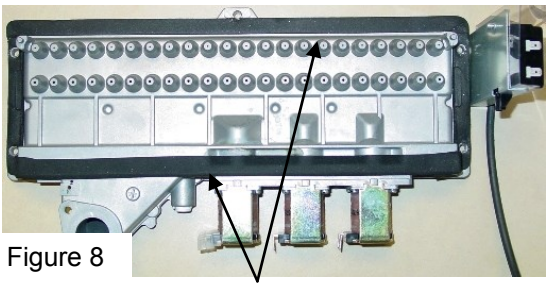
Figure 8

Gaskets

Heat Exchanger

R/C98i(ASME), R98LSi(ASME)

1. Turn off the gas supply.
2. Turn off the 120 V power supply.
3. Turn off the water supply. Drain all water from the appliance.
4. Remove four screws securing the front panel. Remove front panel.
5. Remove the bracket holding the controller (1 screw). (Figure 1)
6. Disconnect wire harness at the fan assembly, the electrical connections to the 3 solenoid valves, and the ignition line.
7. Remove 3 screws and brackets securing the water line connections. (Figure 2)
8. Remove the 2 screws that attach the gas manifold to the gas valve. These screws are machine screws and must be used at these locations. (Figure 2)
9. Remove the 5 screws that attach the gas manifold to the combustion chamber (part of the heat exchanger assembly). (Figure 2)
10. Pull out the gas manifold and remove the connector at the ignitor at the left side of the gas manifold. (GY/GY)
11. Remove the 9 screws attaching the burner cover plate to the combustion chamber. (Figure 3)
12. Remove the 2 screws attaching the burner to the heat exchanger. Pull out the burner. (Figure 3)
13. Disconnect wire harnesses:
    - A. Thermal fuse connectors (two) from bundle on left side of heat exchanger (WT to WT and RD to RD)
    - B. Disconnect overheat bimetal from upper right heat exchanger.
    - C. Heat exchanger thermistor connector from bundle on left side of heat exchanger (WT/WT to WT/PK)
    - D. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).
14. Remove the 3 screws at the seal plate at the top of the water heater. Remove the seal plate and gasket. (Figure 4)
15. Remove flue outlet vent (4 screws). (Figure 5)
16. Remove the 4 screws connecting the heat exchanger to the back of the casing. (Figure 6)
17. Pull out the assembly. (It is hooked on brackets in the casing.)

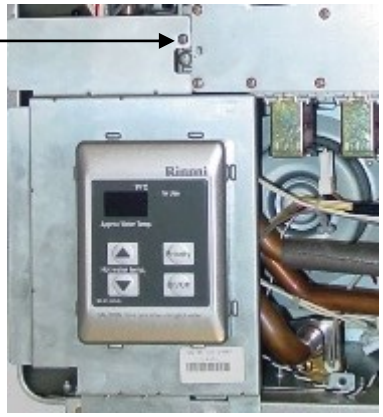

Figure 1

5 screws ◯ (gas manifold)

2 machine screws □ (gas valve)

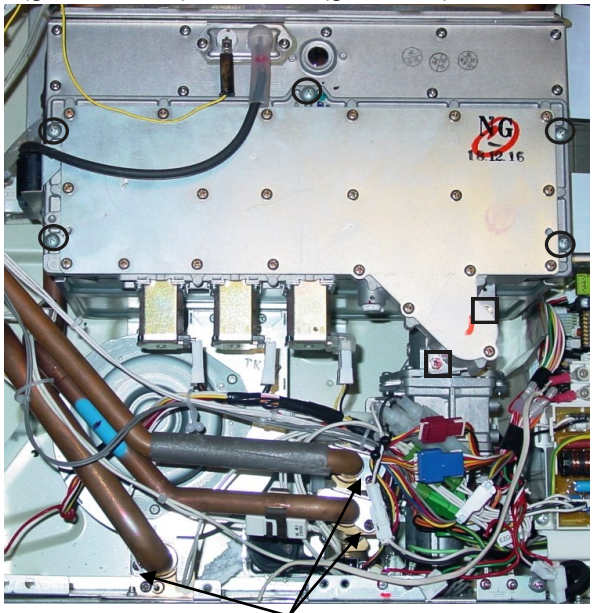

Figure 2 Water line connections

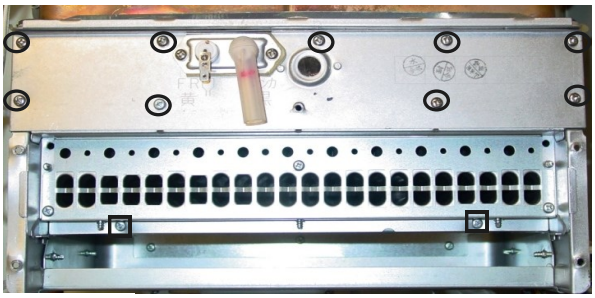

Figure 3 9 screws ◯ (burner cover plate) 2 screws □ (burner)

Heat Exchanger

R/C98i(ASME), R98LSi(ASME)

18. Relocate water heater components:
    A. Remove overheat bimetal from upper right heat exchanger. (one screw) Install on new heat exchanger.
    B. Remove thermistor and o ring from upper left heat exchanger. (two screws, one clip) Install thermistor and new o ring (in kit) on new heat exchanger.
    C. Remove thermal fuse harness and clips from around heat exchanger. Install on new heat exchanger by sliding the harness between the water outlet and inlet tubes (figure 7) and connect to overheat bimetal connector.
    D. Remove heating elements and clips from heat exchanger. Install on new heat exchanger.
    E. Remove the fan assembly (four screws) and install on new heat exchanger. Figure 7
19. Install the largest O-ring (included in kit) over the water outlet tube and the two smaller O-rings (included in kit) over the water inlet tubes. (Figure 7)
20. Install the heat exchanger hooking it on the brackets in the back.
21. Install the 4 screws at the top and bottom of the heat exchanger to the back of the casing. (Figure 6)
22. Install the flue outlet vent (4 screws) and seal plate (3 screws) and gasket at the top of the water heater. (Figures 4 and 5)
23. Insert the burner and place the burner cover plate into position. Attach the burner cover plate first with 9 screws and then attach the burner with 2 screws. (Figure 3)
24. Replace the electrode gasket. (Figure 8)
25. Make sure that the black gasket (Figure 9) is intact on the gas control assembly. Make sure that the ribbed side faces toward the manifold and that the flat side faces toward the gas valve. Replace the lower and upper gaskets (included in kit) for the manifold plate removing any residue. (Figure 10)
26. Attach the electrical connector (GY/GY) to the ignitor on the manifold and attach the gas manifold with 2 machine screws at the gas control assembly. (Figure 2)
27. Attach the gas manifold with 5 screws at heat exchanger. (Figure 2)

Figure 4

Figure 5

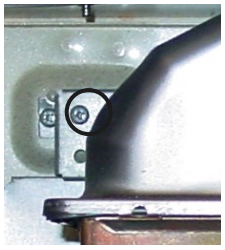

Top left screw

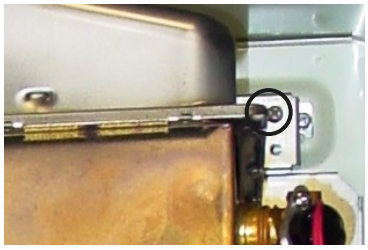

Top right screw

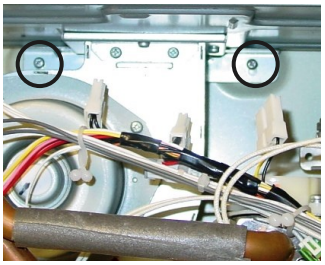

Figure 6

Bottom screws

4 locations

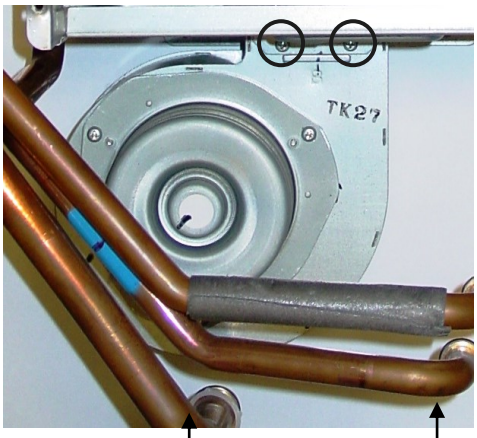

Figure 7

Water outlet tube

Water inlet tubes

28. Connect wire harness attachments:
    A. Thermal fuse connectors (two) at bundle on left side of heat exchanger (WT to WT and RD to RD)
    B. Connect overheat bimetal at upper right heat exchanger.
    C. Heat exchanger thermistor connector at bundle on left side of heat exchanger (WT/WT to WT/PK)
    D. Heating element connectors: water flow servo assembly, hot water outlet, heat exchanger heating elements (at bottom left), frost sensing switch (bottom center).

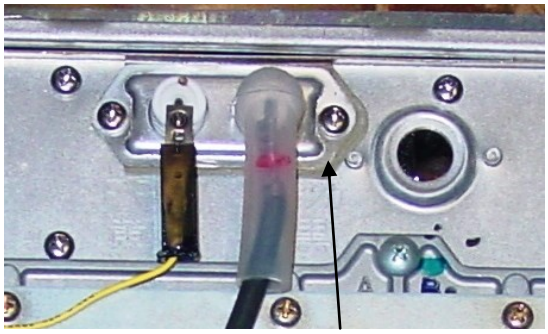

Figure 8

29. Attach the ignition line at the burner cover plate.
30. Attach the 3 electrical connectors to the solenoid valves.
31. Attach the wire harness to the fan assembly (white, yellow, black, red wires).
32. Attach the brackets to the water line connections. (Figure 2)
33. Install the front panel using 4 screws.
34. Turn on the water supply, power supply, and gas supply.
35. Check for gas leaks.

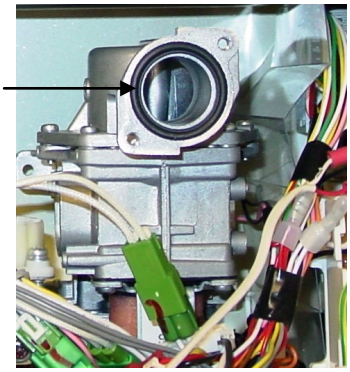

Figure 9

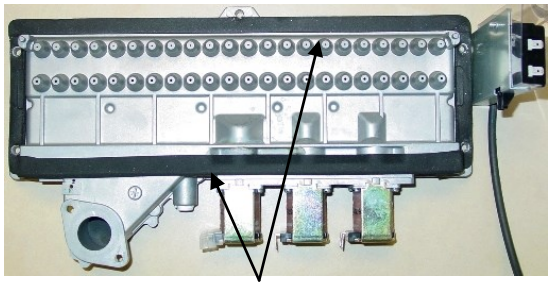

Figure 10

Heat Exchanger

RL94i-VC, RL75i-VC, V75i, V65i

1. Turn off gas supply.
2. Turn off 120 V power supply.
3. Turn off water supply. Drain all water from the appliance.
4. Disconnect venting from top of unit.
5. Remove four screws securing front panel. Remove front panel.
6. Remove bracket holding controller (1 screw). (FIGURE 1)
7. Disconnect ignition wire, electrode and flame rod wires. (FIGURE 2)
8. Remove 6 screws that attach gas manifold to burner case on heat exchanger assembly. (FIGURE 2)
9. Remove 2 screws that attach gas manifold to gas valve. These screws are machine screws and must be used be used in the same location they were removed from. (FIGURE 2)
10. Disconnect solenoid wire harness from manifold assembly. (FIGURE 2)
11. Remove gas manifold.

⚠ WARNING

Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

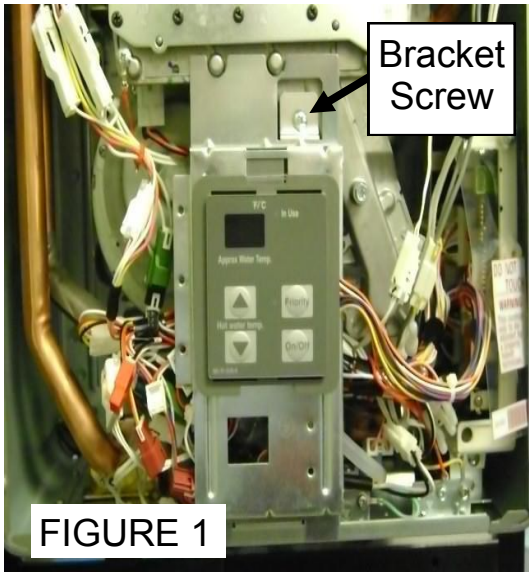

FIGURE 1

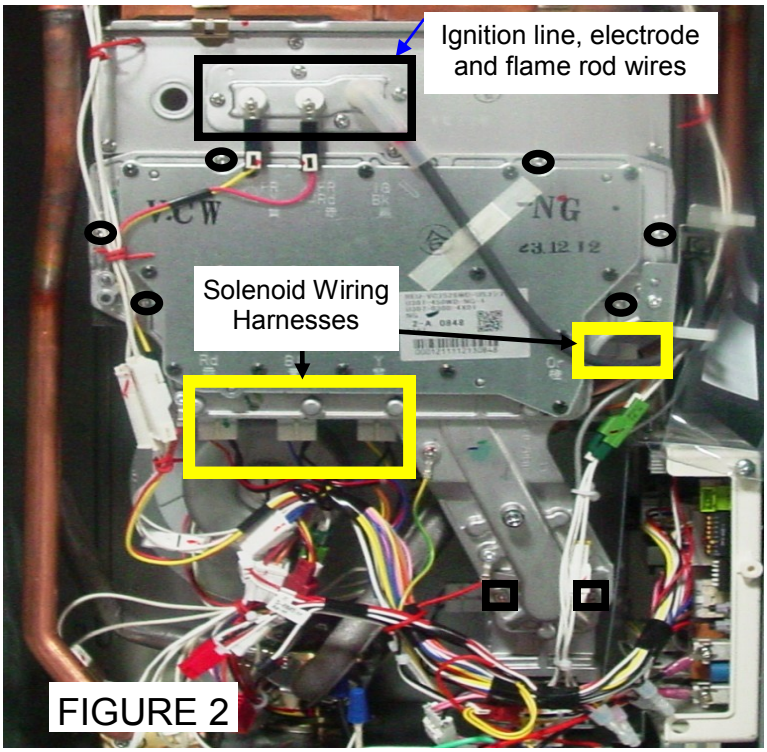

FIGURE 2

2 machine screws (gas valve)

Heat Exchanger

RL94i-VC, RL75i-VC, V75i, V65i

12. Disconnect fan motor wire harness. (FIGURE 3-A)
13. Remove four screws attaching fan motor to fan casing. (FIGURE 3-B)
14. Remove fan motor from housing.

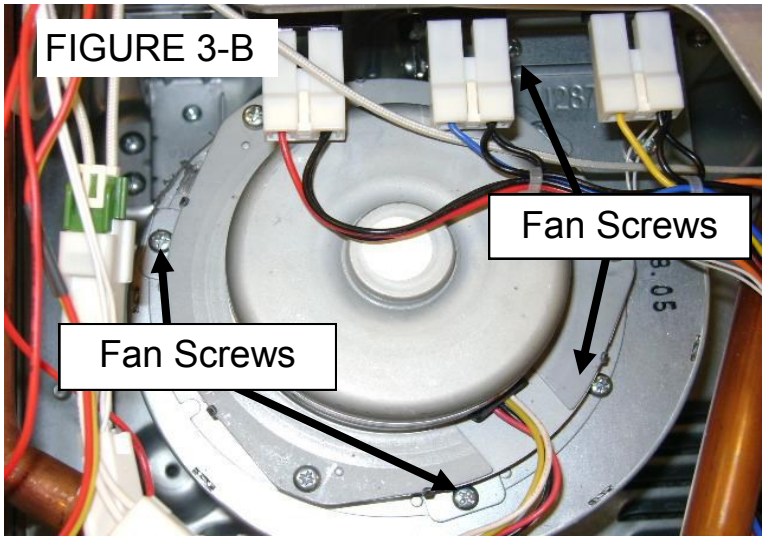

15. Remove 7 screws from site glass plate. (FIGURE 4)
16. Remove clips securing thermal fuse circuit to heat exchanger and site glass plate. (FIGURE 4)
17. Ensure sight plate gasket/packing is intact upon reinstallation. If it is not intact, replace gasket/packing.

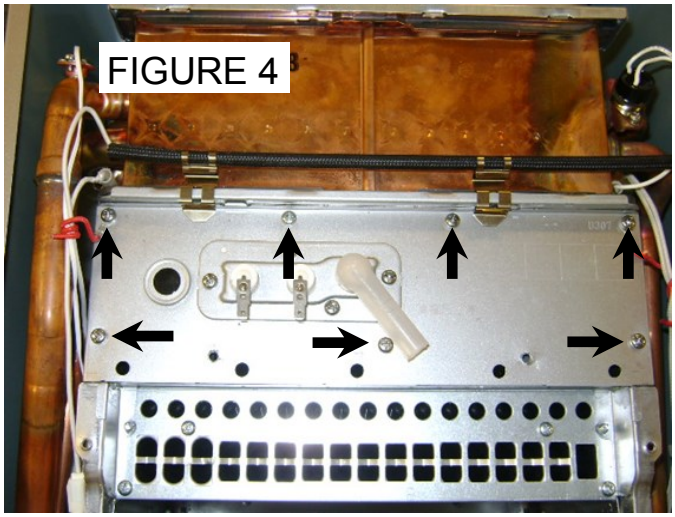

18. Remove 2 screws holding burner (located under burner box) in place. (FIGIURE 5)

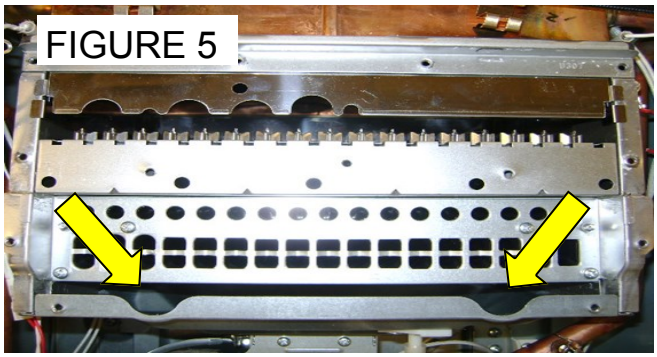

19. Separate copper pipe from outlet connection by removing machine screw from retainer clip. (FIGURE 6)

NOTE

A small amount of water may still be present in the heat exchanger. Be sure not to let water come into contact with electrical components during disassembly and reassembly.

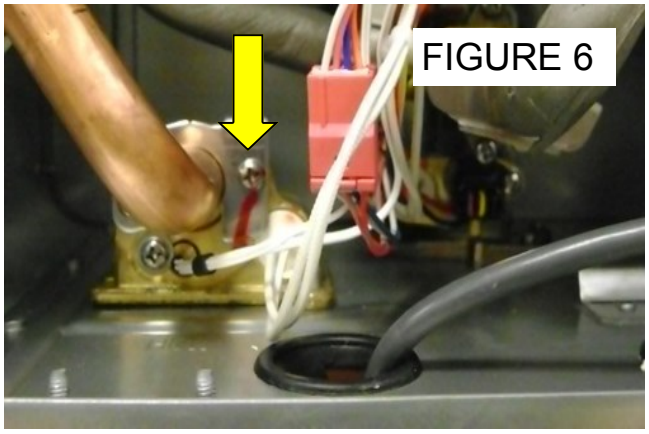

FIGURE 6

20. Remove screw(s) from Water Flow Servo retainer clip(s) as well as screw holding in ceramic anti-frost heater to valve assembly (RL75i units have additional pipe clamp that must be removed. (FIGURE 7)

RL94i Units

FIGURE 7

RL75i, V75i, & V65i Units

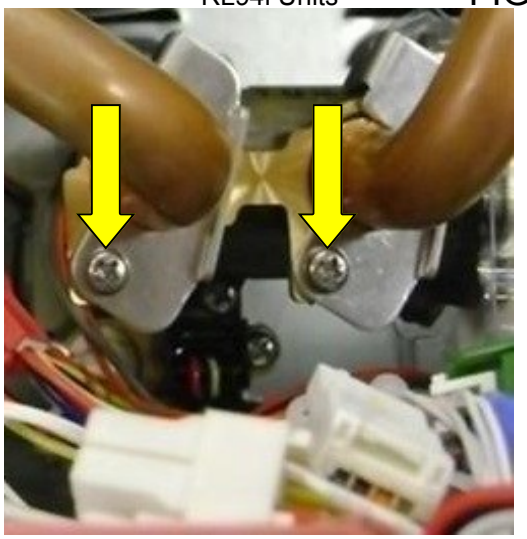

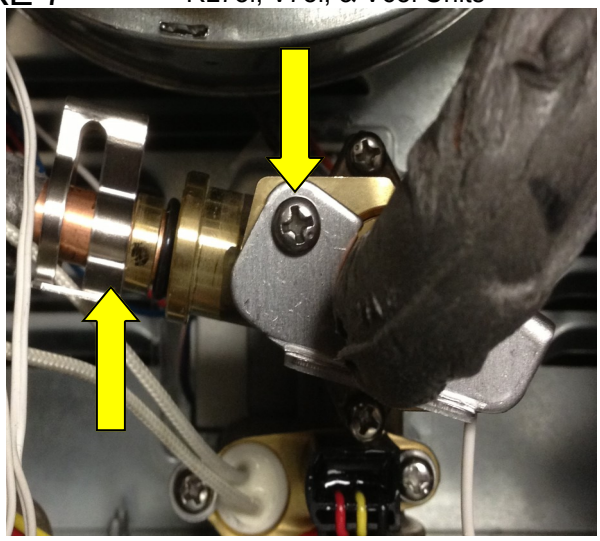

21. Remove 4 screws from bottom brackets of heat exchanger. Ensure that all wire harnesses are disconnected. (Thermistors, Overheat Switches, and Freeze Protection Harnesses) (FIGURE 8)

NOTE

In the event that the unit is still mounted to the wall during steps 21 and 22; be sure the heat exchanger is supported prior to removing the screws securing it to the cabinet In order to prevent damage.

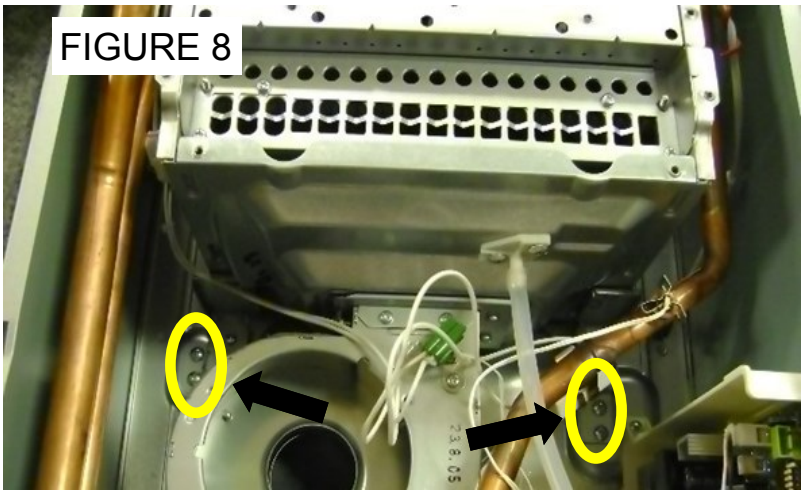

FIGURE 8

22. Remove 4 screws from top left and right side brackets of heat exchanger. (FIGURE 9-A & 9-B)

23. Remove heat exchanger and air inlet box from cabinet. (Ensure that all wire harness are disconnected)

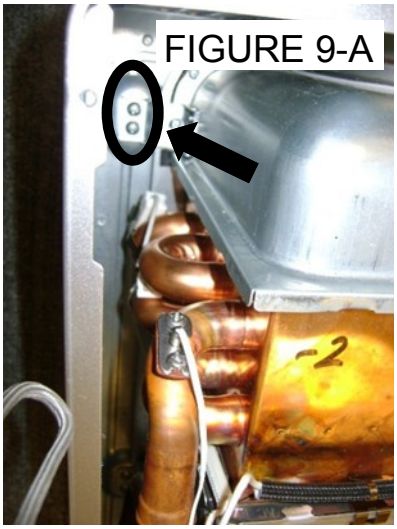
FIGURE 9-A

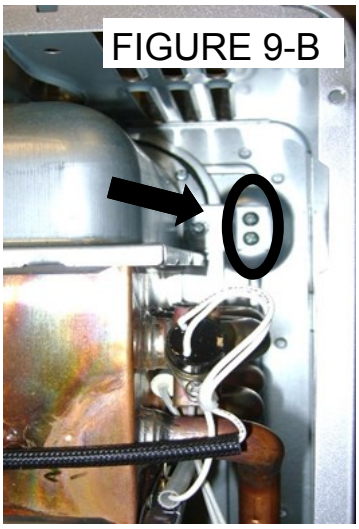
FIGURE 9-B

24.Remove 6 screws from top left and right sides of heat exchanger/air inlet box assembly. (FIGURE 10)

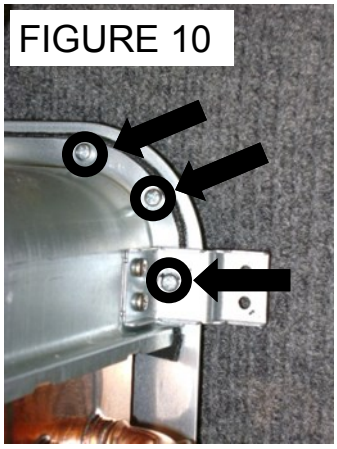
FIGURE 10

25. Remove 2 screws on lower brackets on heat exchanger/air inlet box assembly. (FIGURE 11)

26. Separate air inlet box from heat exchanger. (FIGURE 12)

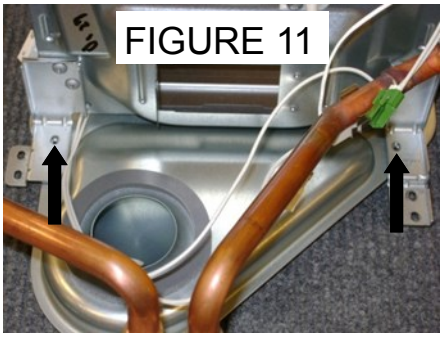
FIGURE 11

FIGURE 12

27. Remove 4 screws from fan bracket housing and detach from heat exchanger assembly. (FIGURES 13)

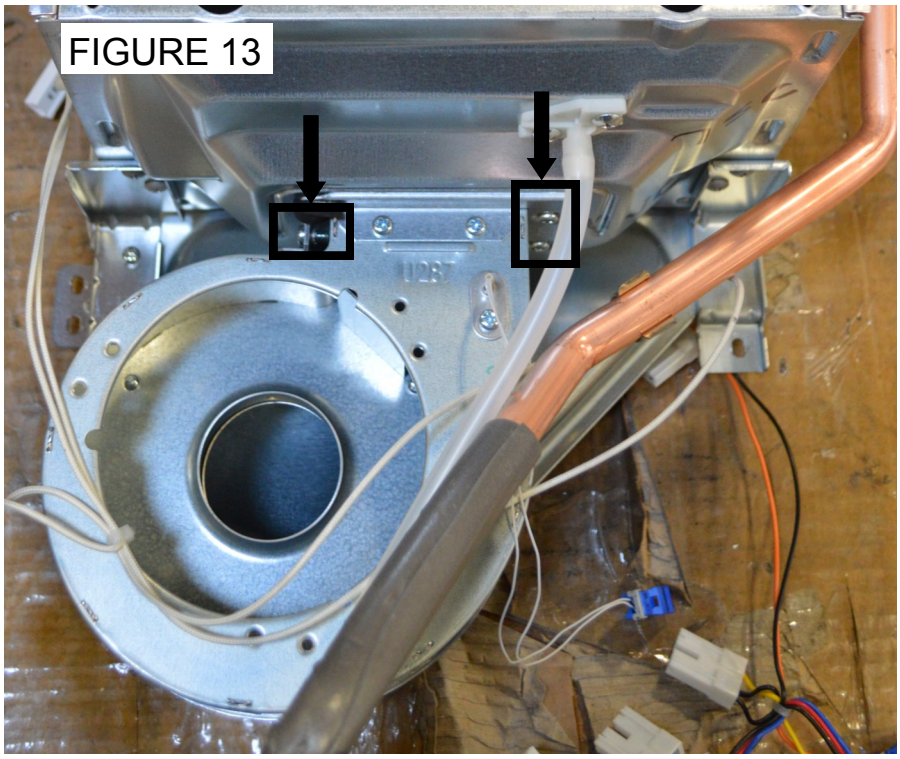

28. Remove 4 screws from flue connection assembly and remove. (FIGURES 14-A and 14-B)

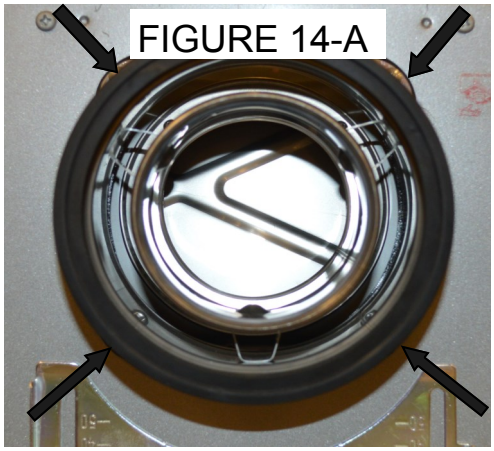

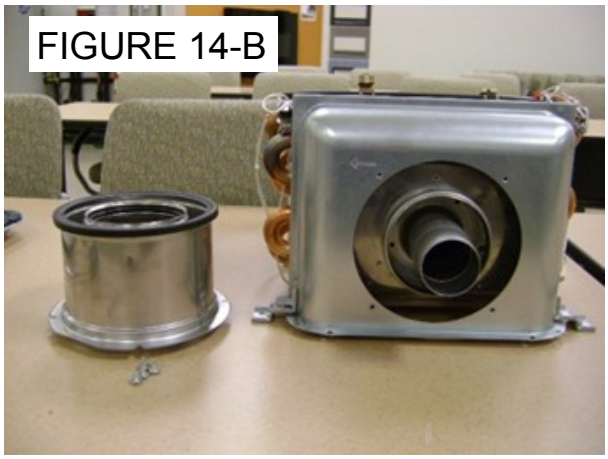

PRODUCT REASSEMBLY

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

29. Transfer thermal fuse circuit, overheat bimetal, heat exchanger thermistor, *incoming water thermistor (Only on Recirc-Logic capable units for which there will be an extra o-ring included)*, and anti-frost circuit to new heat exchanger assembly.
30. Install flue connection assembly to new heat exchanger using 4 screws. (FIGURE 14-A)
31. Install fan bracket housing to heat exchanger using 4 screws. (FIGURE 13)
32. Attach heat exchanger to air inlet box at lower brackets using 2 screws. (FIGURE 11)
33. Attach heat exchanger to air inlet box at upper top left and right sides of heat exchanger and air inlet box using 6 screws. (FIGURE 10)
34. Place heat exchanger/air inlet box assembly into Cabinet.
35. Secure bottom portion of heat exchanger to cabinet using 4 screws at bottom brackets. (FIGURE 9)
36. Secure top portion of heat exchanger to cabinet using 4 screws at top left and right side brackets. (FIGURES 8-A and 8-B)
37. Reconnect heat exchanger thermistors, Overheat switches, and freeze protection wire harnesses.
38. Attach copper tubes to Water Flow Servo Valve. Install retainer clip(s). (FIGURE 7)
39. Connect outlet copper tube to hot water outlet connection. Install retainer clip using 1 screw to secure it. (FIGURE 6)
40. Install burner assembly into burner chamber using 2 screws (to be located under burner box) to secure burners into place. (FIGURE 5)
41. Ensure gaskets/packings are intact upon reinstallation of the sight plate glass. If not replace gaskets/ packings.
42. Install clips securing thermal fuse circuit to heat exchanger and sight glass plate. (FIGURE 4)
43. Install sight glass plate using 7 screws. (FIGURE 4)
44. Install fan motor into place and use 4 screws to secure fan motor to fan casing and connect fan motor wire harness. (FIGURE 3)
45. Connect solenoid wire harness to solenoids on manifold assembly (wire colors are marked on non-orifice side of manifold) and install manifold onto burner chamber using 6 screws to secure manifold to burner chamber and 2 (machine) screws to secure manifold to gas valve. (Ensure gaskets/packings are intact upon reinstallation of the manifold. If not replace gaskets/packings) FIGURE 2)
46. Reconnect ignition wire, electrode and flame rod wires. (FIGURE 2)
47. Install bracket holding controller using 1 screw. (FIGURE 1)
48. Turn on water supply, 120 V power supply, and gas supply.
49. Test unit, checking for water and gas leaks.
50. Install front panel using 4 screws.

Heat Exchanger

RL94e-VC, RL75e-VC, V75e, V65e

1. Turn off gas supply.
2. Turn off 120 V power supply.
3. Turn off water supply. Drain all water from the appliance.
4. Remove four screws securing front panel. Remove front panel. (FIGURE 1)
5. Disconnect ignition wire, electrode and flame rod wires. (FIGURE 2)
6. Remove 6 screws that attach gas manifold to burner case on heat exchanger assembly. (FIGURE 2)
7. Remove 2 screws that attach gas manifold to gas valve. These screws are machine screws and must be used at this locations. (FIGURE 2)
8. Disconnect solenoid wire harness at manifold assembly. (FIGURE 2)
9. Remove gas manifold.

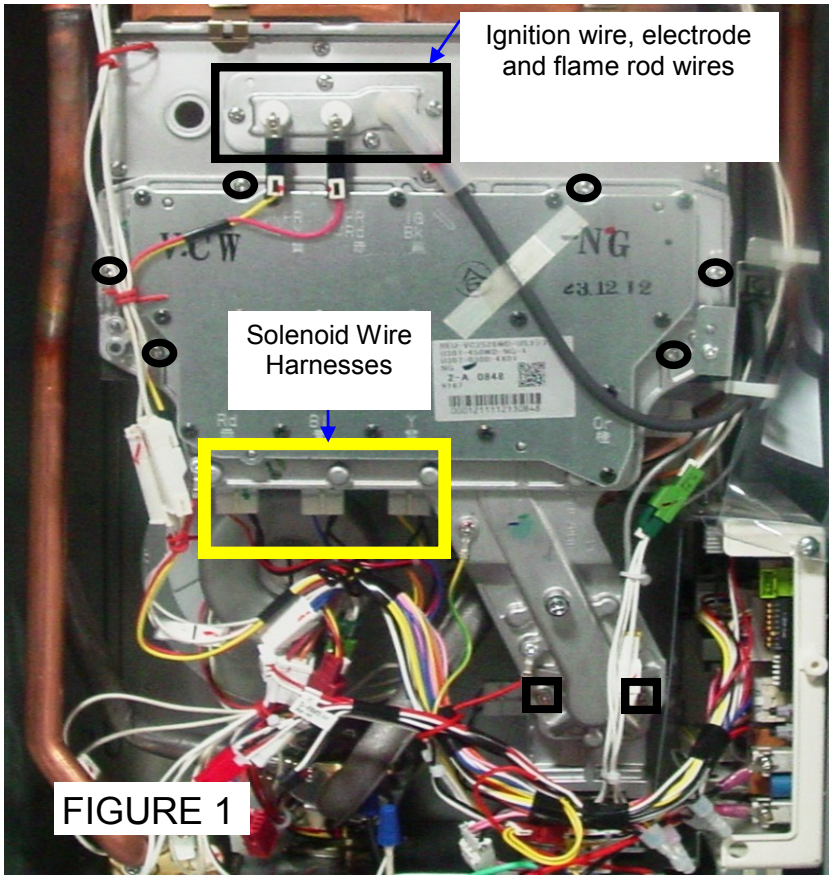

FIGURE 1

6 screws (gas manifold)

2 machine screws (gas valve)

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

10. Disconnect wire harness at fan motor assembly. (FIGURE 2-A)
11. Remove four screws attaching fan motor to fan casing. (FIGURE 2-B)
12. Remove fan motor from housing.

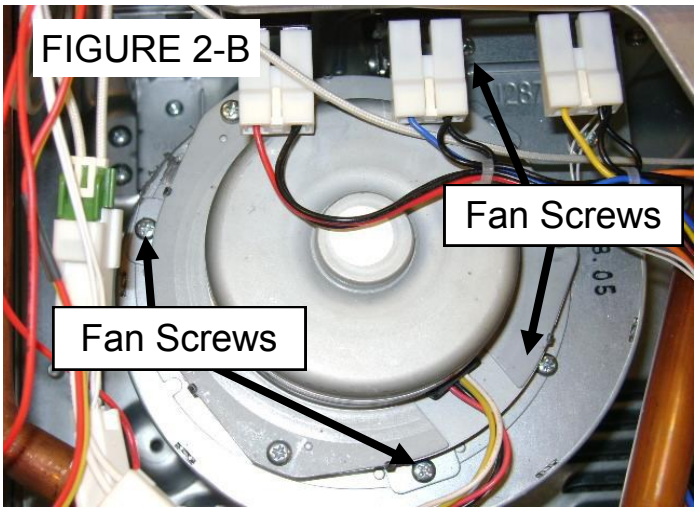

13. Remove 7 screws from site glass plate. (FIGURE 3)
14. Remove clips securing thermal fuse circuit to heat exchanger and site glass plate. (FIGURE 3)
15. Ensure sight plate gasket/packing is intact upon reinstallation. If it is not intact, replace gasket/packing.

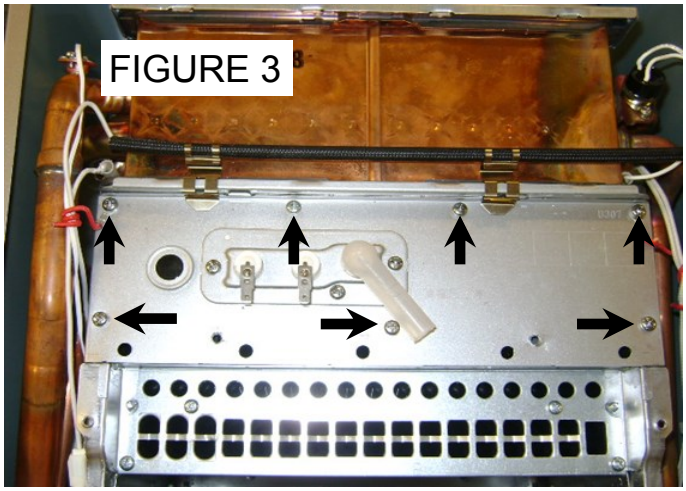

16. Remove 2 screws holding burner (located under burner box) in place. (FIGURE 4)

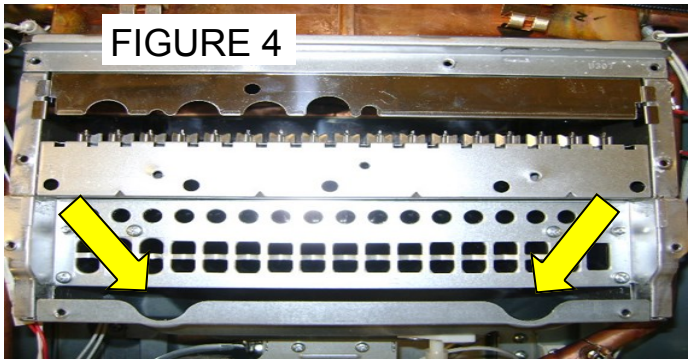

Heat Exchanger

RL94e-VC, RL75e-VC, V75e, V65e

17. Separate copper pipe from outlet connection by removing machine screw from retainer clip. (FIGURE 5)

NOTE

A small amount of water may still be present in the heat exchanger. Be sure not to let water come into contact with electrical components during disassembly and reassembly.

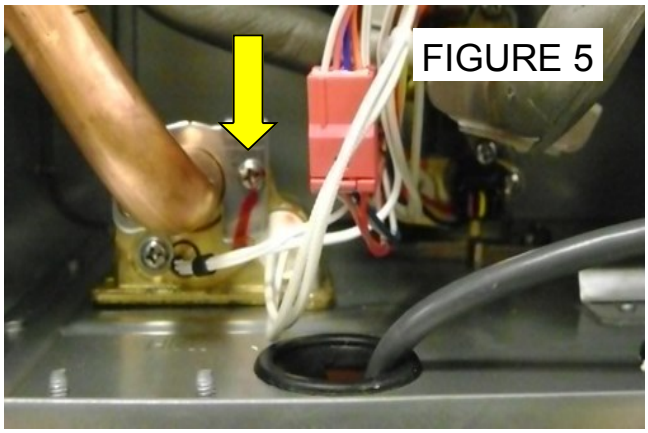

FIGURE 5

18. Remove screw(s) from Water Flow Servo retainer clip(s) as well as screw holding in ceramic anti-frost heater to valve assembly (RL75i units have additional pipe clamp that must be removed. (FIGURE 6)

FIGURE 6

RL94e Units

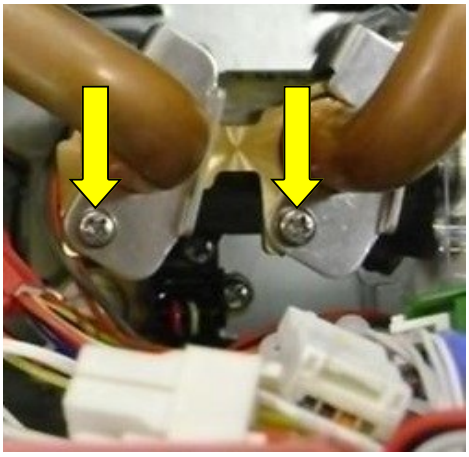

RL75e, V75e, & V65e Units

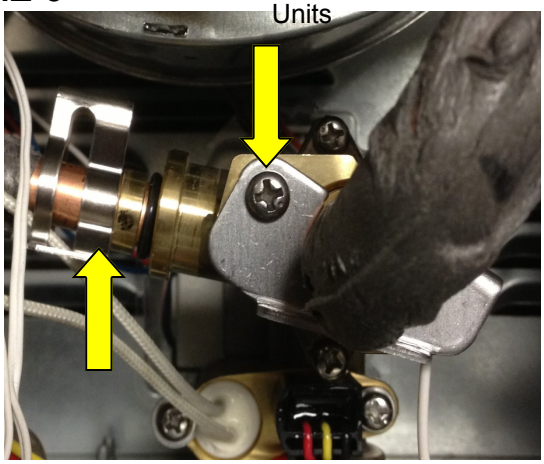

19. Remove 2 screws from top left and top right side brackets of heat exchanger as well as the 2 screws from heat exchanger brackets at sides of burner box chamber. Ensure that all wire harnesses are disconnected. (Thermistors, Overheat Switches, and Freeze Protections Harnesses.) ((FIGURE 7-A & 7-B)

NOTE

In the event that the unit is still mounted to the wall during step 20; be sure the heat exchanger is supported prior to removing the screws securing it to the cabinet In order to prevent damage.

FIGURE 7-A

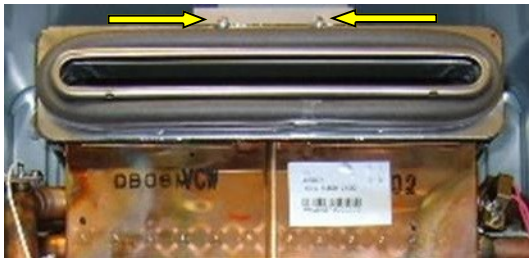

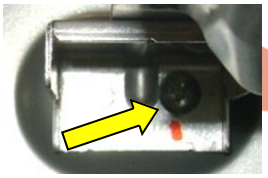

FIGURE 7-B

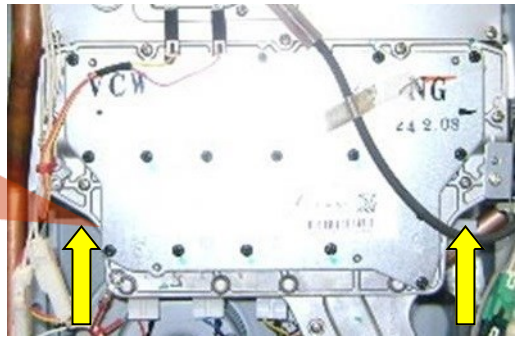

20. Remove heat exchanger from cabinet.
21. Remove 6 screws securing the flue outlet to the heat exchanger under rubber seal. (FIGURE 8)

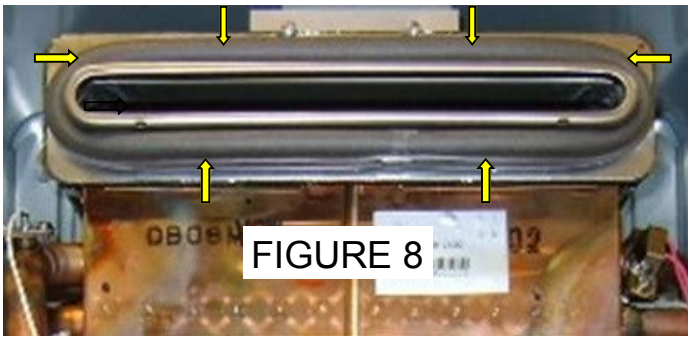

FIGURE 8

22. Remove 2 screws from fan bracket housing. Remove from heat exchanger. (FIGURE 9)

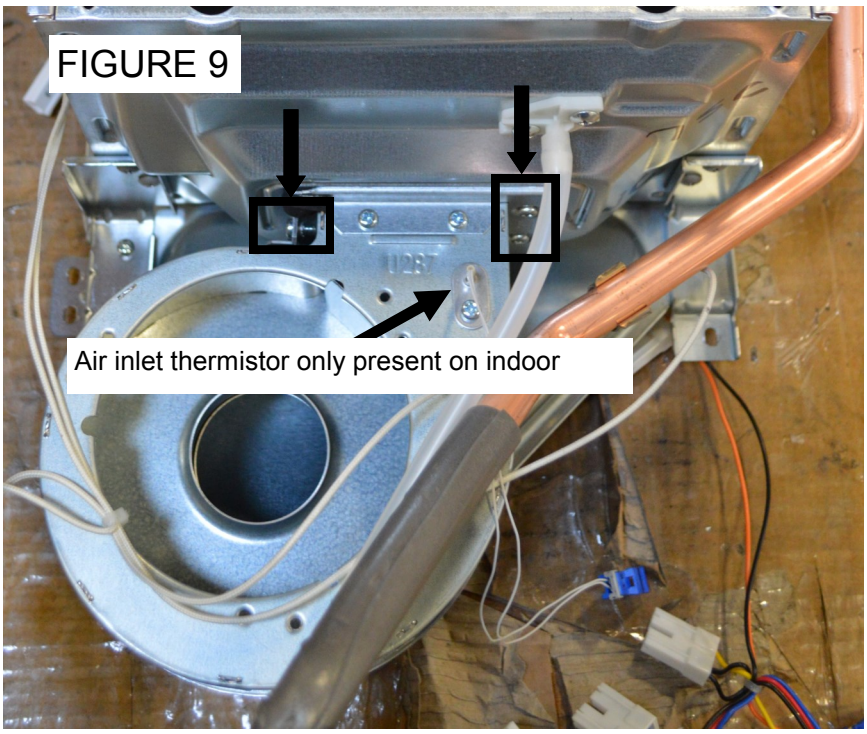

FIGURE 9

PRODUCT REASSEMBLY

⚠ WARNING Failure to correctly assemble the components according to these instructions may result in a gas leak or explosion.

⚠ WARNING Inspect all gaskets/packings for signs of damage or corrosion. Gaskets/packings found to contain damage or that appear questionable **MUST BE REPLACED.** Failure to replace damaged or questionable gaskets may result in gas leak or explosion.

23. Transfer thermal fuse circuit, overheat bimetal, heat exchanger thermistor, *incoming water thermistor (Only on Recirc-Logic capable units for which there will be an extra o-ring included)*, and anti-frost circuit to new heat exchanger assembly.
24. Install fan bracket housing to heat exchanger using 4 screws. (FIGURE 9)
25. Install flue outlet assembly to new heat exchanger using 6 screws. (FIGURE 8)
26. Place heat exchange assembly into Cabinet.
27. Secure heat exchanger to cabinet using 2 screws at top left and right side brackets and 2 screws at the sides of the burner box chamber. (FIGURES 7-A and 7-B)
28. Reconnect heat exchanger thermistors, overheat switches, and freeze protection wire harnesses.
29. Attach copper tubes to Water Flow Servo Valve assembly. Install retainer clip(s). (FIGURE 6)
30. Connect outlet copper tube to hot water outlet connection. Install retainer clip using 1 screw to secure it. (FIGURE 5)
31. Install burner assembly into burner chamber using 2 screws (to be located under burner box) to secure burners into place. (FIGURE 4)
32. Ensure gasket/packing is intact upon reinstall. If not replace ignitor/flame rod gasket.
33. Install clips securing thermal fuse circuit to heat exchanger and sit glass plate. (FIGURE 3)
34. Install site glass plate using 7 screws. (FIGURE 3)
35. Install fan motor into place and use 4 screws to secure fan motor to fan casing and connect fan motor wire harness. (FIGURE 2)
36. Connect solenoid wire harness to solenoids on manifold assembly (wire colors are marked on non-orifice side of manifold) and install manifold onto burner chamber using 6 screws to secure manifold to burner chamber and 2 (machine) screws to secure manifold to gas valve. (FIGURE 1)
37. Reconnect ignition line, electrode and flame rod wires. (FIGURE 1)
38. Turn on water supply, 120 V power supply, and gas supply.
39. Test unit, checking for water and gas leaks.
40. Install front panel using 4 screws.

Gas Pressure Setting Procedure

All V-VB series of Tankless Water Heaters

⚠ CAUTION

Do not touch the areas at or near the heat exchanger or combustion chamber. These areas become very hot and could cause burns.

1. Remove the front panel (four screws).
2. Calibrate the low fire and high fire settings as follows:
   A. Remove the allen head plug and attach the manometer to the burner test point located on the gas control. (Figure 1-3)

Figure 1 Potentiometer (POT)

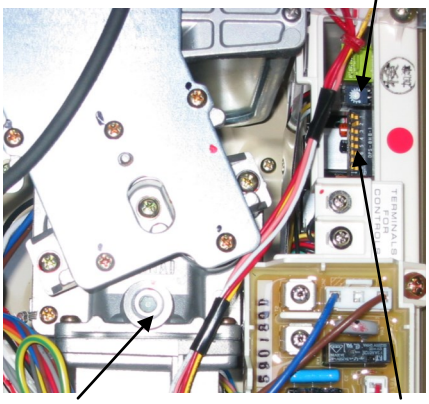

Burner test point Dip switches (SW1)

Models R/C42e, R/C53e, V53e, R63LSe

Figure 2 Potentiometer (POT)

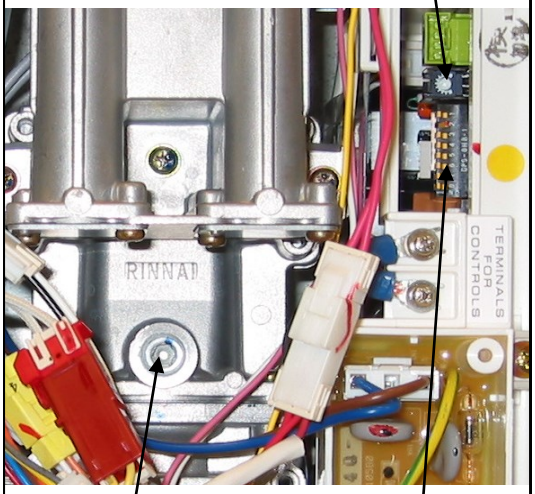

Burner test point Dip switches (SW1)

Models R70e, R75LSe, R/C85e, R94LSe, R50LSi, R/C53i, R75LSi, R/C85i, R94LSi

Figure 3 Potentiometer (POT)

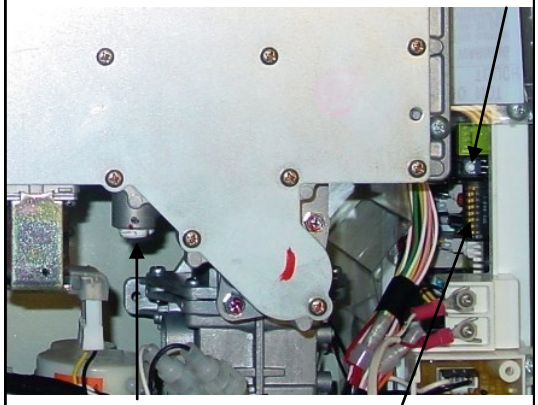

Burner test point Dip switches (SW1)

Models R/C98e, R98LSe, R/C98i, R98LSi

B. Turn on the gas supply.

C. Turn on the power supply.

D. Flow water through the water heater at the maximum flow rate obtainable. (At least 3 gallons per minute is recommended. If there is not enough water flowing, the water heater could shut off or sustain damage due to overheating.)

E. Move No. 7 dip switch of the SW1 bank to the ON position to calibrate “Forced Low” combustion. (Figure 5)

F. Check the burner test point pressure.

G. Remove the rubber access plug (Figure 4) and adjust the regulator screw on the modulating valve to obtain the correct low fire manifold pressure. Refer to the Manifold Gas Pressure Settings section, page 101-105. Install rubber access plug.

H. Move No. 7 and No. 8 dip switches of the SW1 bank to the ON position to calibrate “Forced High” combustion. (Figure 6)

I. Check the burner test point pressure.

J. Adjust the high pressure Potentiometer (POT) (Figure 1-5) on the PC Board to obtain the correct high fire manifold pressure. Refer to the Manifold Gas Pressure Settings section, page 101-105.

K. Move No. 7 and No. 8 back to the OFF position to return the appliance to “Normal” combustion. (Figure 7)

L. Close hot water taps.

M. Turn off gas supply and 120 V power supply.

N. Remove manometer and re-install allen head plug.

O. Turn on the gas supply and 120 V power supply.

P. Operate the unit and check for gas leaks.

3. Install the front panel using four screws.

Figure 4

Access plug

Figure 5

Forced Low

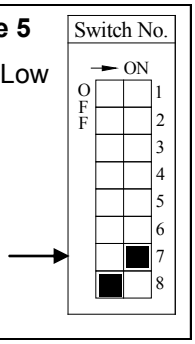

Figure 6

Forced High

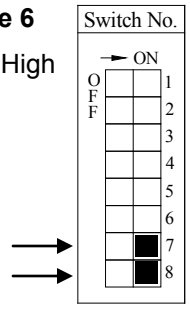

Figure 7

Normal

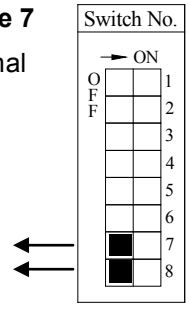

Gas Pressure Setting Procedure

RL94i/e-VC, RL75i/e-VC, V75i/e, V65i/e

⚠ CAUTION

Do not touch the areas at or near the heat exchanger or combustion chamber. These areas become very hot and could cause burns.

1. Remove the screw and attach the manometer to the burner test point located on the gas control. (FIGURE 1)
2. Turn on the gas supply (check for gas leaks prior to turning on power) and the power supply.
3. Flow water through the water heater at the maximum flow rate obtainable. (At least 3 gallons per minute is recommended. If there is not enough water flowing, the water heater could shut off or sustain damage due to overheating.)

FIGURE

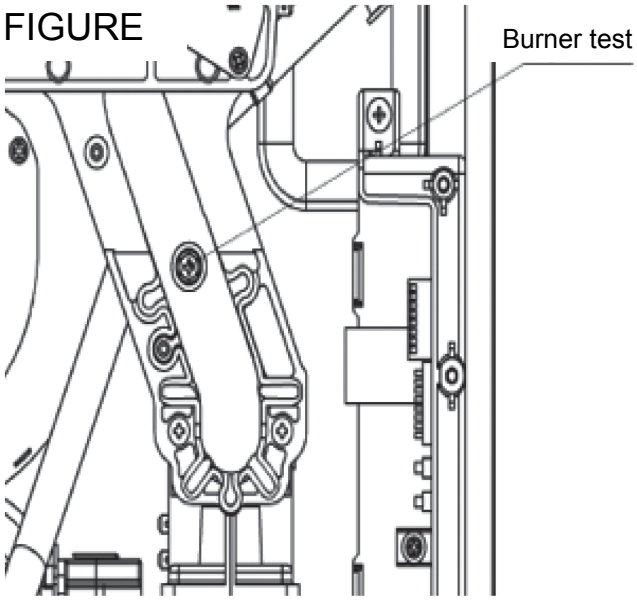

⚠ CAUTION

Do not touch any other areas on the PC board besides the "SW" switches while power is supplied to the appliance. Parts of the PC board are supplied with 120 volts.

For Steps 4-10 refer to FIGURE 2.

FIGURE 2

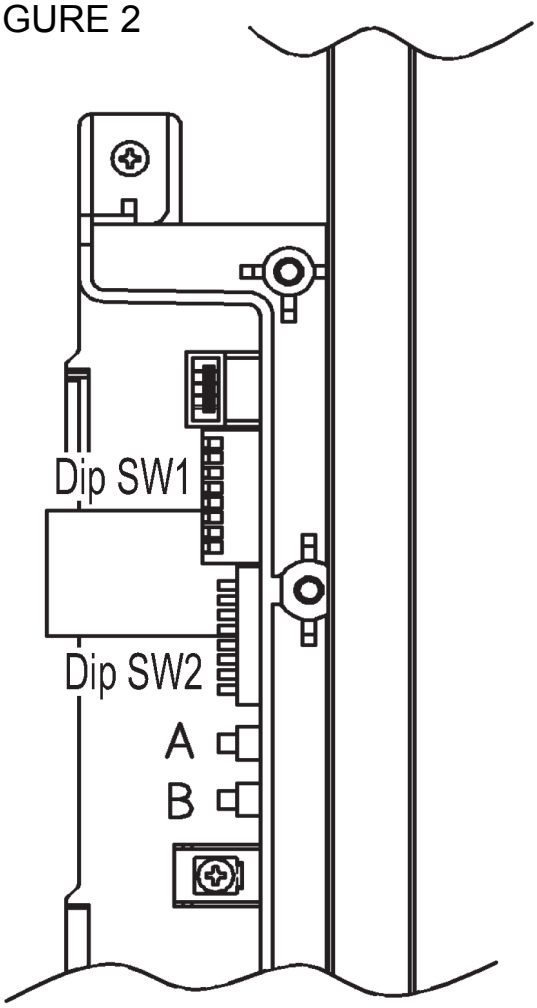

4. Move switch 8 of SW1 to ON. (FIGURE 2)
5. Push the PC board switch A for one second.
6. Calibrate "Forced Low" (Min Rate) combustion using switch A (up) and switch B (down). Use the Gas Pressure Settings on the previous pages for your model, gas type, and altitude.
7. Move switch 8 of SW1 to OFF and then back to ON.
8. Push the PC board switch B for one second.
9. Calibrate "Forced High" (Max Rate) combustion using switch A (up) and switch B (down). Use the Gas Pressure Settings on the previous pages for your model, gas type, and altitude.
10. Move switch 8 of SW1 to OFF.
11. Close Hot water taps.
12. Turn off gas supply and 120 V power supply.
13. Remove manometer and re-install allen head plug.
14. Turn on the gas supply and 120 V power supply.
15. Operate the unit and check for gas leaks.
16. Install the front panel using 4 screws.

Manifold Gas Pressure Settings

V Series - Outdoor

Natural Gas

R42e,C42e

Altitude	High Fire	Low Fire
less than 5000 ft	3.5	0.73
6000 ft (1829 m)	3.4	0.71
7000 ft (2134 m)	3.3	0.69
8000-10000 ft	3.2	0.67

R53e,C53e

Altitude	High Fire	Low Fire
less than 2000 ft (610 m)	3.7	0.74
3000 ft (914 m)	3.5	0.71
4000 ft (1219 m)	3.4	0.68
5000-10000 ft (1524 - 3048 m)	3.2	0.64

R85e(PLUS), C85e(PLUS)

Altitude	High Fire	Low Fire
less than 10000 ft (3048 m)	3.4	0.56

R70e

Altitude	High Fire	Low Fire
less than 10000 ft (3048 m)	3.4	0.56

R98e(ASME), C98e(ASME)

Altitude	High Fire	Low Fire
less than 2000 ft	2.8	0.66
3000 ft (914 m)	2.7	0.63
4000 ft (1219 m)	2.6	0.60
5000 ft (1524 m)	2.4	0.57
6000 ft (1829 m)	2.3	0.54
7000 ft (2134 m)	2.2	0.52
8000-10000 ft	2.1	0.50

Propane Gas

Altitude	High Fire	Low Fire
less than 2000 ft	3.3	0.72
3000 ft (914 m)	3.0	0.65
4000 ft (1219 m)	2.7	0.58
5000 ft (1524 m)	2.3	0.50

Altitude	High Fire	Low Fire
less than 2000 ft (610 m)	3.5	0.74

Altitude	High Fire	Low Fire
less than 2000 ft (610 m)	5.1	0.88
3000 ft (914 m)	4.8	0.83
4000 ft (1219 m)	4.5	0.78
5000 ft (1524 m)	4.3	0.73
6000 ft (1829 m)	4.2	0.72
7000-10000 ft (2134 - 3048 m)	4.1	0.71

Altitude	High Fire	Low Fire
less than 10000 ft (3048 m)	5.1	0.88

Altitude	High Fire	Low Fire
less than 2000 ft	3.8	0.80
3000 ft (914 m)	3.6	0.75
4000 ft (1219 m)	3.3	0.69
5000 ft (1524 m)	3.1	0.64
6000-10000 ft	3.0	0.63

Manifold Gas Pressure Settings

V Series - Indoor

Natural Gas

R53i(PLUS), C53i(PLUS), R85i(PLUS), C85i(PLUS)

Altitude	High Fire	Low Fire
less than 10000 ft	3.7	0.77

R98i(ASME), C98i(ASME)

Altitude	High Fire	Low Fire
less than 2000 ft (610 m)	3.0	0.67
3000 ft (914 m)	2.8	0.64
4000 ft (1219 m)	2.7	0.60
5000-10000 ft (1524 - 3048 m)	2.5	0.56

Propane Gas

Altitude	High Fire	Low Fire
less than 2000 ft	4.2	0.93
3000 ft (914 m)	4.0	0.90
4000 ft (1219 m)	3.9	0.86
5000 ft (1524 m)	3.7	0.82
6000 ft (1829 m)	3.7	0.82
7000 ft (2134 m)	3.6	0.80
8000 ft (2438 m)	3.6	0.80
9000 ft (2743 m)	3.4	0.79
10000 ft (3048 m)	3.2	0.75

Altitude	High Fire	Low Fire
less than 2000 ft (610 m)	3.7	0.83
3000 ft (914 m)	3.5	0.78
4000 ft (1219 m)	3.3	0.73
5000 ft (1524 m)	3.0	0.67

VA Models

Dip Switch Setting	Altitude	Natural Gas (Gaz Naturel)				Propane Gas (Gaz propane)			
		MAX VENT Dip Switch #1 is OFF		MIN VENT Dip Switch #1 is ON		MAX VENT Dip Switch #1 is OFF		MIN VENT Dip Switch #1 is ON	
		Max Rate inches W.C.	Min Rate inches W.C.	Max Rate inches W.C.	Min Rate inches W.C.	Max Rate inches W.C.	Min Rate inches W.C.	Max Rate inches W.C.	Min Rate inches W.C.
R50LSi (REU-VA2019FFU)									
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.0	0.52	2.0	0.52	3.2	0.92	3.2	0.92
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.7	0.7	1.8	0.7	3.1	1.0	3.0	1.1
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	1.7	0.7	1.7	0.7	2.8	0.9	2.8	1.1
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	1.8	0.9	1.8	0.9	2.8	1.1	2.8	1.4
R75LSi (REU-VA2528FFU-US)									
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	3.3	0.52	3.3	0.52	5.0	0.92	5.0	0.92
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.8	0.5	2.8	0.6	3.3	1.0	3.4	1.0
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.4	0.5	2.4	0.5	3.4	1.1	3.4	1.2
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.1	0.5	2.1	0.5	3.2	1.1	3.2	1.1
R75LSi(A) (REU-VA2528FFU(A)-US) (REU-VA2528FFU(A)-UC)									
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.7	0.52	2.7	0.52	4.4	0.92	4.4	0.92
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.8	0.5	2.8	0.5	3.3	1.0	3.4	1.0
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.4	0.5	2.4	0.5	3.4	1.1	3.4	1.2
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.1	0.5	2.1	0.5	3.2	1.1	3.2	1.1
R94LSi (REU-VA2535FFU-US) (REU-VA2535FFU-UC)									
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	3.3	0.52	3.3	0.52	5.0	0.92	5.0	0.92
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.8	0.5	2.8	0.6	3.3	1.0	3.4	1.0
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.4	0.5	2.4	0.5	3.4	1.1	3.4	1.2
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.1	0.5	2.1	0.5	3.2	1.1	3.2	1.1
R98LSi (REU-VA3237FFU)									
		3.0	0.67	3.0	0.67	3.7	0.83	3.7	0.83
		2.7	0.7	2.7	0.7	2.9	0.83	2.9	0.83
		2.7	0.8	2.7	0.8	3.0	0.83	3.0	0.9
		2.5	1.7	2.5	1.2	2.8	0.83	2.8	1.2

VA Models

Dip Switch Setting	Altitude	**Natural Gas** (Gaz Naturel)		**Propane Gas** (Gaz propane)	
		Max Rate inches W.C.	**Min Rate** inches W.C.	**Max Rate** inches W.C.	**Min Rate** inches W.C.
V53e (REU-VAM1620W)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.5	0.73	2.4	0.75
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.4	0.7	2.2	0.9
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.4	0.7	2.0	0.8
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.4	0.9	2.0	0.7
R63LSe (REU-VA2024W)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	1.7	0.53	2.4	0.61
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.6	0.4	2.0	0.7
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	1.5	0.5	2.0	0.7
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	1.5	0.5	1.8	0.8
R63LSe2 (REU-VA2024W(A)-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.0	0.56	3.0	0.88
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.7	0.55	2.8	0.90
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	1.7	0.70	2.7	1.00
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	1.5	0.70	2.7	0.80

VA Models

Dip Switch Setting	Altitude	**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
		Max Rate inches W.C.	**Min Rate** inches W.C.	**Max Rate** inches W.C.	**Min Rate** inches W.C.
R75LSe (REU-VA2528W-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	3.3	0.56	5.0	0.88
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.3	0.7	4.0	1.1
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	3.3	0.9	4.0	0.9
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	3.1	0.7	4.0	0.9
R75LSe(A) (REU-VA2528W(A)-US) (REU-VA2528W(A)-UC)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.9	0.56	4.2	0.88
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.3	0.7	4.0	1.1
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	3.3	0.9	4.0	0.9
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	3.1	0.7	4.0	0.9
R94LSe (REU-VA2535W-US) (REU-VA2535W-UC)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	3.3	0.56	5.1	0.88
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.3	0.7	4.0	1.1
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	3.3	0.9	4.0	0.9
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	3.1	0.7	4.0	0.9
R98LSe (REU-VA3237W)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.8	0.65	3.8	0.80
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.5	0.7	3.0	0.80
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.5	0.7	3.0	0.80
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.5	0.7	3.0	0.80

VB Models

Dip Switch Setting	Altitude	**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
		Max Rate inches W.C.	**Min Rate** inches W.C.	**Max Rate** inches W.C.	**Min Rate** inches W.C.
V53i (REU-VB2020FFU-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.1 (54)	0.57 (14)	3.4 (87)	0.98 (25)
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.3 (58)	0.60 (15)	3.1 (79)	0.95 (24)
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.0 (51)	0.60 (15)	3.0 (76)	1.0 (25)
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.0 (51)	0.60 (15)	2.8 (71)	1.0 (25)
R75LSi (REU-VB2528FFUD-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.9 (74)	0.55 (14)	4.5 (114)	0.96 (24)
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.5 (64)	0.55 (14)	3.2 (81)	1.00 (25)
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.6 (66)	0.60 (15)	3.5 (89)	1.00 (25)
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.4 (61)	0.55 (14)	2.8 (71)	0.95 (24)
R75LSe (REU-VB2528WD-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.3 (58)	0.44 (11)	4.2 (107)	0.93 (24)
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.9 (74)	0.50 (13)	4.2 (107)	0.90 (23)
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.9 (74)	0.45 (11)	3.8 (97)	0.80 (20)
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.9 (74)	0.50 (13)	3.3 (84)	0.90 (23)
R94LSi (REU-VB2735FFUD-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	3.4 (86)	0.55 (14)	5.4 (137)	0.96 (24)
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.6 (66)	0.50 (13)	3.8 (97)	1.00 (25)
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	2.6 (66)	0.60 (15)	3.5 (89)	1.00 (25)
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	2.5 (64)	0.65 (17)	2.9 (74)	1.00 (25)
R94LSe (REU-VB2735WD-US)					
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.8 (71)	0.44 (11)	5.0 (127)	0.93 (24)
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.1 (79)	0.50 (13)	4.2 (107)	0.90 (23)
#2 ON, #3 OFF	5201-7700 ft (1585-2277 m)	3.0 (76)	0.50 (13)	4.1 (104)	0.90 (23)
#2 ON, #3 ON	7701-10200 ft (2277-3109 m)	3.0 (76)	0.50 (13)	3.7 (94)	0.80 (20)

Manifold Gas Pressure Settings

V65i (REU-VC2025FFU-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch Setting (commutateur position)	**Altitude ***	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
		Short Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	1.97	0.61	2.74	0.87
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.1	0.60	3.0	0.95
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	1.9	0.60	2.5	0.95
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	1.85	0.60	2.25	0.90
		Long Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.04	0.61	2.93	0.95
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.80	0.60	2.35	0.90
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	1.60	0.60	1.95	0.85
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	1.40	0.60	1.85	0.85

V65e (REU-VC2025W-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch Setting (commutateur position)	**Altitude ***	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	1.75	0.61	2.61	0.93
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.90	0.66	2.50	0.99
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	2.10	0.66	2.90	0.99
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	1.90	0.66	2.70	0.99

Manifold Gas Pressure Settings

V75i (REU-VC2528FFU-US) RL75i (REU-VC2528FFUD-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch 1 (tan) Setting (commutateur position)	**Altitude**	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
		Short Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.5	0.61	3.9	0.87
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.5	0.55	2.5	0.55
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	2.6	0.60	2.6	0.60
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	2.4	0.55	2.4	0.55
		Long Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.3	0.61	3.7	0.95
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.80	0.60	2.35	0.90
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	1.60	0.60	1.95	0.85
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	1.40	0.60	1.85	0.85

V75e (REU-VC2528W-US) RL75e (REU-VC2528WD-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch 1 (tan) Setting (commutateur position)	**Altitude**	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.0	0.50	3.5	0.80
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.9	0.50	3.9	0.50
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	2.9	0.45	2.9	0.45
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	2.9	0.50	2.9	0.50

Manifold Gas Pressure Settings

RL94i (REU-VC2837FFUD-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch 1 (tan) Setting (commutateur position)	**Altitude**	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
		Short Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.9	0.60	4.7	0.90
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	2.5	0.55	2.5	0.55
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	2.6	0.60	2.6	0.60
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	2.4	0.55	2.4	0.55
		Long Vent Length			
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.3	0.61	3.7	0.95
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	1.80	0.60	2.35	0.90
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	1.60	0.60	1.95	0.85
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	1.40	0.60	1.85	0.85

RL94e (REU-VC2837WD-US)		**Natural Gas** (Gaz Naturel)		**Propane Gas (**Gaz propane)	
Dip Switch 1 (tan) Setting (commutateur position)	**Altitude**	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)	**Max Rate (rythme max)** inches W.C. (mm W.C.)	**Min Rate (rythme min)** inches W.C. (mm W.C.)
#2 OFF, #3 OFF	0-2000 ft (0-610 m)	2.5	0.50	4.5	0.80
#2 OFF, #3 ON	2001-5200 ft (610-1585 m)	3.9	0.50	3.9	0.50
#2 ON, #3 OFF	5201-7700 ft (1585-2347 m)	2.9	0.45	2.9	0.45
#2 ON, #3 ON	7701-10200 ft (2347-3109 m)	2.9	0.50	2.9	0.50

Dip Switch Settings

V Series

SW1 Bank

1	OFF - “Long Flue” ON - “Short Flue” and Outdoor Models “Long flue” is defined as: 0 elbows and length is greater than 21 ft 1 elbow and length is greater than 15 ft 2 elbows and length is greater than 9 ft
2	ON position
3	OFF position
4	OFF position
5	OFF position
6	OFF position
7	OFF position - Used for low fire and high fire settings. Refer to the gas pressure setting procedure.
8	

SW2 Bank

1	OFF - Propane Gas ON - Natural Gas
2	OFF position for models prior to these serial numbers: (on these units, the front panel does not have an “R” or “C” trade name, unless the front panel has been replaced) V1616W, V1616WC 06.02-000001 V2020W, V2020WC 05.07-000001 V2532W, V2532WC 05.05-117257 V2532FFU, V2532FFUC 05.05-117257 V2520FFU, V2520FFUC 05.05-109539 V2526W 05.05-110434 ON position for other models, serial numbers
3	OFF position
4	OFF - Residential Models ON - Commercial Models

VA Series (-US models; model name ends in –US; for -UC models refer to the next page)

SW1 Bank

1	OFF - “Long Flue” ON - “Short Flue” and Outdoor Models “Long flue” is defined as: 0 elbows and length is greater than 21 ft 1 elbow and length is greater than 15 ft 2 elbows and length is greater than 9 ft
2	Settings dependent on altitude
3	

0-2000 ft (0-610 m)	2001-5200 ft (610-1585 m)	5201-7700 ft (1585-2347 m)	7701-10200 ft (2347-3109 m)
#2: OFF	#2: OFF	#2: ON	#2: ON
#3: OFF	#3: ON	#3: OFF	#3: ON

4	OFF - if using MC-91 controller ON - if using MC-45 controller
5	OFF - 120ºF default temperature without a controller ON - 140ºF default temperature without a controller
6	OFF position
7	OFF position - Used for low fire and high fire settings. Refer to the gas pressure setting procedure.
8	

SW2 Bank (present on replacement PC boards only)

1	OFF - Propane Gas ON - Natural Gas
2	OFF - Outdoor model ON - Indoor model
3	OFF - R63LSe, R75LSe, R75LSi, R94LSe, R94LSi, R98LSe(ASME), R98LSi(ASME) ON - R50LSi, V53e
4	OFF - V53e, R63LSe, R94LSe, R94LSi, R98LSe(ASME), R98LSi(ASME) ON - R50LSi, R75LSe, R75LSi
5	OFF - V53e, R63LSe, R75LSe, R75LSi, R94LSe, R94LSi, R98LSe(ASME), R98LSi(ASME) ON - R50LSi
6	OFF position

⚠ CAUTION

Do not touch any other areas on the PC board besides the “SW” switches while power is supplied to the appliance. Parts of the PC board are supplied with 120 volts.

Dip Switch Settings

VA Series (-UC Models; model name ends in –UC)

R75LSe-VA **REU-VA2528WD-UC**
R75LSi-VA **REU-VA2528FFUD-UC**
R94LSe-VA **REU-VA2535WD-UC**
R94LSi-VA **REU-VA2535FFUD-UC**

These models have a default maximum temperature of 120º F (49º C) and an option to increase the maximum temperature to 140 ºF (60 ºC). Temperature settings from 125-140 ºF (52-60 ºC) are available by setting dip switch 6 to ON in the SW1 bank of 8 dip switches.

SW1 Bank

1	OFF - "Long Flue" ON - "Short Flue" and Outdoor Models "Long flue" is defined as: 0 elbows and length is greater than 21 ft 1 elbow and length is greater than 15 ft 2 elbows and length is greater than 9 ft
2	Settings dependent on altitude
3	

0-2000 ft (0-610 m)	2001-5200 ft (610-1585 m)	5201-7700 ft (1585-2347 m)	7701-10200 ft (2347-3109 m)
#2: OFF	#2: OFF	#2: ON	#2: ON
#3: OFF	#3: ON	#3: OFF	#3: ON

4	OFF - if using MC-91 controller ON - if using MC-45 controller
5	OFF - 120ºF default temperature without a controller ON - 140ºF default temperature without a controller
6	OFF - 120ºF maximum temperature without an MCC-91 controller ON - 140ºF maximum temperature without an MCC-91 controller
7	OFF position - Used for low fire and high fire settings. Refer to the gas pressure setting procedure.
8	

SW2 Bank (present on replacement PC boards only)

1	OFF - Propane Gas ON - Natural Gas
2	OFF - Outdoor model ON - Indoor model
3	OFF position
4	OFF position
5	OFF position
6	OFF position

⚠ CAUTION

Do not touch any other areas on the PC board besides the "SW" switches while power is supplied to the appliance. Parts of the PC board are supplied with 120 volts.

Dip Switch Settings

VB Series

R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB, V53i

SW1 Bank

<table>
<tr><td>1</td><td colspan="2">OFF - “Long Flue”
ON - “Short Flue” and Outdoor Models

“Long flue” is defined as:
0 elbows and length is greater than 21 ft
1 elbow and length is greater than 15 ft
2 elbows and length is greater than 9 ft</td></tr>
<tr><td>2</td><td colspan="2" rowspan="2">Settings dependent on altitude

<table><tr><td>0-2000 ft
(0-610 m)</td><td>2001-5200 ft
(610-1585 m)</td><td>5201-7700 ft
(1585-2347 m)</td><td>7701-10200 ft
(2347-3109 m)</td></tr><tr><td>#2: OFF</td><td>#2: OFF</td><td>#2: ON</td><td>#2: ON</td></tr><tr><td>#3: OFF</td><td>#3: ON</td><td>#3: OFF</td><td>#3: ON</td></tr></table></td></tr>
<tr><td>3</td></tr>
<tr><td>4</td><td colspan="2">OFF</td></tr>
<tr><td>5</td><td colspan="2">OFF - 120ºF default temperature without a controller
ON - 140ºF default temperature without a controller</td></tr>
<tr><td>6</td><td>R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB, RC80HPi, RC80HPe, RC98HPe, RC98HPi*
OFF - 120ºF maximum temperature without an MCC-91 controller
ON - 140ºF maximum temperature without an MCC-91 controller</td><td>V53i
OFF - Propane

ON - Natural Gas</td></tr>
<tr><td>7</td><td colspan="2" rowspan="2">OFF position - Used for low fire and high fire settings. Refer to the gas pressure setting procedure.</td></tr>
<tr><td>8</td></tr>
</table>

* R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB, RC80HPi, RC80HPe, RC98HPe, RC98HPi models have a default maximum temperature of 120º F (49º C) and an option to increase the maximum temperature to 140 ºF (60 ºC). Temperature settings from 125-140 ºF (52-60 ºC) are available by setting dip switch 6 to ON in the SW1 bank of 8 dip switches.

SW2 Bank (present on replacement PC boards only)
Note: Not present on V53i PC boards.

1	OFF - Propane Gas ON - Natural Gas
2	OFF - Outdoor model ON - Indoor model
3	OFF - R75LSe-VB, R75LSi-VB, R94LSe-VB, R94LSi-VB, RC98HPe, RC98HPi ON - RC80HPi, RC80HPe
4	OFF position
5	OFF position
6	OFF position

⚠ CAUTION

Do not touch any other areas on the PC board besides the “SW” switches while power is supplied to the appliance. Parts of the PC board are supplied with 120 volts.

Dip Switch Settings

VC Series

RL94i-VC, RL94e-VC, RL75i-VC, RL75e-VC, V75i, V75e, V65i, V65e

These models have a default maximum temperature of 120º F (49º C) and an option to increase the maximum temperature to 140 ºF (60 ºC). Temperature settings from 125-140 ºF (52-60 ºC) are available by setting dip switch 6 to ON in the SW1 bank of 8 dip switches.

⚠ CAUTION

Do not touch any other areas on the PC board besides the "SW" switches while power is supplied to the appliance. Parts of the PC board are supplied with 120 volts.

SW1 Tan Switches	
1	ON for short vent length[1] OFF for long vent length and outdoor models[1]
2	See altitude table (V65 is not approved for high altitude)
3	
4	OFF* (S-BMS/Air Handler)
5	OFF[1] (Fixed Temperature without controller - 120°F/140°F)
6	OFF[1] (Max temperature - 120°F/140°F)
7	OFF[1] (Units in standby with EZConnect™)
8	OFF

Altitude	Dip Switch #2	Dip Switch #3
0-2000 ft (0-610 m)	OFF	OFF
2001-5200 ft (610-1585 m)	OFF	ON
5201-7700 ft (1585-2277 m)	ON	OFF
7701-10200 ft (2277-3109 m)	ON	ON

SW2 White Switches		
	RL75, RL94	**V65, V75**
1	OFF for Propane Gas ON for Natural Gas	
2	OFF[1] (Optional Temperature table)	
3		
4	OFF[1] (Recirculation[2] - pump)	ON for V75 OFF for V65
5	OFF	
6	Applicable to Indoor models only Determine fan class[3] Class A or B: #6 is ON / #7 is ON Class C, D, E, or F: #6 is ON / #7 is OFF	
7		
8	OFF[1] (Recirculation[2] - insulation)	OFF (Not applicable)

[1] These are specific for the water heater installation. Copy the settings on the old PC Board or refer to the manual for details on these switch settings. Default is OFF.

[2] Applicable to: RL94
RL75 with an "(A)" on part number,
REU-VC2528FFUD-US(A) or
REU-VC2528WD-US(A)

[3] Find the label on the wiring of the fan assembly that indicates its class, A to F.
Example:

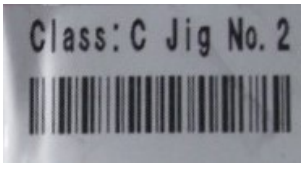

Notes

Notes

Notes

Notes

A tradition of
TRUE RELIABILITY.

For nearly 100 years, we at Rinnai have been fiercely committed to delivering nothing less than our absolute best at every touch point.

To us, that means more than manufacturing products—it's about inspiring confidence in our customers. Confidence in the comfort our solutions give. And in the support we provide.

Learn more about our high-performance Tankless Water Heaters, Boilers and Direct Vent Wall Furnaces at **www.rinnai.us.**

Rinnai

Rinnai America Corporation • 103 International Drive, Peachtree City, GA 30269
Toll-Free: 1-800-621-9419 • Phone: 678-829-1700 • www.rinnai.us

©2013 Rinnai America Corporation. Rinnai is continually updating and improving products; therefore, specifications are subject to change without prior notice. Local, state, provincial and federal and national fuel gas codes must be adhered to prior to and upon installation.

© 2013 Rinnai America Corporation

100000355
10/2013